


# YOUR 406 AT A GLANCE


	<b>Pages</b>
① Seats	111 - 122
② Steering wheel controls	124 - 126
③ Instrument dials	127 - 134
④ Heating, air conditioning	54 - 59
⑤ Mirrors	142 - 143

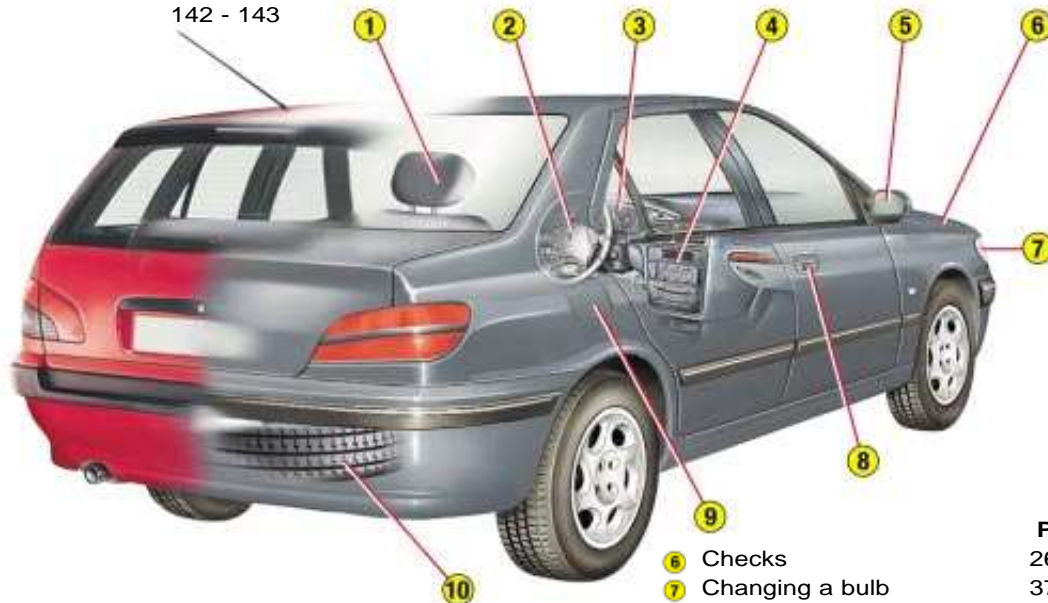

	<b>Pages</b>
⑥ Checks	26 - 33
⑦ Changing a bulb	37 - 40
⑧ Access	103 - 110
⑨ Fuel filler flap	110
⑩ Changing a wheel	34 - 36

Each model may only be fitted with some of the equipment shown, according to its specification and the technical requirements in the country of first registration of the vehicle.

# YOUR 406 AT A GLANCE

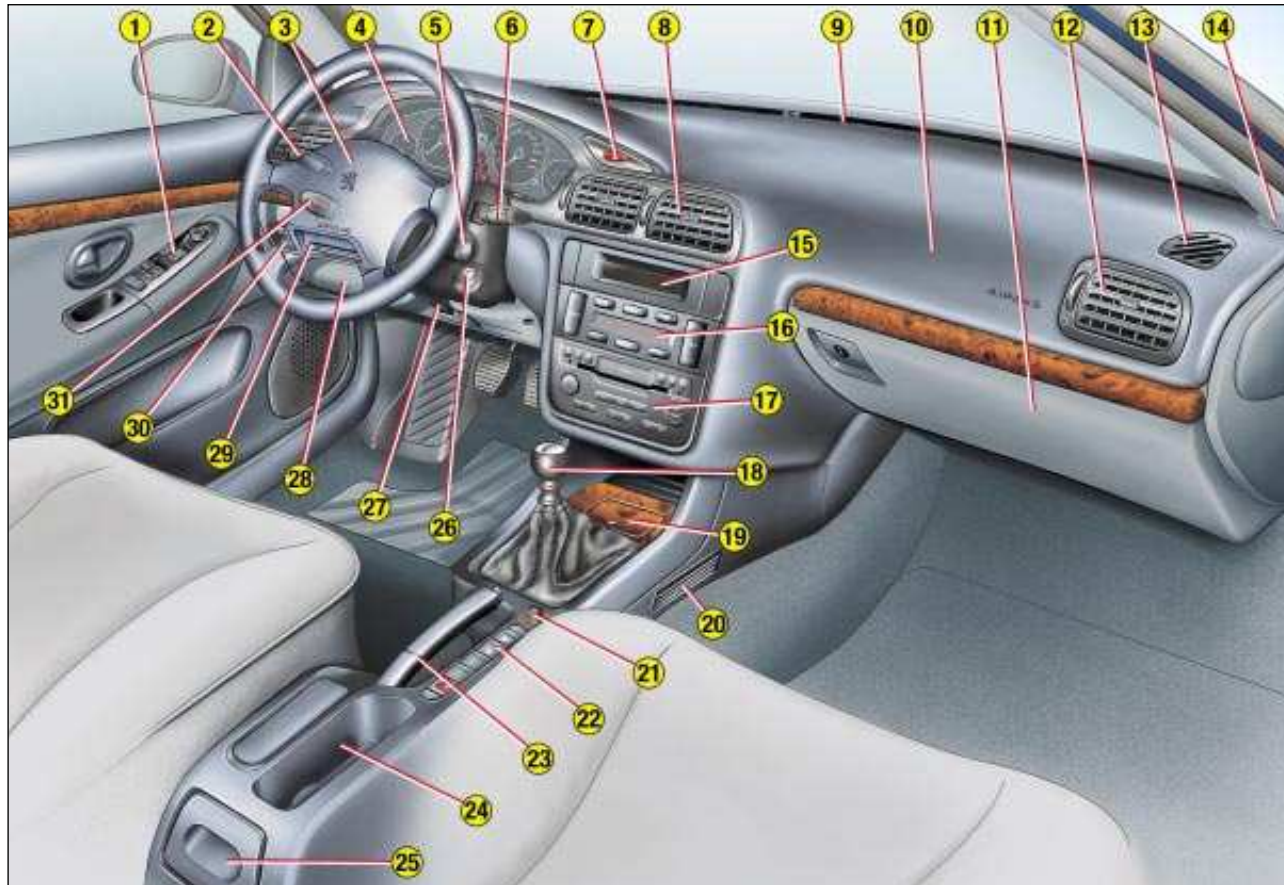

# YOUR 406 AT A GLANCE

- 1** - Electric mirror controls.  
Window controls.  
Rear window locking control.
- 2** - Lights and direction indicators stalk.  
Arming/disarming of automatic switching on of lights.
- 3** - Driver's air bag.  
Horn.
- 4** - Instrument dials.
- 5** - Radio remote control stalk.
- 6** - Windscreen wash-wipe stalk.  
Trip computer stalk.
- 7** - Hazard warning lights switch.
- 8** - Central adjustable heating/ventilation vents and air flow regulation.
- 9** - Windscreen demisting vents.
- 10** - Passenger air bag.
- 11** - Glove box.
- 12** - Side adjustable heating/ventilation vent and air flow regulation.
- 13** - Window demisting vent.
- 14** - Speaker (tweeter) location.
- 15** - Multifunction display.
- 16** - Heating/ventilation controls.
- 17** - Radio.
- 18** - Gear lever.
- 19** - Front ashtray.
- 20** - Rear footwell heating vent.
- 21** - Lighter.
- 22** - Heated seat switches.  
Coin storage.  
Passenger air bag disarming switch.
- 23** - Handbrake.
- 24** - Cup-holder.
- 25** - Rear ashtray.
- 26** - Steering lock and ignition.
- 27** - Steering wheel adjustment.
- 28** - Fuse box.
- 29** - Electronic Stability Programme (ASR/ESP) switch.
- 30** - Headlamp height adjustment.
- 31** - Cruise control.



Key without remote control



Key with remote control

## THE KEYS

Key without remote control Key with remote control. The keys allow you to switch on the ignition and to independently operate the locks on the front doors, the glove box and the passenger air bag disarming switch.

### Central locking

From the driver's door, the keys allow you to lock and unlock the doors and the boot.

If one of the front doors is open, the central locking does not work.

**The remote control performs the same functions at a distance.**

# YOUR 406 AT A GLANCE

## The remote control

### Locking

Pressing button **A** locks the vehicle.

This is confirmed by the fixed lighting of the direction indicators for approximately two seconds.

### Unlocking

Pressing button **B** unlocks the vehicle.

This is confirmed by the rapid flashing of the direction indicators.

## STARTING

### STOP position:

The ignition is off.

### 1st notch, Accessories position:

The ignition is off but the accessories can be used.

### 2nd notch, Running position:

The ignition is on.

### Starting position:

Operates the starter.



# YOUR 406 AT A GLANCE



## STEERING WHEEL STALKS LIGHTING

### Front and rear lights (ring A)



Lights off.



Side lights.



Dipped/main beam headlamps.



Automatic illumination of headlamps.



## Front/rear fog lamps (ring B)


Rotate the ring forwards to switch on and rearwards to switch off. The on/off status is displayed by the indicator light on the instrument panel.



Front fog lamps (1st rotation of the ring forwards).



Front fog lamps and rear fog lamp (2nd rotation of the ring forwards).

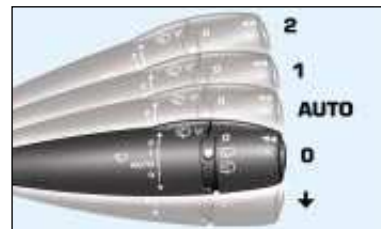

## WINDSCREEN WIPERS

### Front

- 2 Rapid wipe (heavy rain)
- 1 Normal wipe (moderate rain)

**AUTO** Automatic wipe

0 Off

↓ Single wipe

Wash/wipe: pull the stalk towards you.

### Rear

Off



Intermittent wipe



Wash/wipe



### Automatic wipe

In the **AUTO** position, the windscreen wiper operates automatically and adapts its speed to the intensity of the rainfall.



# YOUR 406 AT A GLANCE



## Electric front seats

- A - Forwards/backwards adjustment.
- B - Seat cushion angle adjustment.
- C - Seat height adjustment.
- D - Seat back angle adjustment.
- M - Memorises the settings.

Switch on the ignition and adjust the seat and mirrors.

Press button "M" together with button "1", for the first driving position, or "M" and "2", for the second driving position.

- 1 - Recalls first memorised position.
- 2 - Recalls second memorised position.

111

112



## FRONT AIR BAGS

### Disarming the passenger air bag

- ☞ Insert the ignition key in switch 1 and turn it:
- to the **"ON"** position, the passenger air bag is armed,
  - to the **"OFF"** position, the passenger air bag is disarmed.



### Operating check

This lights for six seconds when the ignition is switched on.

With the ignition on (2nd notch), illumination of this warning light accompanied by an audible signal and the message **"Passenger air bag disarmed"** on the multifunction display indicates that the passenger air bag is disarmed (switch in the **"OFF"** position).

*The warning light remains on throughout the disarming process.*

# YOUR 406 AT A GLANCE

## Passenger air bag precautions

For a vehicle fitted with a disarming switch:



- disarm the air bag if you install a rear-facing child seat.
- arm the air bag for an adult passenger.

For a vehicle not fitted with a disarming switch:



- do not install rear-facing child seats on the front passenger seat.

Never place your feet or any object on the fascia.

## SIDE AIR BAGS

Side air bags are incorporated into the backs of the front seats, on the door side.

They are triggered individually, on whichever side the collision occurs.



### Operating check

This is by means of the warning light on the instrument panel.

It comes on for 6 seconds when the ignition is switched on.

### If the warning light:

- does not come on when the ignition is switched on or,
  - does not go out after six seconds,
- contact a PEUGEOT dealer.



# YOUR 406 AT A GLANCE

## ELECTRIC WINDOWS

- 1 - Driver's electric window.
- 2 - Passenger's electric window.
- 3 - Rear left electric window.
- 4 - Rear right electric window.
- 5 - Disarming the rear window switches.

For the safety of your children, press switch 5 to prevent operation of the rear windows irrespective of their position.

The 1st press activates the switch and the 2nd deactivates it.

**Manual operation:** press or pull the switch gently. The window stops as soon as the switch is released.

**Automatic operation:** press or pull the switch fully. One touch completely opens or closes the window.

**Safety auto-reverse:** when the window on the driver's side rises and meets an obstacle, it stops and lowers again.

## COURTESY LIGHT



Off.



Lights when one of the doors is opened.



Permanently lit, with the key in the accessories position or with the ignition on.





# YOUR 406 AT A GLANCE



## SEAT BELTS

### Front seat belt height adjustment

Pinch control **1** and slide it.

### To lock the seat belts

Pull the strap, then insert the end into the buckle.



## STEERING WHEEL HEIGHT AND DEPTH ADJUSTMENT

☞ Pull handle **A** to unlock the steering wheel.

Adjust the height and depth of the steering wheel then lock it by pushing handle **A** in fully.



## ELECTRIC MIRRORS

Turn knob **6** to the right or left to select the corresponding mirror.

Then move the knob in all four directions to adjust.

### Fold-back electric mirrors

With the ignition switched on, turn knob **6** to position **A**.



# YOUR 406 AT A GLANCE



## FUEL FILLER FLAP

**To open:** firmly pull the handle on the floor to the outside of the driver's seat.

**To close:** from outside the vehicle, push back the flap and check that it is secured correctly.

## Filling with fuel

**Switch off the engine.**

A filler cap hook is provided.

A label on the inside of the flap shows which fuels are permitted and which are not.

**The capacity of the tank is approximately 15.4 gallons (70 litres).**



## Low fuel level warning light

From the time this light comes on, you have enough fuel remaining to drive for approximately **30 miles (50 km)**.



## OPENING THE BONNET

**Inside the vehicle:** Pull the handle.



**Outside the vehicle:** Raise the catch and open the bonnet.



## THE AUTOMATIC AUTOADAPTIVE GEARBOX

### Moving Off

To move off from position **P**:

- ☞ **It is essential to press the brake pedal to exit position P** (shift lock).
- ☞ Select the required function (**R, D, 3, 2** or **1**), then gradually release the pressure on the brake pedal; the vehicle will move off immediately.

You can also move off from position **N**:

- ☞ Release the handbrake, with your foot on the brake.
- ☞ Select the required function (**R, D, 3, 2** or **1**) then gradually release the pressure on the brake pedal; the vehicle will move off immediately.

The four speed **automatic** gearbox provides the comfort of **integral automatic regulation**, enhanced by a **sport** programme (switch **A**) and a **snow** programme (switch **B**).

### Gear selection gate

- ☞ Move the lever in the gate to select one of the functions.

Once it has been selected, the indicator light for that function illuminates on the instrument panel display.

**Park** (parking): for **parking** the vehicle and **starting** the engine, with the handbrake on or off.

**Reverse**: for **reversing**. Select this function with the vehicle stationary and the engine at idle.


**Neutral**: for **starting** the engine and for **parking**, with the handbrake on.

**Drive**: for **driving in auto-adaptive mode** (automatic changing of the four gears).

**3**: for **urban** driving or driving on **winding roads**, (automatic changing of the first three gears only).

**2**: for driving on **mountain roads** or for **towing a trailer** (automatic changing of the first two gears only).

**1**: for tackling **steep gradients** (selection of first gear only).

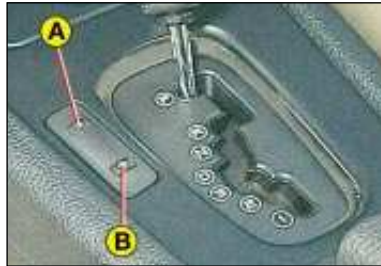

V6 engine



1.8 litre, 2 litre petrol and 2 litre turbo diesel HDI engines

### Special feature of the gearbox (1.8 litre, 2 litre petrol and 2 litre turbo diesel HDI)

Selection of first gear is by pressing switch **C** with the gear lever in position **2**.

To change out of first gear, press switch **C** again or operate the lever.

# YOUR 406 AT A GLANCE

## CRUISE CONTROL

Cruise control enables the vehicle to maintain a steady speed programmed by the driver, regardless of the road characteristics and without the driver having to touch the accelerator or brake pedals.

In order for it to be memorised, the vehicle speed must be greater than 25 mph (40 km/h) or 37 mph (60 km/h), depending on the engine, with at least 4th gear engaged (2nd gear for automatic gearboxes).

### Operation

- ☞ Place switch **1** in the **ON** position.  
A speed can now be memorised.
- ☞ Place switch **1** in the **OFF** position to de-activate the system.

### Memorising a speed

As soon as you reach the chosen speed, press button **2** or **3**. This memorises the speed, which will be maintained automatically.

**Note:** It is possible to accelerate momentarily without disarming the cruise control.

### Cancelling the memorised speed

If you wish to cancel the memorised speed:

- ☞ Press button **4** or the brake or clutch pedal.

### Recalling the memorised speed

After cancelling, press button **4**. Your vehicle will return to the last memorised speed.



### Changing a memorised speed

To memorise a speed higher than the previous one:

- ☞ press button **3**;
- ☞ release it when you have reached the required speed.

To memorise a speed lower than the previous one:

- ☞ press button **2**;
- ☞ release it when you have reached the required speed.

### Cancelling the cruise control

- ☞ place switch **1** in the **OFF** position or switch off the ignition.









*Do not use cruise control on slippery roads or in heavy traffic.*



# YOUR 406 AT A GLANCE


## AIR CONDITIONING

N°	Symbol	Function
1		Temperature adjustment
2		Demisting the rearscreen
3		Air intake control
4		Setting the air distribution
5		Air flow adjustment
6		Air conditioning control



# YOUR 406 AT A GLANCE

## AUTOMATIC AIR CONDITIONING

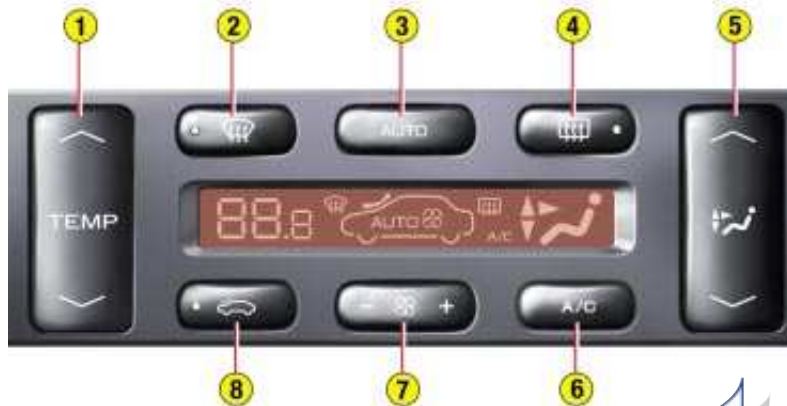

N°	Symbol	Function
1		Temperature adjustment
2		Automatic visibility programme
3		Automatic comfort programme
4		Demisting the rear screen
5		Setting the air distribution
6		Air conditioning control
7		Air flow adjustment
8		Air intake control

## MAINTENANCE OF YOUR 406

---

### PEUGEOT SERVICING

Your vehicle benefits from extended service intervals.

- For petrol engines: every 20,000 miles (30 000 km) or every two years.
- For direct injection diesel engines: every 12,000 miles (20 000 km) or every two years.

**The extension of the service intervals means that the engine oil level must be checked regularly: topping up of the oil between oil changes is normal.**

**It is for this reason that the PEUGEOT network invites you to an intermediate visit between regular services. The date of this service is not shown by the service indicator. It is to be carried out at least every 10,000 miles (15 000 km) for petrol engines and every 6,000 miles (10 000 km) for direct injection diesel engines. A PEUGEOT dealer will carry out a quick check, and will top up the levels if necessary (oil, coolant, screenwash up to 2 litres).**

**If the oil level is too low there is a risk of serious damage to the engine: check the engine oil level at least every 2,000 miles (3 000 km) or 3,000 miles (5 000 km), depending on the conditions of use.**

The extended service intervals have been made possible by technical modifications to the vehicles and lubricants:

**THUS IT IS ESSENTIAL TO ONLY USE ENGINE LUBRICANTS WHICH ARE APPROVED AND RECOMMENDED BY THE MANUFACTURER.**



# MAINTENANCE OF YOUR 406

---

## SPECIAL FEATURES

Some of your vehicle's vital components have specific servicing schedules.

**The air bags and the pretensioning seat belts** must be checked every 10 years by a PEUGEOT dealer.

**The brake fluid** must be replaced every 36/40,000 miles (60 000 km) or every 2 years.

**The passenger compartment filter** must be checked at each visit to the PEUGEOT dealer (intermediate visits and regular services).

**Replacement of the timing belt:** consult your PEUGEOT dealer.

### Arduous conditions of use

If the vehicle is used in certain particularly arduous conditions:

- **Continuous door-to-door use.**
- **Town use (e.g. taxi).**
- **Repeated short journeys, with the engine cold in low temperatures.**

or for long stays in the following conditions:

- Hot countries with temperatures often above 30 °C.
- Cold countries with temperatures often below minus 15 °C.
- Countries with a dusty atmosphere.
- Countries whose lubricants or fuels do not conform to our recommendations,

it is necessary to follow an "Arduous conditions" servicing schedule, which includes special operations and shorter service intervals:

- Every 12,000 miles (20 000 km) or every year for petrol engine vehicles.
- Every 9,000 miles (15 000 km) or every year for Direct Injection Diesel engine vehicles.

# MAINTENANCE OF YOUR 406

---

## SPECIAL FEATURES

Some of your vehicle's vital components have specific servicing schedules.

**The air bags and the pretensioning seat belts** must be checked every 10 years by a PEUGEOT dealer.

**The brake fluid** must be replaced every 36/40,000 miles (60 000 km) or every 2 years.

**The passenger compartment filter** must be checked at each visit to the PEUGEOT dealer (intermediate visits and regular services).

**Replacement of the timing belt:** consult your PEUGEOT dealer.

### Arduous conditions of use

If the vehicle is used in certain particularly arduous conditions:

- **Continuous door-to-door use.**
- **Town use (e.g. taxi).**
- **Repeated short journeys, with the engine cold in low temperatures.**

or for long stays in the following conditions:

- Hot countries with temperatures often above 30 °C.
- Cold countries with temperatures often below minus 15 °C.
- Countries with a dusty atmosphere.
- Countries whose lubricants or fuels do not conform to our recommendations,

it is necessary to follow an "Arduous conditions" servicing schedule, which includes special operations and shorter service intervals:

- Every 12,000 miles (20 000 km) or every year for petrol engine vehicles.
- Every 9,000 miles (15 000 km) or every year for Direct Injection Diesel engine vehicles.

## YOUR 406 IN DETAIL

### SERVICE INDICATOR

This is a visual reminder of when the next service is due. This service is to be carried out according to the manufacturer's servicing schedule.

#### Operation

As soon as the ignition is switched on and for 5 seconds, the spanner symbolising "service operation" is lit. The trip recorder display shows the distance remaining (in round figures) before the next service.

**Example:** 4,800 km remain before the next service is due. When the ignition comes on and for 5 seconds the display indicates:



5 seconds after the ignition is switched on, the total distance recorder resumes normal operation and the display shows the total or trip distances.



The distance remaining before the next service is less than 1,000 km.

**Example:** 900 km remain before the next service is due.

When switching on the ignition and for 5 seconds, the display shows:



5 seconds after the ignition is switched on, the total distance recorder resumes normal operation and the symbol remains lit.

This indicates that a service should be carried out shortly. The display shows the total or trip distances.



The service is overdue.

Each time the ignition is switched on and for 5 seconds, the symbol and the excess distance flash.

**Example:** the service is overdue by 300 km. The service should be carried out very shortly.

When the ignition is switched on and for 5 seconds, the display shows:



5 seconds after the ignition is switched on, the total distance recorder resumes normal operation and the symbol remains lit. The display shows the total or trip distances.



### Resetting the service indicator

Your PEUGEOT dealer carries out this operation after each service.

However, if you carry out the service yourself, the reset procedure is as follows:

- ☞ – Switch off the ignition.
- Press and hold button **1**.
- Switch on the ignition.

The display begins a 10 second countdown.

- Keep button **1** pressed for 10 seconds.

The display shows [= **0**] and the service symbol disappears.

## MAINTENANCE OF YOUR 406

### SERVICE LEVELS

Each vehicle has its own servicing cycle, based upon the engine type.
















The servicing cycle consists of alternating 2 types of service A and C, intermediate visits, and a few additional operations depending on your vehicle; these correspond to key stages in the life of your 406.

Level B service is designed for less recent vehicles.

When the first service is carried out and at each subsequent service, your dealer will advise you of the type and content of the next service due.

### THE MAINTENANCE CYCLE FOR YOUR 406 PETROL

Petrol engine (except 24V V6 injection): service every 20,000 miles (30 000 km) or 2 years

MILES (KM)	20,000 (30 000)	40,000 (60 000)	60,000 (90 000)	80,000 (120 000)	100,000 (150 000)	120,000 (180 000)	140,000 (210 000)	160,000 (240 000)				
1st service at 6,000 miles (10 000 km) or 6 months*. This is necessary in order to benefit from the warranty.												
												

Automatic gearbox oil level every 40,000 miles (60 000 km).

Replacement of **brake fluid** every 2 years or 40,000 miles (60 000 km).

These fixed operations are carried out with **synthetic based oil**; Fuel Economy oil or synthetic oil may also be used.

**Warning:** do not use Fuel Economy oil in the 2.2 litre 16V petrol engine.


















Intermediate top-up visit.

\* Whichever comes first.

# MAINTENANCE OF YOUR 406

## THE MAINTENANCE CYCLE FOR YOUR 406 PETROL

24V V6 petrol injection engine: service every 20,000 miles (30 000 km) or 2 years

MILES (KM)	20,000 (30 000)	40,000 (60 000)	60,000 (90 000)	80,000 (120 000)	100,000 (150 000)	120,000 (180 000)	140,000 (210 000)	160,000 (240 000)	
1st service at 6,000 miles (10 000 km) or 6 months*. This is necessary in order to benefit from the warranty.									
		+ replacement of air filter + replacement of fuel filter							
									
		+ replacement of air filter + replacement of fuel filter							

Automatic gearbox oil level every 40,000 miles (60 000 km).  
 Replacement of **brake fluid** every 2 years or 40,000 miles (60 000 km).  
 These fixed operations are carried out with **synthetic based oil**; Fuel Economy oil or synthetic oil may also be used.





















Intermediate top-up visit.

\* Whichever comes first.

# MAINTENANCE OF YOUR 406

## THE MAINTENANCE CYCLE FOR YOUR 406 TURBO DIESEL HDI

Service every 12,000 miles (20 000 km) or 2 years

MILES (KM)	12,000 (20 000)	24,000 (40 000)	36,000 (60 000)	48,000 (80 000)
1st service at 6,000 miles (10 000 km) or 6 months*. This is necessary in order to benefit from the warranty.				
				
				
				
60,000 (100 000)	72,000 (120 000)	84,000 (140 000)	96,000 (160 000)	108,000 (180 000)
				
				
				
				

+ maintenance of particulate emission filter (except 2 litre HDI 90 bhp)

Automatic gearbox oil every 2 years or 36,000 miles (60 000 km).  
 Replacement of **brake fluid** every 2 years or 36,000 miles (60 000 km).  
 These fixed operations are carried out with **synthetic based** oil; Fuel Economy oil or synthetic oil may also be used.

**Warning:** only use 5W 40 oil for 2.2 litre HDI engines.



**Intermediate top-up visit.**









\* Whichever comes first.



# PETROL/LPG TWIN FUEL VERSION

## THE MAINTENANCE CYCLE FOR YOUR 406 PETROL/LPG

Service every 20,000 miles (30 000 km) or 2 years + LPG checks every 10,000 miles (15 000 km) or every year.

MILES (km)	10,000 (15 000)/90,000 (135 000)	20,000 (30 000)/100,000 (150 000)	30,000 (45 000)/110,000 (165 000)	40,000 (60 000)/120,000 (180,000)
First service at 6,000 miles (10 000 km) or 6 months*. This is necessary in order to benefit from the warranty.	 + LPG checks	 + LPG checks	 + LPG checks	 + LPG checks + Replacement of the solenoid valve filter
	50,000 (75 000)/130,000 (195 000)	60,000 (90 000)/140,000 (210,000)	70,000 (105 000)/150,000 (225 000)	80,000 (120 000)/160 (240 000)
	 + LPG checks	 + LPG checks	 + LPG checks	 + LPG checks + Replacement of the solenoid valve filter

Replacement of the **timing belt**: consult a PEUGEOT dealer.

Replacement of the **solenoid valve filter** every 40,000 miles (60 000 km) or 2 years.

Replacement of the **brake fluid** every 2 years or every 40,000 miles (60 000 km).

These fixed operations are carried out with **synthetic based oil**. **Fuel Economy Oil** or **synthetic oil** may also be used.



**Intermediate top-up visit incorporated in the fixed services.**

\* Whichever comes first.

# MAINTENANCE OF YOUR 406

## A AND C SERVICES AND THE INTERMEDIATE VISIT

Operation	Description of Operation	First Service	Level		
			A	C	Intermediate
DRAIN and REFILL	- Engine oil.		●	●	
	- Bleed fuel filter (Diesel only).	●	●	●	
REPLACE	- Oil filter.		●	●	
	- Fuel filter (Petrol only).			●	
	- Fuel filter element (Diesel only).			●	
	- Air filter element.			●	
	- Spark plugs (Petrol only).		HPI	●	
LEVELS	- Engine oil (check + top-up).	●			●
	- Gearbox level (check + top-up).	●		●	
	- Battery level (check + top-up).if cap is removabl.		●	●	
	- Front/rear screen wash level (check + top-up).	●	●	●	●
	- Coolant level (check + top-up).	●	●	●	●
	- Brake fluid level (check + top-up).	●	●	●	
	- Power steering fluid level (check + top-up, according to specification).	●	●	●	
CHECK	- Operation of lights and indicators.	●	●	●	
	- Condition of glass, headlamp & light lenses and mirrors.		●	●	
	- Horn.		●	●	
	- Windscreen washer jets.		●	●	
	- Condition of wiper blades.		●	●	
	- Condition and tension of the ancillary drive belts.		●	●	
	- Handbrake.		●	●	
	- Condition of hydraulic circuits (hoses and covers).		●	●	
	- Condition of rubber boots and gaiters.	●	●	●	
	- Brake pads.		●	●	○
	- Play in hubs, link rods, ball joints, flexible mountings.		●	●	
	- Shock absorbers.		●	●	
	- Rear drum brake lining wear.		●	●	
	- Condition and pressure of tyres (including spare wheel).	●	●	●	
	- Emission control check (Petrol only).	●	●	●	
	- Smoke opacity (Diesel only).	●	●	●	
	- Passenger compartment filter (according to specification).		●	●	○
- Contrôle visuel de l'ensemble du véhicule par un technicien du réseau de la marque.	●			●	
SERVICE*	- Visual check of the whole vehicle.			●	
ROAD TEST			●	●	


● All driving conditions.

○ Arduous conditions.

\* According to destination.



## TRADE NAMES OF RECOMMENDED LUBRICANTS IN EUROPE(1)

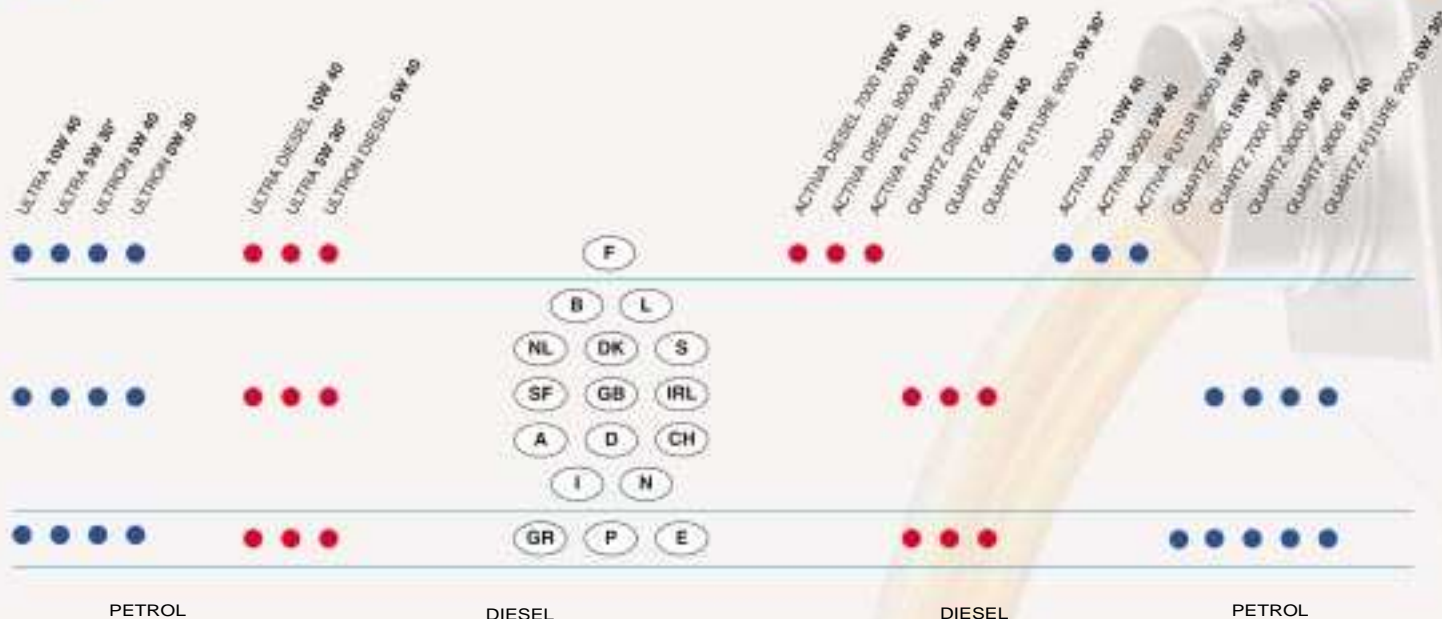

(1) Minimum quality standard: Petrol engines ACEA A3 and API SH/SJ; Diesel engines ACEA B3 and API CF/CD -  
**ACEA** = Association des Constructeurs Européens Automobiles (Association of European Automobile Manufacturers) -  
**API** = American Petroleum Institute

If oil is used which does not conform to the ACEA A3-B3 standards, this requires the "Arduous Conditions" servicing schedule to be followed, which involves shorter intervals between services.

Use only 5W 40 synthetic oil for the HDI Turbo Diesel engines with particulate emissions filter.

Fuel economy oil cannot be used for the 2.2 litre 16V petrol engine and the Turbo Diesel HDI engine with particle filter.

# MAINTENANCE OF YOUR 406

## Recommendations for recommended lubricants

The oils which appear in the table opposite are suitable for most purposes.


The diagram opposite states the optimum range of viscosity depending on the temperatures at which the oils are to be used.



It is also possible to use synthetic oils of 'superior quality'.

In the absence of semi-synthetic or synthetic oils, oils of API SH/SJ quality (for petrol engines), or CD/CF quality (for diesel engines) may be used by following the 'Arduous Conditions' servicing schedule, which specifies shorter service intervals.

Do not hesitate to ask for advice from a PEUGEOT dealer to maintain driving pleasure and to minimise the maintenance cost of your vehicle.

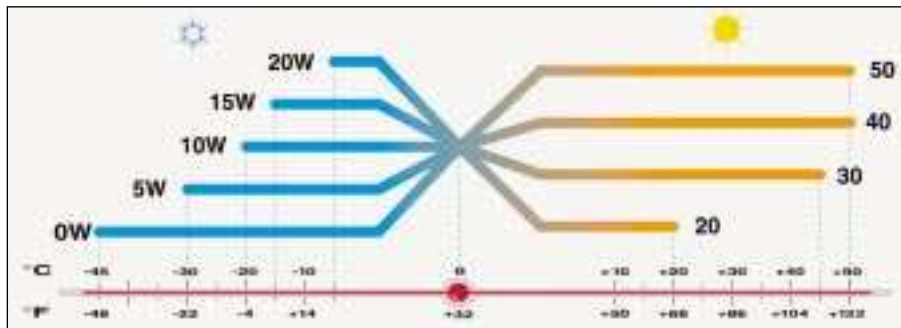For countries outside Europe, please contact a local PEUGEOT dealer.




		
Manual Gearbox	<b>ONLY</b> ESSO GEAR OIL BV 75W80 PR 9736.41	<b>ONLY</b> TOTAL TRANSMISSION BV 75W80
Automatic Gearbox	<b>ONLY</b> ATF 4HP20-AL4 PR 9736.22	
Power steering	ESSO ATF D PR 9730.94	TOTAL FLUIDE AT42

### Other recommended products

Power steering	FLUIDE DA PR 9730. A1*
Brake circuit	PEUGEOT DOT4
Cooling circuit	PROCOR TM108/GLYSANTIN G33 or REVKOGEL 2000 <b>ONLY</b> Protection to minus 35 degrees Celsius

\* Only for extremely cold countries.

## YOUR 406 IN DETAIL

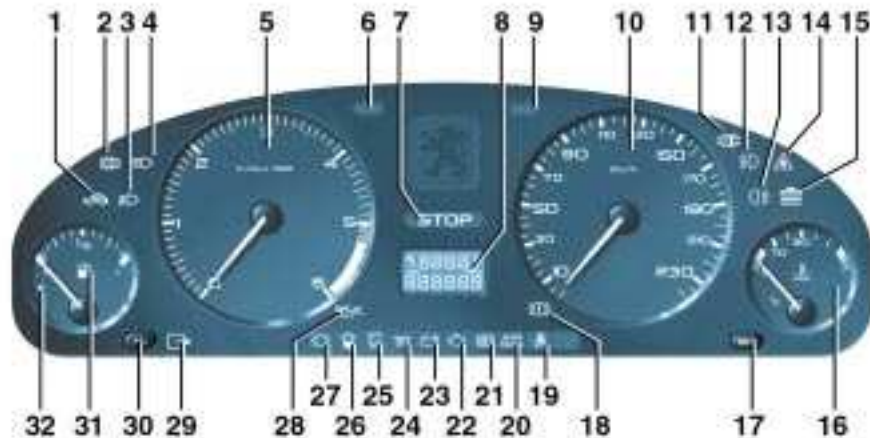

### INSTRUMENT PANEL DIALS: PETROL/DIESEL

- |  |   |   |
|--|---|---|
| <ul style="list-style-type: none"> <li>1 - Fuel filler cap warning light.</li> <li>2 - Door open warning light.</li> <li>3 - Dipped beam headlamps indicator light.</li> <li>4 - Main beam headlamps indicator light.</li> <li>5 - Rev counter.</li> <li>6 - Left-hand direction indicator.</li> <li>7 - Central (STOP) warning light.</li> <li>8 - Service indicator, oil level and total distance recorder.</li> </ul> | <ul style="list-style-type: none"> <li>9 - Right-hand direction indicator.</li> <li>10 - Speedometer.</li> <li>11 - Clogging of the particulate emission filter warning light (Diesel).</li> <li>12 - Front fog lamps indicator light.</li> <li>13 - Rear fog lamp indicator light.</li> <li>14 - Dynamic stability control (ASR/ESP) indicator light (petrol versions only).</li> <li>15 - Low coolant level warning light.</li> </ul> | <ul style="list-style-type: none"> <li>16 - Coolant temperature indicator.</li> <li>17 - Trip recorder zero reset.</li> <li>18 - Hand-brake and low brake fluid level warning light.</li> <li>19 - Seat belt not fastened warning light.</li> <li>20 - Air bags warning light.</li> <li>21 - ABS system warning light.</li> <li>22 - Engine diagnostics warning light*.</li> <li>23 - Battery charge warning light.</li> <li>24 - Diesel engine preheating indicator light.</li> <li>25 - Passenger air bag disarming warning light.</li> <li>26 - Water in diesel filter warning light.</li> <li>27 - Front brake pad wear warning light.</li> <li>28 - Engine oil pressure warning light.</li> <li>29 - Electronic immobiliser warning light.</li> <li>30 - Lighting rheostat.</li> <li>31 - Fuel gauge.</li> <li>32 - Low fuel level warning light.</li> </ul> |
|--|---|---|

\* According to engine.

## YOUR 406 IN DETAIL



### INSTRUMENT PANEL DIALS: PETROL/DIESEL

1 - Fuel filler cap warning light.

2 - Door open warning light.

3 - Dipped beam headlamps indicator light.

4 - Main beam headlamps indicator light.

5 - Rev. counter.

6 - Left-hand direction indicator.

7 - Central (STOP) warning light.

8 - Low fuel level warning light.

9 - Fuel gauge.

10 - Service indicator, oil level indicator and total distance recorder.

11 - Right-hand direction indicator.

12 - Speedometer.

13 - Clogging of the particulate emission filter warning light (Diesel).

14 - Front fog lamps indicator light.

15 - Rear fog lamp indicator light.

16 - Dynamic stability control (ASR/ESP) warning light (petrol versions only).

17 - Low coolant level warning light.

18 - Coolant temperature indicator.

19 - Trip recorder zero reset button.

20 - Handbrake and low brake fluid level warning light.

21 - Seat belt not fastened warning light.

22 - Air bags warning light.

23 - ABS system warning light.

24 - Engine diagnostics warning light\*.

25 - Battery charge warning light.

26 - Diesel engine preheating indicator light.

27 - Passenger air bag disarming warning light.

28 - Water in diesel filter warning light.

29 - Front brake pad wear warning light.

30 - Engine oil pressure warning light.

31 - Electronic immobiliser warning light.

32 - Lighting rheostat.

33 - Engine oil temperature indicator.

\* According to engine.

## YOUR 406 IN DETAIL



### INSTRUMENT PANEL DIALS: AUTOMATIC GEARBOX

- |   |   |  |
|---|---|--|
| <p>1 - Fuel filler cap warning light.</p> <p>2 - Door open warning light.</p> <p>3 - Dipped beam headlamps indicator light.</p> <p>4 - Main beam headlamps indicator light.</p> <p>5 - Rev. counter.</p> <p>6 - Left-hand direction indicator.</p> <p>7 - Central (STOP) warning light.</p> <p>8 - Low fuel level warning light.</p> <p>9 - Fuel gauge.</p> | <p>10 - Service indicator, oil level and total distance recorder.</p> <p>11 - Right-hand direction indicator.</p> <p>12 - Speedometer.</p> <p>13 - Clogging of the particulate emission filter warning light (Diesel).</p> <p>14 - Front fog lamp indicator light.</p> <p>15 - Rear fog lamp indicator light.</p> <p>16 - Dynamic stability control (ASR/ESP) indicator light (petrol versions only).</p> | <p>17 - Low coolant level warning light.</p> <p>18 - Coolant temperature indicator.</p> <p>19 - Trip recorder zero reset.</p> <p>20 - Handbrake and low brake fluid level warning light.</p> <p>21 - Seat belt not fastened warning light.</p> <p>22 - Air bags warning light.</p> <p>23 - ABS system warning light.</p> <p>24 - Engine diagnostics warning light*.</p> <p>25 - Battery charge warning light.</p> <p>26 - Diesel engine pre-heating indicator light.</p> <p>27 - Passenger air bag disarming warning light.</p> <p>28 - Water in diesel filter warning light.</p> <p>29 - Front brake pad wear warning light.</p> <p>30 - Engine oil pressure warning light.</p> <p>31 - Operating programmes.</p> <p>32 - Gear lever position indicator.</p> <p>33 - Electronic immobiliser warning light.</p> <p>34 - Lighting rheostat.</p> <p>35 - Engine oil temperature.</p> |
|---|---|--|

\* According to engine.



## YOUR 406 IN DETAIL

### WARNING LIGHTS AND INDICATORS

A permanently lit warning light, or flashing with the engine running, is an indication of a malfunction in the relevant unit. Some warning lights may be linked to buzzers and a message on the multifunction display. Do not ignore this warning: contact a PEUGEOT dealer as quickly as possible.

If the Central (STOP) warning light comes on when you are driving, stop your vehicle immediately where it is safe to do so.



#### Central (STOP) warning light

Linked to the "engine oil pressure", "the low brake fluid level", "the coolant temperature gauge" and "electronic brake force distribution system fault" warning lights.

It comes on each time the ignition is switched on.

**Stop immediately** if it flashes with the engine running.

Contact a PEUGEOT dealer.



#### Engine oil pressure warning light

Linked to the central (STOP) warning light.

**Stop immediately** if it comes on with the engine running.

It indicates either:

- insufficient oil pressure,
- lack of oil in the lubrication circuit. Top up the oil level.

Contact a PEUGEOT dealer as soon as possible.



#### Low coolant level warning light

**Stop immediately.**

Allow the engine to cool before topping up.

The cooling system is pressurised.

In the event of a breakdown and to prevent the risk of scalding, turn the cap to the first notch to allow the pressure to drop.

Once the pressure has dropped, remove the cap and top up the level.

Contact a PEUGEOT dealer.



#### Fuel filler cap warning light

This comes on if the fuel cap is not correctly screwed on or is missing.

## YOUR 406 IN DETAIL



### ESP Electronic Stability Programme operation indicator light

This flashes when the system is operating.

It is lit continuously if disarmed or if there is a fault.



### Clogging of the particulate emission filter warning light (diesel engine)

Display of this warning light is accompanied by an audible signal.

The flashing of this light while the engine is running is caused either by the particulate emission filter being overloaded or by the engine running too long at idle (white smoke from the exhaust). There is a risk of the filter clogging if the same conditions of operation are maintained.

As soon as possible, drive for at least three minutes at a speed exceeding 37 m.p.h. (60 km/h), if driving conditions allow this.

If the light comes on, contact a PEUGEOT dealer as soon as possible.



### Handbrake, low brake fluid level and electronic brake force distribution warning light

This comes on each time the ignition is switched on.

It indicates either:

- that the handbrake is on or has not been released correctly, and when coupled with the central (STOP) warning light:
- an excessive drop in the brake fluid level (if the light remains on even with the handbrake released),
- lit at the same time as the ABS warning light, it indicates a malfunction of the electronic brake force distribution system.

#### Stop immediately.

Contact a PEUGEOT dealer.



### Anti-lock braking system (ABS) warning light

This comes on for 3 seconds each time the ignition is switched on.

If it comes on at over 8 m.p.h. (12 km/h), it indicates a malfunction of the ABS.

However, the vehicle retains conventional servo-assisted braking.

Contact a PEUGEOT dealer.



### Front brake pad wear warning light

For your safety, have the pads replaced as soon as this light comes on.

## YOUR 406 IN DETAIL



### Battery charge warning light

This comes on each time the ignition is switched on.

If it comes on with the engine running it can indicate:

- faulty operation of the charging circuit,
- loose battery or starter terminals,
- a cut or slack alternator belt,
- an alternator fault.

Contact a PEUGEOT dealer.



### Engine diagnostics warning light\*

This comes on each time the ignition is switched on.

If it is lit continuously with the engine running, this indicates a fault in the emission control system.

If it flashes with the engine running, this indicates a malfunction in the injection or ignition system. There is a risk of damage to the catalytic converter (petrol engine only).

Contact a PEUGEOT dealer as soon as possible.



### Diesel pre-heating indicator light

If the engine is warm enough, the light will not come on and you can start the engine without waiting.

If the light comes on, wait until it goes out before trying the starter.



### Water in diesel filter warning light (according to destination)

Contact a PEUGEOT dealer as soon as possible.

**There is a risk of damage to the injection system.**



### Passenger air bag disarming warning light

Illumination of this warning light is accompanied by an audible signal and a message on the multi-function display.

If the passenger air bag is disarmed, the indicator light comes on when the ignition is switched on and remains on.

In all cases, if the warning light flashes, contact a PEUGEOT dealer.



### Air bag warning light

The warning light comes on for 6 seconds when the ignition is switched on.

Illumination of this warning light, with the engine running, is accompanied by an audible signal and a message on the multifunction display indicating the cause of the front or side air bag fault.

Contact a PEUGEOT dealer.

\* According to engine.

## YOUR 406 IN DETAIL



### Seat belt not fastened warning light

With the engine running, the indicator light comes on when the driver's seat belt is not fastened.



### Door open warning light

When the engine is running, the warning light indicates that a door has not been closed properly or that the boot is open.



### Electronic immobiliser warning light

This indicates a malfunction of the electronic immobiliser. Contact a PEUGEOT dealer.



### Low fuel level warning light

When this warning light comes on, you have enough fuel to drive at least 30 miles (50 km). The tank capacity is approximately 70 litres (15.4 gallons).



### Coolant temperature indicator

When the needle is in zone **A**, the temperature is correct.

When the needle is in zone **B**, the temperature is too high. The central (STOP) warning light flashes.

**You must stop immediately.**

Contact a PEUGEOT dealer.

## YOUR 406 IN DETAIL



### Seat belt not fastened warning light

With the engine running, the indicator light comes on when the driver's seat belt is not fastened.



### Door open warning light

When the engine is running, the warning light indicates that a door has not been closed properly or that the boot is open.



### Electronic immobiliser warning light

This indicates a malfunction of the electronic immobiliser. Contact a PEUGEOT dealer.



### Low fuel level warning light

When this warning light comes on, you have enough fuel to drive at least 30 miles (50 km). The tank capacity is approximately 70 litres (15.4 gallons).



### Coolant temperature indicator


When the needle is in zone **A**, the temperature is correct.

When the needle is in zone **B**, the temperature is too high. The central (STOP) warning light flashes.

**You must stop immediately.**

Contact a PEUGEOT dealer.

## PETROL/LPG TWIN FUEL VERSION

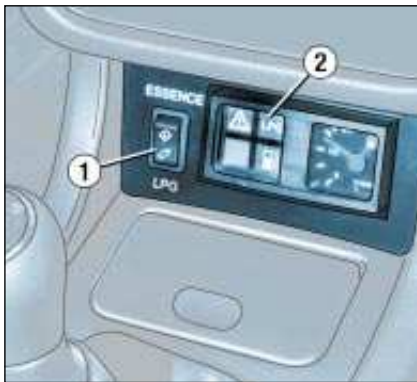


### Operation

The twin fuel system allows petrol or liquid petroleum gas (LPG) to be used indifferently.

Press switch **1** in the centre of the centre console.

Different statuses of indicator light **2**:

- flashing; request for operation using LPG,
- fixed; operating using LPG,
- off; operating using petrol.

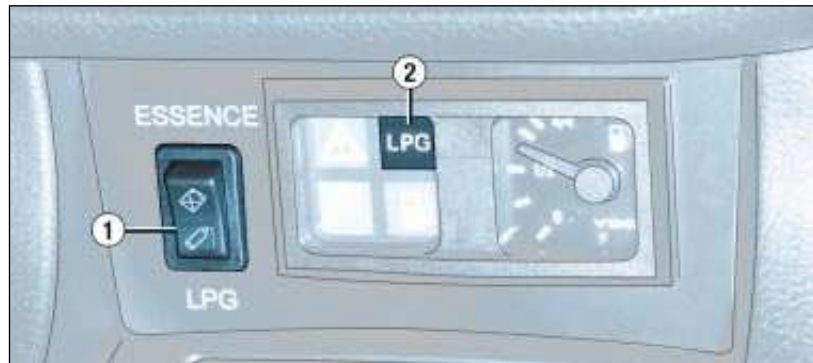

### Starting

Irrespective of the position of switch **1**, the engine starts using petrol.

The switch to operation using LPG will take place if switch **1** is in the **LPG** position. The **LPG** indicator light flashes until the engine reaches an adequate temperature.

The switch from one fuel to the other is displayed by the switching on/switching off of indicator light **2**.

When the minimum LPG level is reached, while driving, this is indicated by flashing of switch **2**; the system then switches to operation using petrol automatically.



*If switch **2** flashes rapidly, move switch **1** to the petrol position, then return to LPG mode.*

*If switch **2** still flashes rapidly, consult a PEUGEOT dealer.*

**It is advisable to drive in petrol mode from time to time to keep the petrol injection system in good condition.**

## YOUR 406 IN DETAIL



### Lighting rheostat

With the lights on, press the button to vary the intensity of the lighting of the instruments and controls. When the lighting reaches the minimum (or maximum) setting, release the button then press it again to increase (or reduce) the brightness.

As soon as the lighting is of the required brightness, release the button.



### Trip recorder zero reset

With the ignition on, press the button.

### Instrument panel display

After switching on the ignition, three functions are shown in succession:

- engine oil level indicator,
- service indicator,
- total distance recorder.

 
### Engine oil level

When the ignition is switched on, the engine oil level indicator is displayed for approximately five seconds, then the service indicator is displayed for five seconds.



#### Maximum

Use the dipstick to confirm the level on the indicator; a surplus of oil can cause damage to the engine. Contact a PEUGEOT dealer as soon as possible.



#### Minimum

Check the level with the dipstick and top it up. The indication is only correct if the vehicle has been on stable, level ground, with the engine stopped, for 10 minutes.




#### No oil

It is essential to top up the oil to the correct level, otherwise there is a risk engine will be damaged.



## YOUR 406 IN DETAIL

### Display B

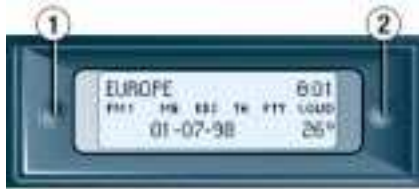

This enables the following information to be displayed:

- the time,
- the date,
- the outside temperature (the °C symbol flashes when there is a risk of ice),
- the radio displays,
- the status of the doors. The display shows you whether a door, the boot or the bonnet is open and if the fuel filler cap is missing.
- the warning messages (e.g. "battery low") or information messages (e.g. "top up fuel tank"), displayed temporarily, can be cleared by pressing button **1** or **2**
- the trip computer.

#### Setting the parameters

Press button **1** for two seconds to access the settings. The information flashes to show it is ready to be modified.

Then, individual presses on button **1** allow you to scroll through the various data in the following sequence:

- language in which the information is displayed,
- unit of distance (kms or miles),
- unit of temperature (Celsius or Fahrenheit),
- time format (12 then 24 hour mode)
- hour,
- minutes,
- year,
- month,
- day.

Pressing button **2** allows you to change the information selected. Maintain the pressure for rapid scrolling.

After ten seconds without action, the display returns to the main screen and the modified data are recorded.

## YOUR 406 IN DETAIL

### Display C



This enables the following information to be displayed:

- the time,
- the date,
- the outside temperature (the °C symbol flashes when there is a risk of ice),
- the radio displays,
- the status of the doors. The display shows you whether a door, the boot or the bonnet is open,
- the warning messages are displayed temporarily (e.g. "top up fuel tank") and can be cleared using the remote control,
- the trip computer (see following page),
- the satellite navigation system (see corresponding section),
- the name of the road along which the vehicle is travelling (permanent locating).

### Setting the parameters

The remote control allows you to access the settings. Accessing the different menus is described in the section on the Satellite Navigation System.

### Permanent locating

This function makes it possible to display the name of the road along which the vehicle is travelling when guidance is not activated.



Press the **"MODE"** button on the remote control to display the name of the road along which you are travelling.

To **"ZOOM"** in order to display the information more clearly, press the right arrow on the remote control.

**WARNING:** the CD ROM containing the map data must be in the drive.

## YOUR 406 IN DETAIL

### AUDIO RB2

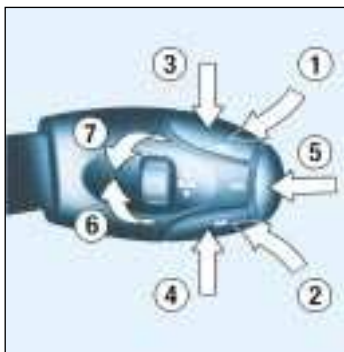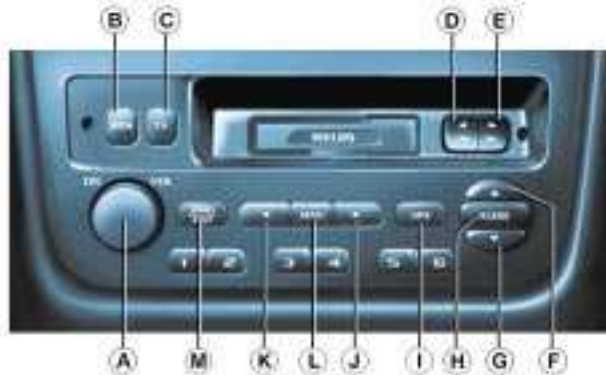

Movement	Function
1 – Press (behind)	Increase volume
2 – Press (behind)	Decrease volume
1+2 – Simultaneous press	Cutting off the sound (mute); restoring the sound by pressing any button
3 – Press	Automatic search of higher frequencies (radio) Selection of next track (CD and cassette)
4 – Press	Automatic search of lower frequencies (radio) Selection of previous track (CD and cassette)
5 – Press the end	Source selection (radio, cassette, CD changer)
6 – Rotation (clockwise)	Selection of higher frequency station stored in memory (radio) Selection of next CD - Reversal of direction of play (cassette)
7 – Rotation (anti-clockwise)	Selection of lower frequency station stored in memory (radio) Selection of previous CD - Reversal of direction of play (cassette)

## YOUR 406 IN DETAIL

Button		Function
<b>A</b>	<b>ON VOL</b>	<b>Radio on/off.</b> Adjustment of volume.
<b>B</b>	<b>RDS</b>	RDS function on/off Press for more than 2 seconds: regional following mode on/off.
<b>C</b>	<b>TA</b>	Traffic information priority on/off.
<b>D</b>		Press fully: cassette rewind.
<b>E</b>		Press fully: cassette fast forward.
<b>D + E</b>	◀ ▶ ◀◀ ▶▶	Press half-way: reversal of direction of play of the cassette. Press fully: ejection of the cassette.
<b>F</b>	▲	Increasing the bass/treble setting.
<b>G</b>	▼	Decreasing the bass/treble setting.
<b>H</b>	<b>AUDIO</b>	Adjustment of bass, treble, loudness and sound distribution.
<b>I</b>	<b>SRC</b>	Source selection: radio, cassette or CD changer. Press for more than 2 seconds: CD shuffle.
<b>J</b>	▶	Automatic search of higher frequency. Selection of next CD track.
<b>K</b>	◀	Automatic search of lower frequency. Selection of previous CD track.
<b>L</b>	<b>MAN</b>	Manual/automatic operation of buttons <b>I</b> and <b>J</b> in radio mode.
<b>M</b>	<b>BND</b> <b>AST</b>	Selection of FM1, FM2, FMast and AM wavebands. Press for more than 2 seconds: storing of a station in the memory (autostore).
<b>1 à 6</b>	<b>12 34 56</b>	Selection of station stored in the memory. Press for more than 2 seconds: storing of a station in the memory. Selection of a CD.

## YOUR 406 IN DETAIL

---

### GENERAL FUNCTIONS

#### On/off



With the ignition key in the ACCESSORIES or IGNITION position, press button **A** to switch the set on or off.  
**The set can operate for 30 minutes without the vehicle ignition being switched on.**

#### Anti-theft system

The set is coded in such a way that it can operate only on your vehicle. It would not function if fitted to another vehicle.

**The anti-theft system is automatic and requires no action on your part.**

### VOLUME SETTING

#### Adjusting the volume



Turn button **A** to increase or reduce the volume.

### AUDIO SETTINGS



Press the "**AUDIO**" button several times to access the bass (**BASS**), treble (**TREB**), loudness (**LOUD**), fader (**FAD**) and balance (**BAL**).

Exit from audio mode is automatic after a few seconds without pressing any button, or by pressing the "**AUDIO**" button after adjusting the balance.

**Note:** bass and treble settings are specific to each source. It is possible to set them differently for radio, cassette or CD changer.

## YOUR 406 IN DETAIL

---

### Adjusting the bass



When "**BASS**" is displayed, press button **F** or **G** to vary the setting.

- "**BASS –9**" for a minimum bass setting,
- "**BASS 0**" for a normal setting,
- "**BASS +9**" for a maximum bass setting.

### Adjusting the treble

When "**TREB**" is displayed, press button **F** or **G** to vary the setting.

- "**TREB –9**" for a minimum treble setting,
- "**TREB 0**" for a normal setting,
- "**TREB +9**" for a maximum treble setting.

### Adjusting the loudness

This function automatically emphasises bass and treble tones when the volume is low.

Press button **F** or **G** to switch the function on or off.

### Setting the front/rear sound distribution (Fader)

When "**FAD**" is displayed, press button **F** or **G**.

Button **F** increases the volume at the front.

Button **G** increases the volume at the rear.

### Setting the right/left sound distribution (Balance)

When "**BAL**" is displayed, press button **F** or **G**.

Button **F** increases the volume on the right-hand side.

Button **G** increases the volume on the left-hand side.

## YOUR 406 IN DETAIL

### RADIO

#### Notes on radio reception

Car radio receivers are subject to phenomena which do not affect domestic radio sets. Both MW/LW and FM reception are subject to various forms of interference. This is no reflection on the quality of the equipment, but is due to the nature of the signals and the way in which they are transmitted.

On MW/LW, interference may be noticed when passing under high voltage power lines or bridges, or in tunnels.

On FM, interference may be the result of increasing distance from the transmitter, deflection of the signals by obstacles (mountains, hills, buildings etc), or of being in an area which is not covered by a transmitter.

#### Selecting radio mode



Press the "SRC" button until the radio is selected.

#### Selecting a waveband



Briefly press the "BAND/AST" button to select the FM1, FM2, FMast and AM wavebands.

#### Automatic station search



Briefly press button **J** or **K** to search for the station immediately above or below. By continuing to press the button in the direction selected, you will obtain continuous scrolling of the frequency.

The scrolling stops at the first station found as soon as the button is released.

If the **TA** traffic programme is selected, only stations broadcasting this type of programme are selected.

Searching for a station occurs first in "**LO**" sensitivity (selection of the most powerful transmitters) during scanning of the waveband, then in "**DX**" sensitivity (selection of the weakest and most distant transmitters).

## YOUR 406 IN DETAIL

---

### Manual station search



Press the **"MAN"** button.

Briefly press button **J** or **K** to increase or decrease the frequency displayed.

By continuing to press the button in the direction selected, you will obtain continuous scrolling of the frequency.

The scrolling stops at the first station found as soon as the button is released.

Pressing the **"MAN"** button again returns you to automatic station search.

### Manual storing of stations in the memory



Select the station required.

Press one of the buttons **"1"** to **"6"** for more than two seconds.

The sound stops then becomes audible again, confirming that the station has been stored in the memory.

### Automatic storing of FM stations in the memory (autostore)



Press button **"BND/AST"** for more than two seconds, to automatically store the 6 stations with the strongest signal in FM. These stations are stored in the FMast waveband.

– If it is not possible to find 6 stations, the remaining memories are empty.

### Recalling stations stored in the memory

For each waveband, briefly press buttons **"1"** to **"6"** to recall the corresponding station.



## YOUR 406 IN DETAIL

---

### RDS

#### Using the RDS (Radio Data System) function on FM



 
Radio Data System allows you to continue listening to the same station, whatever frequency it is using for the region you are going through.

Briefly press the "RDS" button to switch the function on or off.

#### RDS station following

The display indicates the name of the station selected. The radio is continually searching for the station which has the best reception and which is transmitting the same programme.

#### Traffic information programme



Press the "TA" button to switch the function on or off.

Any traffic information flash will be given priority, whatever source you are listening to (radio, cassette or CD changer).

If you wish to interrupt a message, press the "TA" button; this switches the function off.

**Note: the volume of traffic information announcements is independent of the volume of normal radio listening. You can adjust it using the volume button. The setting will be stored and will be used when the next messages are broadcast.**

#### Regional following mode

When they are part of a network, certain stations broadcast regional programmes in the various areas they serve. With regional following mode, you can keep listening to the same programme.

Press the "RDS" button for more than two seconds to switch the function on or off.

# YOUR 406 IN DETAIL

---

## CASSETTE

### Selecting cassette mode



When a cassette is inserted, the cassette player will start automatically.

If a cassette is already inserted, press the "**SRC**" button until cassette mode is selected.

### Ejecting the cassette

Fully press buttons **D** and **E** to eject the cassette from the player.

### Direction of play



The player will play sides 1 and 2 of the cassette alternately, by automatically reversing the direction of play at the end of a side.

To manually reverse the direction of play, press buttons **D** and **E** half-way.

### Fast forward/rewind

Fully press button **D** or **E** to fast forward or rewind the cassette. At the end of the fast forward/rewind, the set plays the current side.

### Recommendations regarding the use of cassettes

- Use good quality cassettes.
- Do not use cassettes which play for more than 90 minutes.
- Never expose the cassettes to heat or direct sunlight.
- Re-tension the tape if necessary before inserting the cassette in the player.
- Regularly clean the playing heads with a humid type cleaning cassette.

## YOUR 406 IN DETAIL

---

### CD CHANGER

#### Selecting CD changer mode



Press the "**SRC**" button until the CD changer is selected.

#### Selecting a disc



Press buttons "**1**" to "**6**" to select the corresponding disc.

#### Selecting a track



Press button **J** to select the next track.

Press button **K** to return to the start of the current track or to select the previous track.

#### Accelerated play

Press the "**MAN**" button.

Press and hold button **J** or **K** for forwards or backwards accelerated play.

Accelerated play stops as soon as the button is released.

Buttons **J** and **K** resume the "track selection" function when the "**MAN**" button is pressed again.



#### Shuffle



When the CD changer is selected, keep the "**SRC**" button pressed for two seconds. The tracks will be played in random sequence. Pressing the "**SRC**" button again for two seconds returns you to normal play.

## YOUR 406 IN DETAIL

### AUDIO RM2

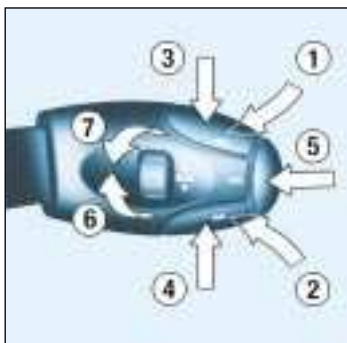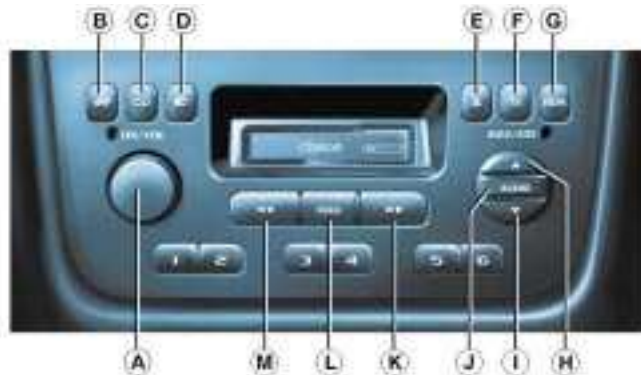

Stalk movement	Function
1 – Press (behind)	Increase volume.
2 – Press (behind)	Decrease volume.
1 + 2 – Simultaneous press	Cutting off of the sound (mute); restoring of the sound by pressing any button.
3 – Press	Automatic search of upper frequencies (radio) - Selection of the following track (CD).
4 – Press	Automatic search of lower frequencies (radio) - Selection of the previous track (CD).
5 – Press the end	Change of source (radio/cassette/CD changer).
6 – Rotation (clockwise)	Selection of next memorised station (radio) - Selection of following CD.
7 – Rotation (anti-clockwise)	Selection of previous memorised station (radio) - Selection of previous CD.

## YOUR 406 IN DETAIL

Button		Function
<b>A</b>	<b>ON/VOL</b>	<b>Radio On/Off.</b> Volume adjustment.
<b>B</b>		Radio selection. Selection of FM1, FM2, FMast and AM wavebands. Press for more than 2 seconds: automatic storing of stations in the memory (autostore).
<b>C</b>		Cassette selection. Reversal of the direction of play of the cassette. Press for more than 2 seconds: noise reduction.
<b>D</b>		CD changer selection. Press for more than 2 seconds: shuffle.
<b>E</b>	<b>▲</b>	Ejection of the cassette.
<b>F</b>	<b>TA</b>	Traffic information priority on/off. Press for more than 2 seconds: PTY function on/off.
<b>G</b>	<b>RDS</b>	RDS function on/off. Press for more than 2 seconds: regional following mode on/off.
<b>H</b>	<b>▲</b>	Increase bass/treble setting.
<b>I</b>	<b>▼</b>	Decrease bass/treble setting.
<b>J</b>	<b>AUDIO</b>	Adjustment of bass, treble, loudness, sound distribution and automatic volume correction.
<b>K</b>	<b>▶▶</b>	Automatic search of higher frequency. Selection of following track - cassette and CD.
<b>L</b>	<b>MAN</b>	Manual/automatic operation of buttons <b>K</b> and <b>M</b> in radio mode.
<b>M</b>	<b>◀◀</b>	Automatic search of lower frequency. Selection of previous track - cassette and CD.
<b>1 to 6</b>	<b>1 2 3 4 5 6</b>	Selection of station stored in the memory. Press for more than 2 seconds: storing of a station in the memory. Selection of a disc in the CD changer.

## YOUR 406 IN DETAIL

---

### GENERAL FUNCTIONS

#### On/off



With the ignition key in the ACCESSORIES or IGNITION position, press button **A** to switch the set on or off.  
**The set can operate for 30 minutes without the vehicle ignition being switched on.**

#### Anti-theft system

The audio system is coded in such a way that it can operate only on your vehicle. It would not function if fitted to another vehicle.

**The anti-theft system is automatic and requires no action on your part.**

### ADJUSTING THE VOLUME



Turn button **A** to increase or decrease the volume.

### AUDIO SETTINGS



Press the "**AUDIO**" button several times in succession to access the bass (**BASS**), treble (**TREB**), loudness (**LOUD**), fader (**FAD**), balance (**BAL**) and the automatic volume correction.

Exit from audio mode is automatic after a few seconds without pressing any button, or by pressing the "**AUDIO**" button after configuration of the automatic volume correction.

**Note:** bass and treble settings are specific to each source. It is possible to set them differently for radio, cassette and CD changer.

## YOUR 406 IN DETAIL

---

### Adjusting the bass



When "**BASS**" is displayed, press button **H** or **I** to vary the setting.

- "**BASS –9**" for a minimum bass setting,
- "**BASS 0**" for a normal setting,
- "**BASS +9**" for a maximum bass setting.

### Adjusting the treble

When "**TREB**" is displayed, press button **H** or **I** to vary the setting.

- "**TREB –9**" for a minimum treble setting,
- "**TREB 0**" for a normal setting,
- "**TREB +9**" for a maximum treble setting.

### Adjusting the loudness

This function automatically emphasises bass and treble tones when the volume is low.

Press button **H** or **I** to switch the function on or off.

### Adjusting the front/rear sound distribution (Fader)

When "**FAD**" is displayed, press button **H** or **I**.

Button **H** increases the volume in the front.

Button **I** increases the volume in the rear.

### Adjusting the right/left sound distribution (Balance)

When "**BAL**" is displayed, press button **H** or **I**.

Button **H** increases the volume on the right-hand side.

Button **I** increases the volume on the left-hand side.

### Automatic Volume Correction (CAV)

This function enables the volume to be adjusted automatically according to the level of noise produced by the speed of the vehicle.

Press buttons **H** or **I** to switch the function on or off.

## YOUR 406 IN DETAIL

### RADIO

#### Notes on radio reception

Your radio is subject to phenomena which do not affect domestic radio sets. Both MW/LW and FM reception are subject to various forms of interference. This is no reflection on the quality of the equipment, but is due to the nature of the signals and the way in which they are transmitted.

On MW/LW, interference may be noticed when passing under high voltage power lines or bridges, or in tunnels.

On FM, interference may be the result of increasing distance from the transmitter, deflection of the signals by obstacles (mountains, hills, buildings etc), or of being in an area which is not covered by a transmitter.

#### Selecting radio mode



Press button **B**.

#### Selecting a waveband



Briefly press button **B** to select the FM1, FM2, FMast and AM wavebands.

#### Automatic station search



Briefly press button **K** or **M** to search for the station immediately above or below. By continuing to press the button in the direction selected, you will obtain continuous scrolling of the frequency.

The scrolling stops at the first station found as soon as the button is released.

If the TA traffic programme is selected, only stations broadcasting this type of programme are selected.

Searching for a station occurs first in "**LO**" sensitivity (selection of the most powerful transmitters) during scanning of the waveband, then in "**DX**" sensitivity (selection of the weakest and most distant transmitters).

To make a direct search in "**DX**" sensitivity, press button **K** or **M** twice.



## YOUR 406 IN DETAIL

### Manual station search



Press the "**MAN**" button.

Briefly press button **K** or **M** to increase or decrease the frequency displayed.

By continuing to press the button in the direction selected, you will obtain continuous scrolling of the frequency.

The scrolling stops at the first station found as soon as the button is released.

Pressing the "**MAN**" button again returns you to automatic station search.

### Manual storage of stations in the memory



Select the station required.

Press one of the buttons **1** to **6** for more than two seconds.

The sound stops then becomes audible again, confirming that the station has been stored in the memory.

### Automatic storage of FM stations in the memory (autostore)



Press button **B** for more than two seconds, to automatically store the 6 stations with the strongest signal in FM. These stations are stored in the FMast waveband.

– If it is not possible to find 6 stations, the remaining memories are empty.

### Recalling stations stored in the memory

For each waveband, briefly press buttons **1** to **6** to recall the corresponding stored station.

The list of the 6 stations stored in the memory on the waveband is displayed each time one of the buttons **1** to **6** is pressed.

## YOUR 406 IN DETAIL

---

### RDS

#### Using the RDS (Radio Data System) function on FM



Radio Data System allows you to continue listening to the same station, whatever frequency it is using for the region you are going through.

Briefly press the "**RDS**" button to switch the function on or off.

The display will show:

- "**RDS**" if the function is selected.
- "**(RDS)**" if the function is selected but not available.

#### RDS station following

The display indicates the name of the station selected. The radio is continually searching for the station which has the best reception and which is transmitting the same programme.

#### Traffic information programme



Press the "**TA**" button to switch the function on or off.

The display will show:

- "**TA**" if the function is selected,
- "**(TA)**" if the function is selected but not available.

Any traffic information flash will be given priority, whatever source is in use (radio, cassette or CD changer).

If you wish to interrupt a message, press the "**TA**" button; this switches the function off.

**Note: the volume of traffic information announcements is independent of the volume of normal radio listening. You can adjust it using the volume button. The setting will be stored and will be used when the next messages are broadcast.**

## YOUR 406 IN DETAIL

### Regional following mode



When they are part of a network, certain stations broadcast regional programmes in the various areas they serve. With regional following mode you can keep listening to the same programme.

Press the "**RDS**" button for more than two seconds to switch the function on or off.

### PTY function



This allows you to listen to stations broadcasting a specific type of programme (news, culture, sport, rock etc.).

With FM selected, press the "**TA**" button for two seconds to switch this function on or off.



To search for a **PTY** programme:

- select the **PTY** function,
- briefly press button **K** or **M** to scroll down the list of the various types of programmes offered.

– when the programme of your choice is displayed, keep one of the buttons **K** or **M** pressed for two seconds to carry out an automatic search (after an automatic search the **PTY** function is switched off).



In **PTY** mode, the different types of programmes can be stored in the memory. To do this, press the preselection buttons **1** to **6** for more than two seconds. To recall the type of programme stored in the memory, briefly press the corresponding button.

### EON system

This connects stations which are part of the same network. It allows the broadcast of traffic information, by a station that is part of the same network as the station to which you are listening.

This service is available when you have selected the TA traffic information programme or the **PTY** function.

## YOUR 406 IN DETAIL

### CASSETTE

#### Selecting cassette mode



When a cassette is inserted, the cassette player will start automatically.  
If a cassette is already inserted, press button **C**.

#### Ejecting the cassette



Press button **E** to eject the cassette from the player.

#### Direction of play

The player will play sides 1 and 2 of the cassette alternately, by automatically reversing the direction of play at the end of a side. To manually reverse the direction of play, press button **C**.

#### Selecting a track on a cassette (blank search)



Press button **K** to select the following track.

Press button **M** to return to the start of the current track or to select the previous track.

#### Fast forward/rewind

Press and hold button **K** or **M** to fast forward or rewind the cassette. At the end of the fast forward/rewind, the set plays the current side.

#### Noise reduction (Dolby B NR system)

Press button **C** for more than two seconds to switch the function on or off.

Dolby noise reduction manufactured under licence from Dolby Laboratories Licensing Corporation "Dolby" and the double D symbol are trade marks of Dolby Laboratories Licensing Corporation.

#### Recommendations for the use of cassettes

- Use good quality cassettes.
- Avoid using cassettes of a duration of more than 90 minutes.
- Never expose the cassettes to heat or direct sunlight.
- If necessary, tighten the tape before inserting the cassette into the player.
- Clean the play heads regularly using a damp-type cleaning cassette.

# YOUR 406 IN DETAIL

---

## CD CHANGER

### Selecting CD changer mode



Press button **D**.

### Selecting a disc



Press one of the buttons **1** to **6** to select the corresponding disc.

### Selecting a track



Press button **K** to select the following track.

Press button **M** to return to the start of the current track or to select the previous track.

### Accelerated play

Press and hold button **K** or **M** for forwards or backwards accelerated play.

Accelerated play stops as soon as the button is released.



### Shuffle



When the CD changer is selected, keep button **D** pressed for two seconds. The tracks will be played in random sequence. Pressing button **D** again for two seconds returns you to normal play.

## YOUR 406 IN DETAIL

### AUDIO RD3

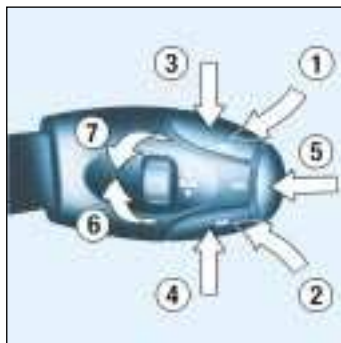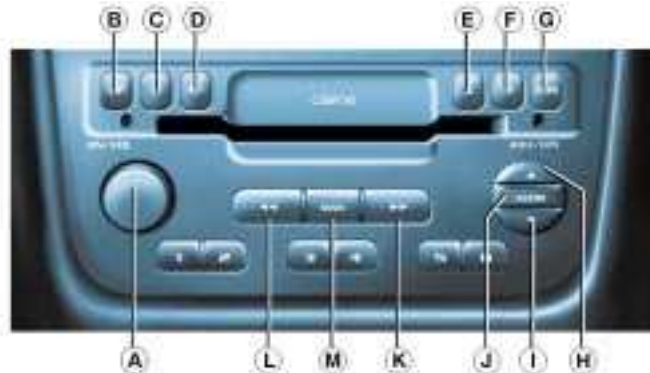

Movement	Function
1 – Press (behind)	Increase volume
2 – Press (behind)	Decrease volume
1 + 2 – Simultaneous press	Cutting off the sound (mute); restoring the sound by pressing any button
3 – Press	Automatic search of higher frequencies (radio) Selection of next track (CD)
4 – Press	Automatic search of lower frequencies (radio) Selection of previous track (CD)
5 – Press the end	Source selection (radio/CD/CD changer)
6 – Rotation (anti-clockwise)	Selection of higher frequency station stored in memory (radio) - Selection of next CD (CD changer)
7 – Rotation (clockwise)	Selection of lower frequency station stored in memory (radio) - Selection of previous CD (CD changer)

## YOUR 406 IN DETAIL

Button		Function
<b>A</b>	<b>ON/VOL</b>	<b>Radio on/off.</b> Adjustment of volume.
<b>B</b>		Radio selection. Selection of FM1, FM2, FMast and AM wavebands. Press for more than 2 seconds: automatic storing of stations in the memory (autostore).
<b>C</b>		Source selection: CD. Press for more than 2 seconds: shuffle.
<b>D</b>		Source selection: CD changer. Press for more than 2 seconds: shuffle.
<b>E</b>	<b>▲</b>	Ejection of the CD.
<b>F</b>	<b>TA</b>	Traffic information priority on/off. Press for more than 2 seconds: PTY function on/off.
<b>G</b>	<b>RDS</b>	RDS function on/off. Press for more than 2 seconds: regional following mode on/off.
<b>H</b>	<b>▲</b>	Increase bass/treble setting.
<b>I</b>	<b>▼</b>	Decrease bass/treble setting.
<b>J</b>	<b>AUDIO</b>	Setting of bass, treble, loudness, sound distribution and automatic volume correction.
<b>K</b>	<b>▶▶</b>	Automatic search of higher frequency. Selection of next CD track.
<b>L</b>	<b>◀◀</b>	Automatic search of lower frequency. Selection of previous CD track.
<b>M</b>	<b>MAN</b>	Manual/automatic operation of buttons <b>K</b> and <b>L</b> .
<b>1 to 6</b>		Selection of station stored in the memory. Press for more than 2 seconds: storing of a station in the memory. Selection of a CD in the CD changer.

## YOUR 406 IN DETAIL

### GENERAL FUNCTIONS

#### On/off



With the ignition key in the ACCESSORIES or IGNITION position, press button **A** to switch the set on or off.

**The set can operate for 30 minutes without the vehicle ignition being switched on.**

### ANTI-THEFT SYSTEM

The audio system is coded in such a way that it can operate only on your vehicle. It would not function if fitted to another vehicle.

**The anti-theft system is automatic and requires no action on your part.**

### VOLUME SETTING

#### Adjusting the volume

Turn button **A** to increase or decrease the volume of the set.



#### Note:

If you have a telephone fitted with a "**mute**" signal output connected to the set, the set will automatically change to "**mute**" when the telephone is used.

### AUDIO SETTINGS



Press the "**AUDIO**" button several times to access the bass (**BASS**), treble (**TREB**), loudness (**LOUD**), fader (**FAD**), balance (**BAL**) and the automatic volume correction (**CAV**).

Exit from audio mode is automatic after a few seconds without pressing any button, or by pressing the "**AUDIO**" button after configuration of the automatic volume correction.

**Note:** the bass and treble settings are specific to each source. It is possible to set them differently for radio, CD, or CD changer.



## YOUR 406 IN DETAIL

### Adjusting the bass



When "**BASS**" is displayed, press button **H** or **L** to vary the setting.

- "**BASS –9**" for a minimum bass setting,
- "**BASS 0**" for a normal setting,
- "**BASS +9**" for a maximum bass setting.

### Adjusting the treble

When "**TREB**" is displayed, press button **H** or **L** to vary the setting.

- "**TREB –9**" for a minimum treble setting,
- "**TREB 0**" for a normal setting,
- "**TREB +9**" for a maximum treble setting.

### Adjusting the loudness

This function automatically emphasises bass and treble tones when the volume is low. Press button **H** or **L** to switch the function on or off.

### Adjusting the front/rear sound distribution (Fader)

When "**FAD**" is displayed, press button **H** or **L** to vary the setting.

- Button **H** increases the volume at the front.
- Button **L** increases the volume at the rear.

### Adjusting the right/left sound distribution (Balance)

When "**BAL**" is displayed, press button **H** or **L** to vary the setting.

- Button **H** increases the volume on the right-hand side.
- Button **L** increases the volume on the left-hand side.

### Automatic volume correction "CAV"

This function enables the volume to be automatically adapted depending on the level of noise produced by the speed of the vehicle. Press buttons **H** or **L** to switch the function on or off.

## YOUR 406 IN DETAIL

### RADIO

#### Notes on radio reception

Car radio receivers are subject to phenomena which do not affect domestic radio sets. Both MW/LW and FM reception are subject to various forms of interference. This is no reflection on the quality of the equipment, but is due to the nature of the signals and the way in which they are transmitted.

On MW/LW, interference may be noticed when passing under high voltage power lines or bridges, or in tunnels.

On FM, interference may be the result of increasing distance from the transmitter, deflection of the signals by obstacles (mountains, hills, buildings etc), or of being in an area which is not covered by a transmitter.

#### Selecting radio mode



Press button **B**.

#### Selecting a waveband



Briefly press button **B** to select the FM1, FM2, FMast and AM wavebands.

#### Automatic station search



Briefly press button **K** or **L** to search for the station immediately above or below. By continuing to press the button in the direction selected, you will obtain continuous scrolling of the frequency.

The scrolling stops at the first station found as soon as the button is released.

If the TA traffic programme is selected, only stations broadcasting this type of programme are selected.

Searching for a station occurs first in "**LO**" sensitivity (selection of the most powerful transmitters) during scanning of the waveband, then in "**DX**" sensitivity (selection of the weakest and most distant transmitters).

To make a direct search in "**DX**" sensitivity, press button **K** or **L** twice.

## YOUR 406 IN DETAIL

### Manual station search



Press the "**MAN**" button.

Briefly press button **K** or **L** to increase or decrease the frequency displayed.

By continuing to press the button in the direction selected, you will obtain continuous scrolling of the frequency.

The scrolling stops at the first station found as soon as the button is released.

Pressing the "**MAN**" button again returns you to automatic station search.

### Manual storing of stations in the memory



Select the station required.

Press one of the buttons **1** to **6** for more than two seconds.

The sound stops then becomes audible again, confirming that the station has been stored in the memory.

### Automatic storing of FM stations in the memory (autostore)



Press button **B** for more than two seconds, to automatically store the 6 stations with the strongest signal in FM. These stations are stored in the FM3 waveband.

– If it is not possible to find 6 stations, the remaining memories are empty.

### Recalling stations stored in the memory

For each waveband, briefly press buttons **1** to **6** to recall the corresponding station.

## YOUR 406 IN DETAIL

### RDS

#### Using the RDS (Radio Data System) function on FM



Radio Data System allows you to continue listening to the same station, whatever frequency it is using for the region you are going through.

Briefly press the "RDS" button to switch the function on or off.

The display will show:

- "RDS" if the function is selected.
- "(RDS)" if the function is selected but not available.

#### RDS station following

The display indicates the name of the station selected. The radio is continually searching for the station which has the best reception and which is transmitting the same programme.

#### Traffic information programme



Press the "TA" button to switch the function on or off.

The display will show:

- "TA" if the function is selected,
- "(TA)" if the function is selected but not available.

Any traffic information flash will be given priority, whatever source you are listening to (radio, CD or CD changer).

If you wish to interrupt a message, press the "TA" button; this switches the function off.

**Note: the volume of traffic information announcements is independent of the volume of normal radio listening. You can adjust it using the volume button. The setting will be stored and will be used when the next messages are broadcast.**

#### Regional following mode



When they are part of a network, certain stations broadcast regional programmes in the various areas they serve.

With regional following mode you can keep listening to the same programme.

Press the "RDS" button for more than two seconds to switch the function on or off.

## YOUR 406 IN DETAIL

### PTY function



This allows you to listen to stations broadcasting a specific type of programme (news, culture, sport, rock etc.). With FM selected, press the "TA" button for two seconds to switch this function on or off.



To search for a **PTY** programme:

- select the **PTY** function,
- briefly press button **K** or **L** to scroll down the list of the various types of programmes offered.
- when the programme of your choice is displayed, keep button **K** or **L** pressed for two seconds to carry out an automatic search (after an automatic search the **PTY** function is switched off).



In **PTY** mode the different types of programmes can be stored in the memory. To do this, press the preselection buttons **1** to **6** for more than two seconds. To recall the type of programme stored in the memory, briefly press the corresponding button.

### EON system

This connects stations which are part of the same network. It enables the broadcast of traffic information by a station, which is part of the same network as the station to which you are listening.

This service is available when you have selected the TA traffic information programme or the **PTY** function.

## YOUR 406 IN DETAIL

---

### COMPACT DISC

#### Selecting CD player mode



After inserting a disc, with the printed surface upwards, the player starts automatically.

If a disc is already inserted, press button **C**.

#### Ejecting a disc



Press button **E** to eject the disc from the player.

#### Selecting a track



Press button **K** to select the next track.

Press button **L** to return to the start of the current track or to select the previous track.

#### Accelerated play

Press the "**MAN**" button.

Press and hold button **K** or **L** for forwards or backwards accelerated play.

Accelerated play stops as soon as the button is released.

Buttons **K** or **L** resume the "track selection" function when the "**MAN**" button is pressed again.

#### Shuffle (RDM)



When the CD player is selected, keep button **C** pressed for two seconds. The tracks will be played in random sequence. Pressing button **C** again for two seconds returns you to normal play.



*The use of copied compact discs may cause malfunctions.*

# YOUR 406 IN DETAIL

## CD CHANGER

### Selecting CD changer mode



Press button **D**.

### Selecting a disc



Press buttons **1** to **6** to select the corresponding disc.

### Selecting a track



Press button **K** to select the next track.

Press button **L** to return to the start of the current track or to select the previous track.

### Accelerated play

Press the "**MAN**" button.

Press and hold button **K** or **L** for forwards or backwards accelerated play.

Accelerated play stops as soon as the button is released.

Buttons **K** or **L** resume the "track selection" function when the "**MAN**" button is pressed again.

### Shuffle (RDM)



When the CD changer is selected, keep button **D** pressed for two seconds. The tracks will be played in random sequence. Pressing button **D** again for two seconds returns you to normal play.


## YOUR 406 IN DETAIL

---

### CD CHANGER (RM2 and RD3)



This is located inside the boot on the left hand side. It holds up to 6 discs.

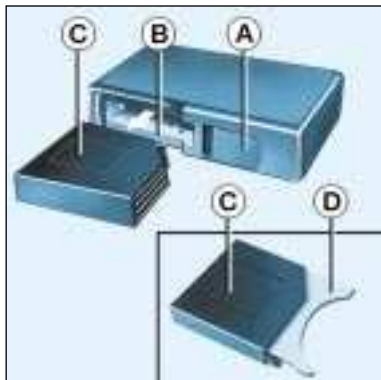

To insert a disc into the changer:

- open sliding panel **A**,
- press button **B** to eject the cartridge **C**,
- open one of the six compartments of the cartridge by pulling tab **D**,
- **insert the disc with the printed face upwards and close the compartment**,
- insert the cartridge into the changer,
- close the sliding panel **A**.



*The use of copied compact discs can cause malfunctions.*



## YOUR 406 IN DETAIL

### 406 Saloon AUDIO



### SYSTEM (RM2 and RD3)

#### Presentation

Your 406 saloon is fitted with a JBL Audio Hi-Fi system, designed specifically for the passenger compartment.

**At the heart of the system, a 240 watt multifunction amplifier (1) (located in the boot) independently controls 10 high acoustic definition speakers.**

**These speakers provide optimal reproduction and distribution of the sound in the vehicle, both in the front and the rear.**


The speakers are situated:

- in the fascia: two **Micro Tweeters (3)** set into two **Mid-Range Speakers (4)** for reproduction of the sound in the front.
- in the front doors: two **Woofers (2)** for reproduction of bass frequencies in the front.
- on the rear parcel shelf: two **Tweeters (5)** for reproduction of treble (high frequencies) in the rear are set into two **elliptical speakers (6)**, which are adjusted to reproduce a very wide range of bass and ultra-bass frequencies throughout the whole of the passenger compartment. **You will appreciate the clarity and depth and notice that the sound fills the whole of the vehicle perfectly.**

#### Adjusting in CD mode

The basic functions remain those of the audio set.

There is no need for any further adjustment. However, in order to take full advantage of your JBL audio system, you are advised to set the AUDIO functions (**BASS, TREB, FAD, BAL**) to position "0" (zero) and the Loudness (**LOUD**) to the "ON" position.

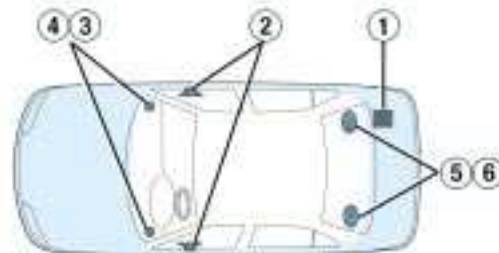

## YOUR 406 IN DETAIL

406 Estate AUDIO



SYSTEM (RM2 and RD3)

### Presentation

Your 406 estate is fitted with a JBL Audio Hi-Fi system, designed specifically for the passenger compartment.

**At the heart of the system, a 180 watt multifunction amplifier (1) (located in the boot) independently controls 10 high acoustic definition speakers.**

**These speakers provide optimal reproduction and distribution of the sound in the vehicle, both in the front and the rear.**


The speakers are situated:

- in the fascia: two **Micro Tweeters (3)** set into two **Mid-Range Speakers (4)** for reproduction of the sound in the front.
- in the front doors: two **Woofers (2)** for reproduction of bass frequencies in the front.
- on the boot pillar: two **Micro Tweeters (5)** for reproduction of treble (high frequencies), set into two **Mid-Range Speakers (6)** giving uniform sound reproduction throughout the whole of the vehicle.

### Adjusting in CD mode

The basic functions remain those of the audio set.

There is no need for any further adjustment. However, in order to take full advantage of your JBL audio system, you are advised to set the AUDIO functions (**BASS, TREB, FAD, BAL**) to position "0" (zero) and the Loudness (**LOUD**) to the "ON" position.

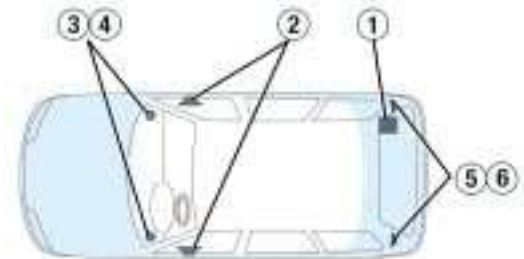

## YOUR 406 IN DETAIL

### THE SATELLITE NAVIGATION SYSTEM

#### Introduction

The satellite navigation system guides you to the destination of your choice by means of vocal and visual instructions.

The heart of the system lies in the use of a map database and GPS (Global Positioning System). This enables your position to be located by means of several satellites.

The satellite navigation system consists of the following components:

- the remote control,
- the display,
- the control unit,
- the last voice message recall control,
- the CD ROM.

Some functions or services described in this guide may vary depending on the CD ROM version or the country.

#### The remote control

There is a storage compartment for the remote control in front of the ashtray.

Pointing the remote control at the screen enables the information contained in the various menus to be selected.



#### Direction arrows:

These enable you to move around the screen and thus select a function.

On the welcome screen only, the Up and Down buttons enable the brightness of the screen to be adjusted.

**menu** : this button allows access to the main menu. It can be used at any time.

**esc** : escape button

"Short press": cancels the current operation and returns to the previous screen.

"Press for more than 2 seconds": returns to the welcome screen.

This button can be used in any menu. It is inactive during guidance.

**mod** : mode button


"Short press": changes between date, navigation, radio and permanent locating.

**val** : Confirmation button

Confirms the function selected.

## YOUR 406 IN DETAIL


### The display

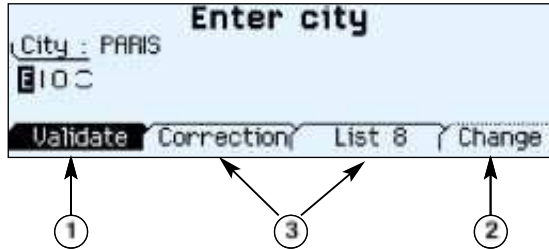

When the menus are used, the functions which appear at the bottom of the screen are presented in various ways:

1. Function selected.
2. Function inaccessible in this situation.
3. Function accessible.

**Note:** The "List" function can hold a maximum of 80 addresses.

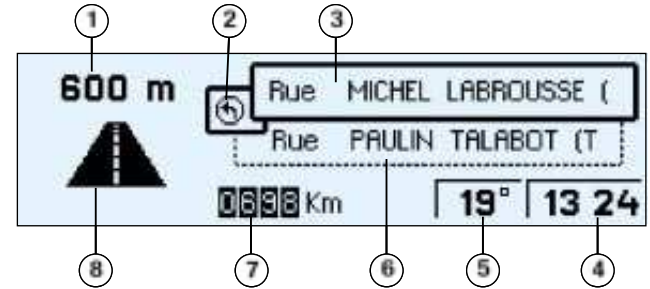


During guidance the screen displays different information depending on the manoeuvres to be carried out:

1. Distance to next manoeuvre.
2. Next manoeuvre to be carried out.
3. Next road to take.
4. Time.
5. Exterior temperature.
6. Current road.
7. Distance to final destination.
8. Manoeuvre to be carried out.

# YOUR 406 IN DETAIL

## The control unit

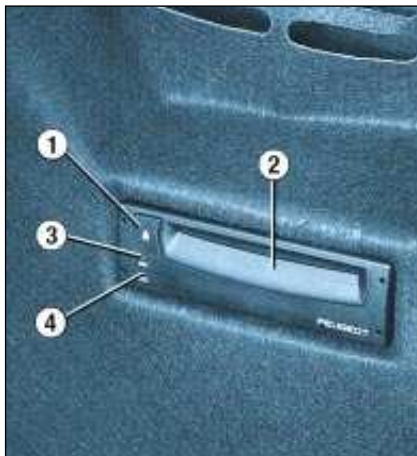

This is located in the boot on the right hand side. In the estate, open the panel to access it.

1. CD ROM eject button.
2. CD ROM compartment.
3. The ON indicator light indicates that the control unit is supplied with power.
4. The CD indicator light indicates that there is a CD ROM in the control unit.

## The last voice message recall control



Pressing the button briefly on the end of the lights stalk repeats the last voice message.

## The CD Rom



This contains all the mapping data.

It must be inserted with the printed face upwards.

Use only CD Roms approved by PEUGEOT.



*The use of copied CDs can cause malfunctions.*



**Jeudi  
25 Fév 1999**

**-28° | 8:26**

The satellite navigation system is active once the globe appears in bold.

## YOUR 406 IN DETAIL

### Main menu




Switch on the ignition.

Press the **"Menu"** button to access the main menu.


Select a function using the direction arrows, then confirm (**"VAL"** button).

### Navigation/Guidance

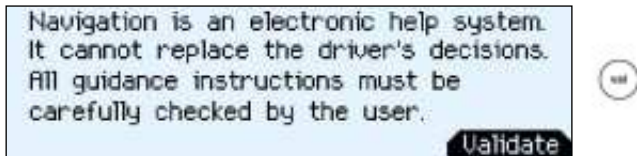

Following selection of the **"Navigation/guidance"** menu, a screen warns you about the use of the navigation system. Follow the regulations in force and do not use the remote control while driving.

Press the **"VAL"** button to access the next screen.

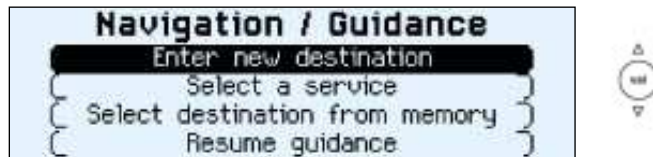

The **"Navigation/guidance"** menu offers the following options:

- entering of the address of a new destination.
- selection of a service (Hotel, station, airport...) available in a town.
- selection of an address stored in one of the two directories.
- access to the **"Navigation options"** menu;
- radio functions are suspended when the system is in guidance mode.

## YOUR 406 IN DETAIL

### Entering a new destination

Enter city

City : TOULOUSE

ABCDEFGHIJKLMN OPQRSTUVWXYZ  
YZI

Validate Correction List 3792 Change

The last town entered is displayed.

To enter the name of another town, select each letter using the direction arrows then confirm ("VAL" button) for each letter.

If an error is made, the "Correct" function enables the last letter entered to be deleted.

As the name is entered, the "List" function indicates the number of towns beginning with the same letters. If the list contains less than 5 names, these are displayed automatically. Select a town then confirm ("VAL" button).

The "Change" function enables the town entered to be completely cleared.

When the complete name of the town is displayed, select the "Validate" function then press the "VAL" button.

**Note:** following confirmation of a letter, only those letters which could make up an existing name appear.

Enter street

Street :

ABCDEFGHIJKLMN OPQRSTUVWXYZ  
YZ12359

Validate Correction List 3066 City ce

Enter the name of the street. Select the "Validate" function then press the "VAL" button.

**Note:** the guidance can be activated from the time the town is entered, without the name of a street or a number. To do this, select the "Town centre" function.

Enter number

Number - 1 From 1 to 38

1 2 3 4 5 6 7 8 9 0

Validate Change

Enter the number in the street. Select the "Validate" function then press the "VAL" button.


**Note:** the guidance can be activated as soon as the town and street are entered, without a number. To do this, select the "Validate" function.

## YOUR 406 IN DETAIL



The complete destination is displayed. Select the "**Validate**" function then press the "**VAL**" button.

**Note:** you can also change the destination or store it in one of the two directories (see the section on storing an address in a directory).

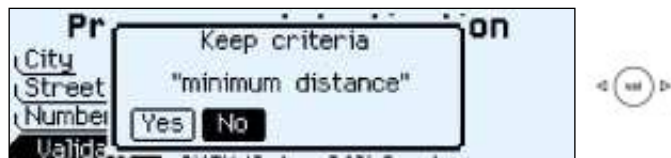


The last guidance criterion used is displayed.

Guidance begins automatically, retaining this criterion if there is no action within 5 seconds or following confirmation of the "**NO**" function.

Follow the instructions.

If you wish to change the guidance criterion, select the "**YES**" function then press the "**VAL**" button.

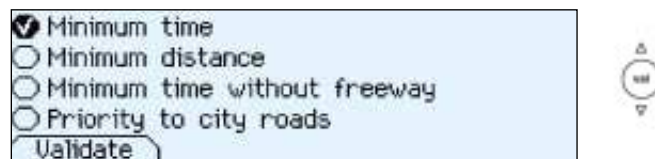

Select a criterion from the list offered then confirm ("**VAL**" button). When the criterion of your choice is selected, select the "**Validate**" function then press the "**VAL**" button. Guidance begins, follow the instructions.



## YOUR 406 IN DETAIL

### Selecting a service



The last address entered is displayed.

There are 3 options for defining the location in which you wish to obtain this service:

- repeat the last address entered by means of the "**Validate**" function.
- enter the name of a new town then enter the street (or use the "**Town centre**" function) by means of the "**Change**" function.
- automatically enter your current location by using the "**current location**" function.



After confirming the address, select a service by scrolling through the list using the direction arrows then press the "**VAL**" button.

A cursor on the left-hand side of the screen indicates your position in the list.



The address of the required service is displayed.

An indication on the right-hand side of the screen (e.g. 1/50) indicates whether there are any other establishments (50 maximum) which offer the same service within a radius of approximately 30 miles (50 km), as the crow flies.


Use the "**Next**" or "**Previous**" functions to consult the list offered.

When the establishment of your choice is displayed, select the "**Validate**" function then press the "**VAL**" button. Select a guidance criterion. Guidance begins, follow the instructions.

## YOUR 406 IN DETAIL

### Storing an address in a directory


When a new address is entered, you can store it by selecting the "Store" function.

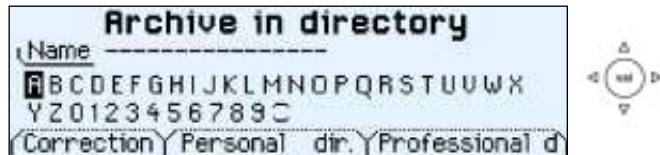

Enter the name for the address. If the name already exists for a different address, you can replace the old address with a new one.

Select the Personal directory or the Professional directory then press the "VAL" button. The address is then stored in the directory of your choice (memory capacity: 100 addresses).

### Selecting a stored destination

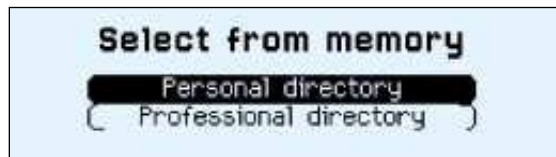

Using the direction arrows, select the directory in which the address you are looking for is stored, then press the "VAL" button.



The stored addresses are displayed.

A cursor on the left-hand side of the screen indicates your position in the list. Select a name by scrolling through the list using the direction arrows, then press the "Val" button. The complete address is displayed. Select the "Validate" function then press the "Val" button. Select a guidance criterion. Guidance begins, follow the instructions.

# YOUR 406 IN DETAIL

## Display configuration




From the general menu, the "**Configure display**" menu gives access to the following parameters:

- Adjustment of the brightness and the video display.
- Adjustment of the date and time.
- Selection of the language of the display and voice information (English, German, Spanish, French, Italian, Dutch).
- Adjustment of the mode and units. This allows selection of the display in km/h or mph, in degrees Celsius or Fahrenheit and selection of the time format (12 or 24 hour mode).



## Navigation options

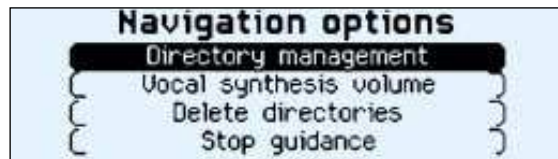

From the navigation/guidance menu, the "**Navigation options**" menu offers the following options:

- Management of the directories. It enables an address stored under a name to be renamed or deleted. To do this, select the directory and the name to be changed.
- Voice synthesis volume adjustment.
- Deletion of all data stored in the two directories.
- Stopping or resuming of guidance. Two messages may be displayed depending on the previous status: "**Resume guidance**" or "**Stop guidance**".

## YOUR 406 IN DETAIL

---

### Guidance tools




Access to the "**Guidance tools**" menu is by pressing the "**Val**" button during guidance.

It enables:

- the current guidance criterion to be changed,
- the programmed destination to be displayed or changed,
- the voice synthesis volume to be adjusted,
- the current guidance to be stopped.

## YOUR 406 IN DETAIL

---

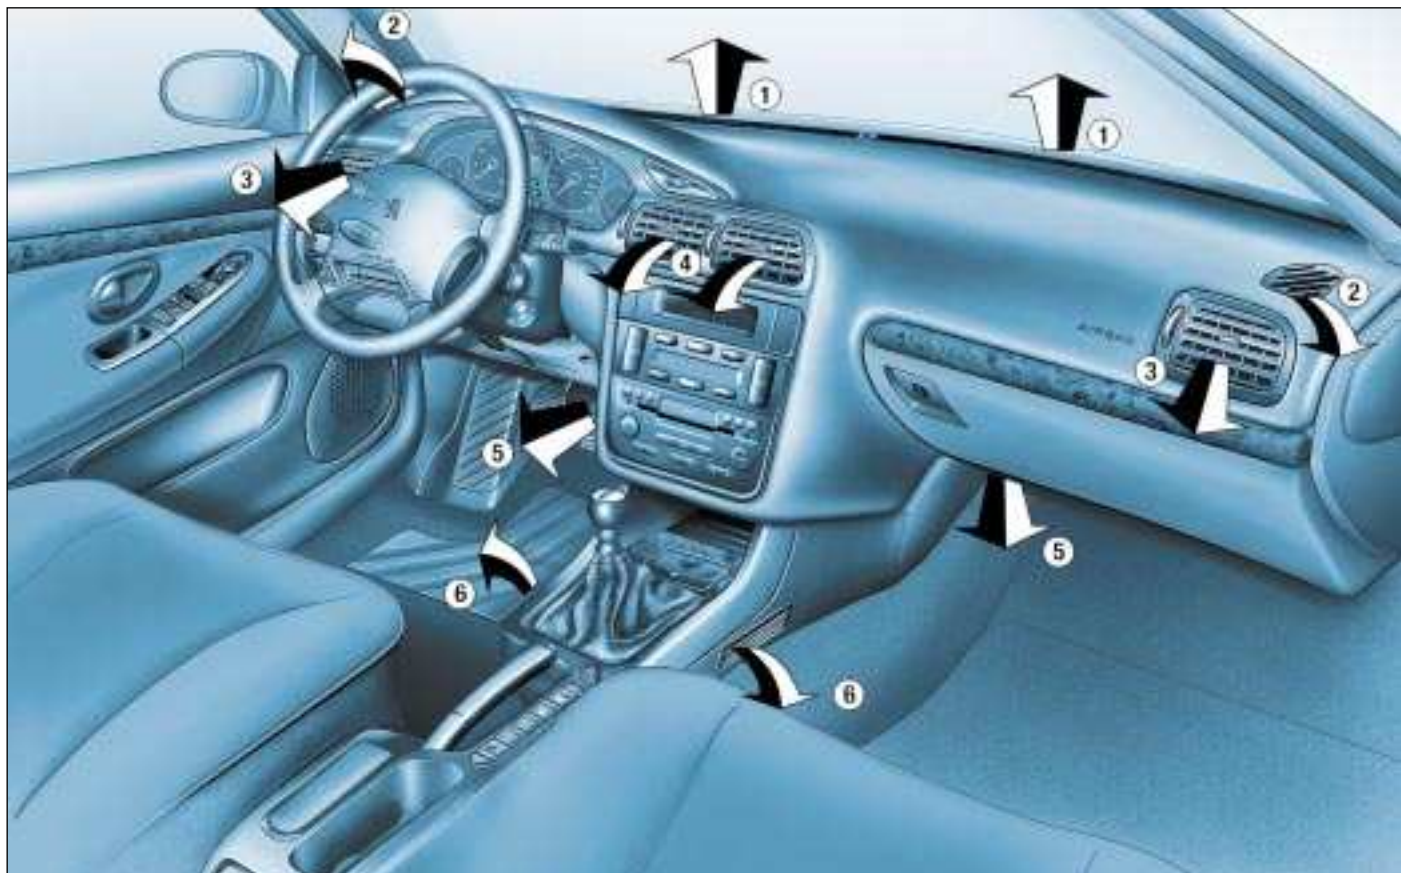

# YOUR 406 IN DETAIL

---

## VENTILATION

- 1 - Windscreen de-icing or demisting vents.
- 2 - Front window de-icing or demisting vents.
- 3 - Side vents.
- 4 - Central vents.
- 5 - Air outlet to the front passengers' feet.
- 6 - Air outlet to the rear passengers' feet.

### Recommendations for use


- ☞ Position the air flow control at a level which allows adequate air circulation inside your vehicle.
- ☞ Select the air distribution which best suits your requirements and the climatic conditions.
- ☞ Select a temperature setting and only alter it gradually for your comfort.

For an even air distribution, make sure that you do not block the air inlet grille at the base of the windscreen, the vents, the air passages under the front seats and the air extractor in the boot.

## YOUR 406 IN DETAIL

---

### AIR CONDITIONING

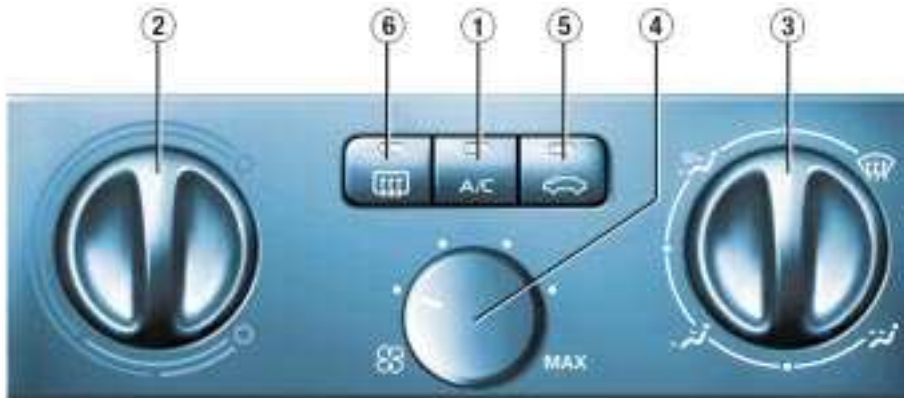

#### 1 - Air conditioning control

The air conditioning is intended to operate in all seasons. In summer it allows the temperature to be reduced and in winter, above 0 °C, it increases the effectiveness of the demisting.

Press the switch. The indicator light comes on when the air conditioning starts.

#### 2 - Temperature adjustment

To be adjusted according to your requirements: from blue (cold when the air conditioning is on) to red (hot).

**Please note that for optimum operation of the air conditioning, the recommended air flow setting is with knob 4 turned to its second position.**

## YOUR 406 IN DETAIL



### 3 - Setting the air distribution

Windscreen and side windows (de-icing/demisting).

To quickly de-ice or demist the windscreen and the side windows:

- set the temperature and air flow controls to maximum,
- close the central vents,
- press the A/C button.



Windscreen and side windows, central and side vents and footwells.



Central and side vents and footwells.

These settings are recommended for cold climates.



Central and side vents.

This setting is recommended for hot climates.



### 4 - Air flow adjustment

Turn the knob to obtain sufficient flow.



### 5 - Air intake control

Recirculation of the interior air (indicator light on).

This position prevents the entry of unpleasant odours or fumes from outside and increases the speed of heating.

Used simultaneously with the air conditioning, recirculation improves the performance of the system when set to hot as well as to cold.

Used in humid conditions, recirculation risks misting up the windows.

As soon as possible, place the control in the outside air position.



### 6 - Demisting the rear screen

With the engine running, pressing the switch demists the rear screen and the mirrors.

It switches off automatically after approximately fifteen minutes.

Press again to resume demisting.

It is possible to stop the demisting operation before it goes off automatically, by pressing the switch again.

### Important precaution

Operate the air conditioning for 5 to 10 minutes, once or twice a month, to keep it in good working order.


If the system does not produce cold air, do not use it and contact your PEUGEOT dealer.

**Note:** The condensation created by the air conditioning causes a normal flow of water under the vehicle when stationary.



## YOUR 406 IN DETAIL

### AUTOMATIC AIR CONDITIONING

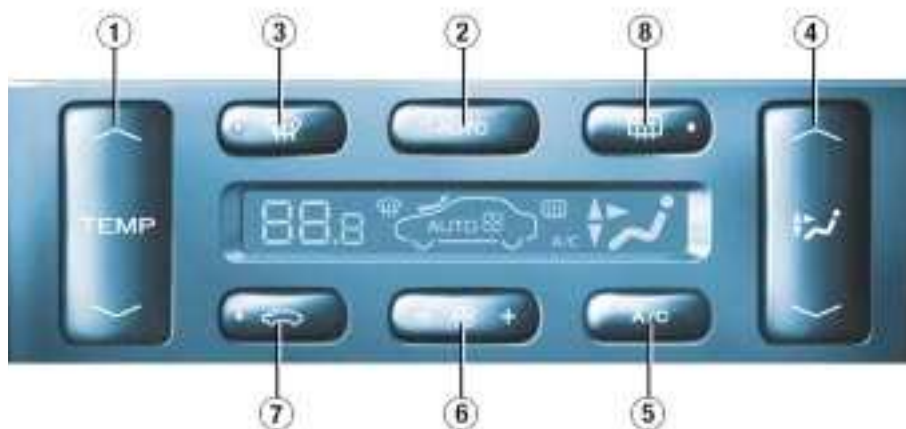

#### Automatic operation



##### 1 - Temperature adjustment

The value requested is displayed (from 15 to 30: comfortable temperature = 22).

Press the up and down arrows to adjust.



##### 2 - Automatic comfort programme

Press the "AUTO" button. The system automatically adjusts the temperature to that selected, by starting the air conditioning if necessary.

It also manages the air flow and intake, to ensure sufficient air circulation inside the vehicle.

Adjustment of the air distribution must be carried out manually when you require it.



##### 3 - Automatic visibility programme

In certain cases, the automatic comfort programme can prove inadequate to de-ice or demist the windows (humidity, many passengers, ice). In such cases, select the automatic visibility programme to rapidly clear the windows.

The system automatically manages the air conditioning, the air flow and the air intake, distributing the air to the windscreen and side windows.

## YOUR 406 IN DETAIL



### 4 - Setting the air distribution

Successive presses on the top or bottom part of this button allow the air to be directed to:

- the windscreen (de-icing or demisting),
- the windscreen and footwells,
- the central and side vents,
- the central and side vents and footwells,
- the footwells.

Press the top or bottom part of the button to select the previous or next setting from the above list.

### Manual operational

You may, if you wish, make a different choice from that offered by the system, by changing one of the settings.

Press the "AUTO" button to return to automatic operation.



### 5 - Air conditioning

Pressing this button stops the air conditioning. Pressing again returns the air conditioning to automatic operation. The symbol "A/C" is displayed.



### 6 - Air flow

The air flow may be increased or reduced by pressing the "+" or "-" button respectively.



### 7 - Air intake

This button is pressed for recirculation of the interior air. Recirculation, shown on the display, prevents the entry of unpleasant odours or fumes into the passenger compartment from outside.

Avoid prolonged operation of the recirculation of interior air. A second press returns the system to automatic intake of air.

Used in humid conditions, recirculation risks misting up the windows.



### 8 - Demisting the rear screen

With the engine running, pressing the switch demists the rear screen and the mirrors.

It switches off automatically after approximately fifteen minutes.

Press again to resume demisting. It is possible to stop the demisting operation before it goes off automatically, by pressing the switch again.

**Note:** The condensation created by air conditioning causes a normal flow of water under the vehicle when stationary.

# YOUR 406 IN DETAIL



## SEATS

### Manual adjustment of the front seats

#### 1 - Forwards-backwards adjustment

Lift the lever and slide the seat forwards or backwards.

#### 2 - Seat cushion angle adjustment

Lift the lever to set the best angle.

#### 3 - Driver's seat height adjustment

Pull the telescopic handle forwards and pivot it up or down.

#### 4 - Seat back angle adjustment

Turn the knob to obtain the best angle.

#### 5 - Head restraint height and tilt adjustment

The setting is correct when the top of the head restraint is level with the top of the head.

To raise the head restraint, pull it upwards.

To lower the head restraint, it is necessary to push simultaneously:

- the button on the left-hand side on top of the seat back,
- the head restraint downwards.

The head restraint has a frame with notches which prevents it from dropping down (safety device in case of impact).

To remove the head restraint, press the tab.

**Warning:** never drive with the head restraints removed. They must be in place and correctly adjusted.

#### 6 - Front armrests

The front armrests can be folded or removed.

To remove them, press the button between the armrest and the side of the seat and pull the armrest.

## YOUR 406 IN DETAIL

---



### Electrical adjustment of the front seats

#### A - Forwards-backwards adjustment

Push the switch forwards or backwards to slide the seat.

#### B - Seat cushion angle adjustment

Tilt the front part of the switch up or down.

#### C - Driver's seat height adjustment

Push the switch up or down.

#### D - Seat back angle adjustment

Tilt the switch forwards or backwards.

## YOUR 406 IN DETAIL



### Memorising the seat and mirror positions

Two driving positions can be memorised.

#### To memorise:

- place the ignition key in the accessories position;
- adjust your seat and mirrors;
- simultaneously press button "M" and button "1" for the first driving position or button "2" for the second driving position.

When the position has been memorised, you will hear two bleeps.

Memorising a new position cancels the previous one.

### Recalling a memorised position


#### • Door open and ignition off

Within ten minutes of switching off the ignition and opening the door, a short press on button **1** or **2** recalls the memorised position of the seat, then of the exterior mirrors.

#### • Door closed or ignition on:

- keeping the button pressed adjusts the seat and the exterior mirrors.

When adjustment is completed a bleep will sound.

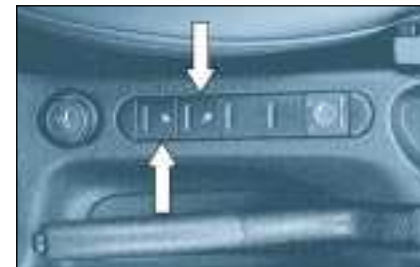

### Heated seat controls

Press the switch.

The temperature is controlled automatically.

Pressing a second time stops operation.

## YOUR 406 IN DETAIL

---



### REAR SEATS

#### Rear seats (saloon)

Before moving the seats, to avoid damage to the seatbelts, carefully place them to the side of the seat back (for side seat belts) and gently lower the seat to avoid blocking the centre belt.

The seat back folds down in two sections.



### To fold down the seat back

The unlocking controls are located in the boot.

Pull the control corresponding to the part of the seat back that you wish to fold down.

When returning the seat back to its original position, for your safety make sure that it is correctly locked.

### Ski flap

Lower the arm rest to access the ski flap. Open the flap from the boot.


## YOUR 406 IN DETAIL



### Rear seats, estate

#### To fold down the rear seat:

- remove the head restraints by pressing the lug.
- tilt the seat cushion against the front seats, using the strap.

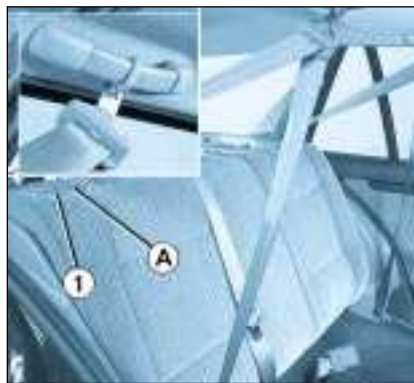

- secure the side seat belt buckles on the coat hooks when manoeuvring the seat back to avoid any risk of the straps being damaged.
- unlock the seat back by pressing button **1**. The red marker **A** appears.
- fold down the seat back gently to avoid blocking the centre belt.

When returning the seat back to the upright position, ensure that it is correctly locked (red marker **A** no longer visible).



When driving with rear passengers with one third of the seat folded down, release the central seat belt buckle from its catch.

### WARNING

**Do not remove the seat back of the estate's one-piece rear seat.**

**This seat is fitted with return springs which can cause injury.**

**Contact a PEUGEOT dealer if you wish to remove the seat back.**

## YOUR 406 IN DETAIL



### Third row seat, 7-seater estate


**Do not use the third row seat when the rear seat is folded down.**

#### Positioning the seat:

- remove the rear parcel shelf.
- fold down panel **A** in the boot by using the handle.
- lift the seat back **B** by the head restraints.



- push the seat back firmly, keeping the seat angled upwards.
- lower the seat and check it has engaged in the notches **C**.

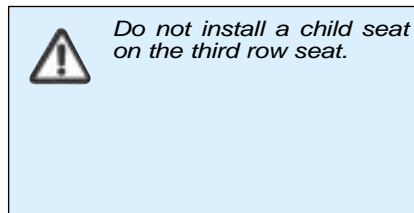

#### Storage:

Place the seat belt buckles in their catches.

Release the seat from the notches **C**.

Lower the seat back by the head restraints, keeping the seat cushion inclined.

Lower the whole seat into the boot housing.

Lock the boot panel **A** by pressing on the edges.



## YOUR 406 IN DETAIL

### GENERAL POINTS RELATING TO CHILD SEATS

Although one of PEUGEOT's main criteria when designing your vehicle, the safety of your children also depends on you.

For maximum safety, please follow these precautions:

- Since 1992, **all children under the age of 10 must travel in approved child seats\* suited to their weight**, on seats fitted with a seat belt.

In order to recognise a child seat which conforms to current legislation, **check that it bears an orange label indicating the weight range for its use and its approval number.**

- **A child weighing less than 9 kg must travel in the rearwards facing position both in the front and in the rear.**
- **The safest seats in your vehicle for the transportation of children are the rear seats.**
- If a child is travelling on a booster seat, check that the lap section of the seat belt passes over the child's thighs correctly. The chest section of the seat belt must be positioned on the child's shoulder without touching the neck. PEUGEOT recommends that you use a booster seat with a back, fitted with a seat belt guide.
- Remember to fasten the seat belt or the child seat harness **keeping the slack in relation to the child's body to a minimum**, even for short journeys.

\* According to current legislation in the country.

\*\* Consult the relevant administration in your country for information regarding the rules for transporting children on the front passenger seat.

### Rules for transporting children on the front passenger seat\*\*:

Children under the age of 10 must not travel in the forwards facing position, unless the rear seats are already occupied by other children or the rear seats cannot be used (absent or folded). In this case, adjust the front passenger seat to the most rearward position and arm the passenger air bag.

The rearwards facing position is permitted from birth to 18 kg. In this position, it is essential to disarm the passenger air bag.

## YOUR 406 IN DETAIL



### "ISOFIX" MOUNTINGS

The one third side of the rear seat of your vehicle is fitted with **ISOFIX mountings**. These are 2 rings located between the seat back and seat cushion of your vehicle.

**The ISOFIX child seats** are fitted with 2 locks which fit onto these rings.



The ISOFIX child seat approved for PEUGEOT vehicles and sold by the PEUGEOT network is the **ISOFIX KIDDY\*** child seat. It can be installed in the rearwards facing position from birth to 13 kg and in the forwards facing position from 9 to 18 kg.

In the front, in the rearwards facing position, the front passenger seat must be moved as far forwards as possible so that the shell of the child seat is in contact with, or as close as possible to, the fascia.

In the rear, in the forwards facing position, the front passenger seat must be in the intermediate longitudinal position, with the seat back upright.

The ISOFIX KIDDY child seat may also be used where there are no Isofix mountings. In this case it is compulsory to attach it to the vehicle's seat using the three-point seat belt for the rearwards facing and forwards facing positions.

**If the ISOFIX KIDDY seat is fitted in the rearwards facing position on the front passenger seat, it is essential to disarm the passenger air bag.**

**Follow the instructions for fitting the child seat indicated in the seat manufacturer's installation instructions.**

Refer to the "Summary table for the installation of child seats".

\* You can only secure ISOFIX child seats, approved by PEUGEOT and sold by its network, on your vehicle's ISOFIX mountings.

## YOUR 406 IN DETAIL



### CHILD SEATS RECOMMENDED BY PEUGEOT

In addition to the ISOFIX child seats, PEUGEOT offers a complete range of child seats which are secured using the seat belt:

#### Group 0+: from birth to 13 kg)

L1 – "Britax Babysure": installed in the rear-facing position in the front or in the rear using a three-point seat belt.

In the front, it is compulsory to disarm the passenger air bag and the passenger seat must be adjusted to the **'mid-way'** position on the runner.

#### Group 1: from 9 to 18 kg

L2 – "Römer Prince": installed in the rear using a two or three-point seat belt.

For the safety of your child, the seat and the restraining cushion must never be separated.

#### Group 2: from 15 to 25 kg

L3 – "Römer Vario": installed in the rear with a two or three-point seat belt.

## YOUR 406 IN DETAIL



### Groups 2 and 3: from 15 to 36 kg

L4 – "Recaro Start": installed in the rear with a three-point seat belt.

The height and width of the seat back and length of the seat cushion must be adjusted according to the age and build of your child.

L5 – "Klippan Optima": installed in the rear with a three-point seat belt.

From the age of 6 years (approximately 22 kg), the booster is used on its own.

Refer to the "Summary table for the installation of child seats".



*Never leave one or more children alone and unsupervised in a vehicle.*

*Never leave a child or an animal in a vehicle which is exposed to the sun and has the windows closed.*

*To protect your young children from the sun, fit blinds on the rear windows. Never leave the keys within reach of children inside the car.*



*Disarm the passenger air bag when installing a "rearwards facing" child seat on the front passenger seat. Otherwise, the child would risk being killed or seriously injured were the air bag to inflate.*

*Observe strictly the recommendations for assembling and securing the child seat as shown in the child seat instructions.*

*To prevent the doors from opening accidentally, use the child lock\*.*

*Also, do not open the rear windows more than a third\*.*

*\* According to model.*

## YOUR 406 IN DETAIL

### TABLE FOR THE INSTALLATION OF CHILD SEATS

In accordance with European regulations (Directive 2000/3), the table below indicates the options for the installation of child seats, in relation to the weight group and the seat in the vehicle:

Seat		Statutory weight range			
		Group 0 <sup>(a)</sup> at 0+ < 13 kg	Group 1 9 - 18 kg	Group 2 15 - 25 kg	Group 3 22 - 36 kg
Front passenger seat <sup>(b)</sup> without booster		L1, L6	L2, L7	L3, L4, L5	L4, L5
Front passenger seat with booster (R)		U (R) L1, L6	U (R) L2, L7	U (R) L3, L4, L5	U (R) L4, L5
Rear passenger seat Side seat	Saloon	L1, L6	L2, L7	L3, L4, L5	L4, L5
	Estate	U, L1	U, L2	U, L3, L4, L5	U, L4, L5
Rear passenger seat Centre seat	Saloon	L1	L2	L3, L4, L5	L4, L5
	Estate	U, L1	U, L2	U, L3, L4, L5	U, L4, L5

U : universal child seat, rearwards facing and forwards facing.

U (R) : universal child seat with a height setting greater than or equal to the height of the fixed seat (in conformity with § 3.3. of appendix 2 of annex XVIII of Directive 2000/3).

According to destination:

L1	: BRITAX Babysure	E11 0344117	Universal (birth to 13 kg).
L2	: RÖMER Prince	E1 03301058	Universal (9 to 18 kg).
L3	: RÖMER Vario	E1 03301120	Universal (15 to 25 kg).
L4	: RECARO Start	E1 03301108	Universal (15 to 36 kg).
L5	: KLIPPAN Optima	E17 030007	Universal (15 to 36 kg).
L6	: KIDDY Isofix Rearwards facing	E1 03301123 and	Universal (birth to 13 kg) <sup>(c)</sup> .
L7	: KIDDY Isofix Forwards facing	E2 030011	Universal (9 to 18 kg) <sup>(c)</sup> .

(a) Group 0: from birth to 10 kg.

(b) Consult the current legislation in your country.

(c) See section "Seats - Isofix mountings" for use of the KIDDY child seat on the vehicle's Isofix mountings, or failing this using the seat belt.

## YOUR 406 IN DETAIL



### SEAT BELTS

#### To adjust the height of the front seat belts

Pinch control **1** and slide it.

#### To lock the seat belts

Pull the strap, then insert the buckle into the stalk.

### Pre-tensioning and force-limiting front seat belts

Safety in the event of a frontal impact has been improved by the introduction of pre-tensioning and force-limiting front seat belts. Depending on the seriousness of the impact, the pre-tensioning system instantly tightens the seat belt firmly against the body of the occupant.

The pre-tensioning seat belts are active when the ignition is on.

The force-limiting device reduces the pressure of the seat belt against the occupant's body in the event of an accident.

### Rear seat belts

The three rear seats are all fitted with three-point inertia reel belts.



*To be effective, a seat belt must be tightened as close to the body as possible.*

*Depending on the nature and the seriousness of the impact, the pre-tensioners may be triggered before and independently of the air bags.*

*In all cases, the air bag warning light comes on.*

*Following a collision, have the system checked by a PEUGEOT dealer.*

*The system has been designed to be fully operational for ten years.*

*Have it replaced after this period.*

## YOUR 406 IN DETAIL

### THE KEYS


The keys allow you to switch on the ignition and to independently operate the locks on the front door, the glove box and the passenger air bag disarming switch.

#### Central locking

From the driver's door, the keys allow you to lock and unlock the doors and boot/tailgate.

If one of the front or rear doors is open, the central locking does not work.

**The remote control performs the same functions at a distance.**

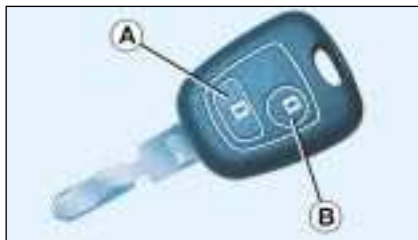

#### The remote control

##### Locking

Press button **A** to lock the vehicle.

This is confirmed by fixed lighting of the direction indicators for approximately two seconds.

##### Unlocking

Press button **B** to unlock the vehicle.

This is confirmed by rapid flashing of the direction indicators.

**Note:** do not repeatedly press the button of your remote control out of range of your vehicle. You risk causing it not to work and the remote control would have to be reprogrammed.

##### Key in ignition

A buzzer sounds on opening the driver's door, if the key has been left in the ignition.

### Locating your vehicle

To locate your vehicle, if you have locked it, in a car park:

☞ press button **A**. The courtesy lights come on and the direction indicators flash for a few seconds.

### ELECTRONIC ENGINE IMMOBILISER

This locks the engine management system as soon as the ignition has been switched off and therefore prevents starting of the vehicle by anyone who does not have the key.

The ignition key has an electronic chip which has a special code. When the ignition is switched on, the code is recognised and starting is possible.

If the system does not function correctly, you are warned by an audible signal and a message on the multi-function display.

**In this case, the vehicle will not start.**

Contact a PEUGEOT dealer as soon as possible.

## YOUR 406 IN DETAIL



### Confidential card

The confidential card contains the identification code necessary for any work carried out by a PEUGEOT dealer on the system. This code is hidden by a film, which should be removed only if necessary.

**Keep your card in a safe place, never inside the vehicle.**



### Changing the battery of the remote control

The information **"battery flat"** is given by an audible signal accompanied by a message on the multi-function display.

To replace the battery, unclip the casing using a coin at the ring (CR2016/3 volt battery).

If the remote control does not work after the battery has been changed, reprogramme the remote control.

### Programming the remote control

- ☞ Switch off the ignition.
- ☞ Switch the ignition on again.
- ☞ Press button **A** immediately.
- ☞ Switch off the ignition and remove the remote control key from the ignition lock. The remote control is now working again.



## YOUR 406 IN DETAIL

---



*Make a careful note of the number on each key. The key number is coded on the label attached to the key.*

*If the key is lost, your PEUGEOT dealer can rapidly supply you with new keys.*

*The high-frequency remote control is a high-performance system.*

*Do not operate it while it is in your pocket as there is a possibility that it may unlock your vehicle without your knowledge.*

*The remote control cannot operate if the key is in the ignition, even if the ignition is switched off, except for reprogramming.*

*Do not operate the deadlock if there is someone inside the vehicle.*

*As a safety measure (when there are children on board), remove the ignition key when leaving the vehicle, even for a short time.*

*Do not handle the buttons of your remote control when out of range of your vehicle as you run the risk of stopping it from working.*

*It would then be necessary to reprogramme the remote control.*

*When buying a second-hand car:*

- ensure that you are in possession of the confidential card;*
- have the key codes memorised by a PEUGEOT dealer, to ensure that the keys in your possession are the only ones that can start your vehicle.*

*Do not make any modifications to the electronic engine immobiliser system.*

## YOUR 406 IN DETAIL

### THE KEYS


The keys allow you to switch on the ignition and to independently operate the locks on the front door, the glove box and the passenger air bag disarming switch.

#### Central locking

From the driver's door, the keys allow you to lock and unlock the doors and boot/tailgate.

If one of the front or rear doors is open, the central locking does not work.

**The remote control performs the same functions at a distance.**

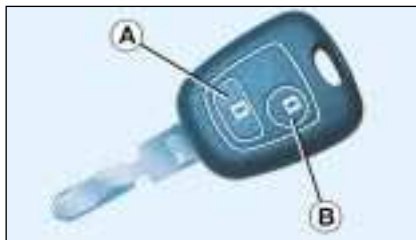

#### The remote control

##### Locking

Press button **A** to lock the vehicle.

This is confirmed by fixed lighting of the direction indicators for approximately two seconds.

##### Unlocking

Press button **B** to unlock the vehicle.

This is confirmed by rapid flashing of the direction indicators.

**Note:** do not repeatedly press the button of your remote control out of range of your vehicle. You risk causing it not to work and the remote control would have to be reprogrammed.

##### Key in ignition

A buzzer sounds on opening the driver's door, if the key has been left in the ignition.

### Locating your vehicle

To locate your vehicle, if you have locked it, in a car park:

☞ press button **A**. The courtesy lights come on and the direction indicators flash for a few seconds.

### ELECTRONIC ENGINE IMMOBILISER

This locks the engine management system as soon as the ignition has been switched off and therefore prevents starting of the vehicle by anyone who does not have the key.

The ignition key has an electronic chip which has a special code. When the ignition is switched on, the code is recognised and starting is possible.

If the system does not function correctly, you are warned by an audible signal and a message on the multi-function display.

**In this case, the vehicle will not start.**

Contact a PEUGEOT dealer as soon as possible.

## YOUR 406 IN DETAIL



### THE ALARM SYSTEM\*

This offers two types of protection:

- **external**, it sounds if **a door, the bonnet or the boot** is opened.
- **internal**, it sounds if there is **air movement in the passenger compartment (a broken window or movement inside the vehicle)**.

**Note:** it also has an anti-tamper function; if there is an attempt to tamper with the wires to the siren, the control unit or the battery, the siren sounds and the direction indicators light.

### Setting

Switch the ignition off and get out of the vehicle.

Set the alarm within five minutes following your exit from the vehicle by locking using the remote control (the red light on the switch, visible from the outside, flashes every second and the direction indicators come on permanently for two seconds).

5 seconds later, internal protection is set.

45 seconds later, external protection is set.

When the alarm is triggered, the siren sounds for thirty seconds.

After it has been triggered, the alarm is operational again.

**Note:** if you wish to lock your vehicle without setting the alarm, lock it using the lock.

### Warning

When the alarm is triggered, if a door, the boot or the bonnet are not closed correctly, the siren sounds for a moment. Close the vehicle correctly to set the alarm.

### Disarming

Unlock the vehicle using the remote control key. (the direction indicators flash for two seconds and the red light on the switch goes out).

**Note:** if the red warning light flashes, it is a sign that the alarm has been triggered during your absence.

To stop it, switch on the ignition.

**Note:** when the alarm is set, but the remote control no longer works:

- unlock the doors using the key and open the door; the alarm is triggered;
- switch the ignition on within ten seconds;
- press the internal protection button **1** immediately. The alarm is disarmed.

\* According to destination.

## YOUR 406 IN DETAIL

---

### To set the alarm to external protection only

If you want to leave a window partially open, or a pet inside the vehicle, you need to select external protection only:

- Switch off the ignition.
- Within the next ten seconds, press the internal protection button **1**.
- Get out of the vehicle.
- Press the locking button on the remote control.
- The doors lock.
- The direction indicators light for two seconds.
- The red light on the switch flashes once a second.

### To disarm external type protection only

- see "Disarming" section.

**Note:** if you wish to charge or replace the battery:

- Turn on the ignition.
- You have 10 seconds after turning on the ignition to press the internal protection switch **1** and hold it down for two seconds.
- The warning light flashes rapidly for three seconds.
- Disconnect the battery.
- After reconnecting the battery, lock, then unlock the vehicle using the remote control.



*Do not make any modifications to the alarm system, this could cause faults.*

## YOUR 406 IN DETAIL



### DOORS

#### Opening the doors from outside



#### Opening the doors from inside

#### Locking from the inside

To lock, press button **A**.

Locking the front door locks the front and rear doors and the boot.

On the other doors the button only locks the door concerned.

#### Automatic central locking

**To activate this function, contact a PEUGEOT dealer.**

The doors and the boot of your vehicle lock automatically while driving (speed greater than 6 mph (10 km/h)).

The door opening controls permit complete unlocking of the vehicle.




#### Child safety

This prevents either of the rear doors being opened from inside.

- ☞ Turn the red plastic switch a quarter of a turn using the ignition key.

## YOUR 406 IN DETAIL

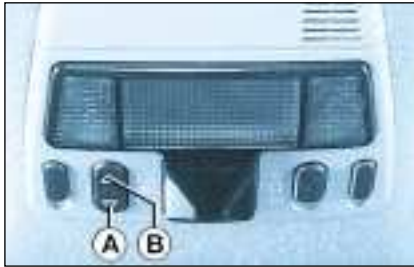

### SUNROOF

- **To tilt**

Press part **A** of the switch. To close, press part **B** of the switch until the sunroof is completely closed.

- **To open**

Press part **B** of the switch. To close, press part **A** of the switch until the sunroof is completely closed.



*Always remove the key from the ignition when leaving the vehicle, even for a short time.*

*In the event of contact when operating the windows, you must reverse the movement of the window. To do this, press the switch concerned.*

*When the driver operates the passenger window switches, he must ensure that no one is preventing correct closing of the window.*

*The driver must ensure that passengers use the electric windows correctly.*

*Be aware of children when operating the windows.*



### BOOT

#### **Simultaneous locking or unlocking of the boot and the doors**

Turn the key a quarter turn from **A** to **B**.

The boot is then controlled by the remote control or the driver's door lock.

#### **Locking the boot only**

Turn the key a quarter of a turn from **A** to **C**. The boot is then locked, whatever the action of the remote control or the driver's door lock.

To return to simultaneous operation with the doors: turn the key from **A** to **B**.

## YOUR 406 IN DETAIL



### Opening the tailgate of the 7 seater estate from inside

Slide button **A** and press.

To lock the interior control, turn the key to the left.



### OPENING THE BONNET

**From inside:** pull the handle on the left-hand side under the fascia.

**From outside:** lift the catch and raise the bonnet.

### Bonnet struts

These open the bonnet and hold it open.

### To close

Lower the bonnet and release it at the end of its travel. Check that the bonnet is properly locked.



### FILLING WITH FUEL

Fill with fuel with the engine switched off.

To open the fuel filler flap, firmly pull the handle on the floor on the left of the driver's seat.

If you are filling up your tank, do not continue after the 3rd cut-off of the pump; this could cause your vehicle to malfunction.

**The capacity of the tank is approximately 15.4 gallons (70 litres).**

**A filler cap hook is provided on the inside of the fuel filler flap.**

## YOUR 406 IN DETAIL



### SUNROOF

- **To tilt**

Press part **A** of the switch. To close, press part **B** of the switch until the sunroof is completely closed.

- **To open**

Press part **B** of the switch. To close, press part **A** of the switch until the sunroof is completely closed.



*Always remove the key from the ignition when leaving the vehicle, even for a short time.*

*In the event of contact when operating the windows, you must reverse the movement of the window. To do this, press the switch concerned.*

*When the driver operates the passenger window switches, he must ensure that no one is preventing correct closing of the window.*

*The driver must ensure that passengers use the electric windows correctly.*

*Be aware of children when operating the windows.*



### BOOT

#### **Simultaneous locking or unlocking of the boot and the doors**

Turn the key a quarter turn from **A** to **B**.

The boot is then controlled by the remote control or the driver's door lock.

#### **Locking the boot only**

Turn the key a quarter of a turn from **A** to **C**. The boot is then locked, whatever the action of the remote control or the driver's door lock.

To return to simultaneous operation with the doors: turn the key from **A** to **B**.



## YOUR 406 IN DETAIL



### Opening the tailgate of the 7 seater estate from inside

Slide button **A** and press.

To lock the interior control, turn the key to the left.



### OPENING THE BONNET

**From inside:** pull the handle on the left-hand side under the fascia.

**From outside:** lift the catch and raise the bonnet.

### Bonnet struts

These open the bonnet and hold it open.

### To close

Lower the bonnet and release it at the end of its travel. Check that the bonnet is properly locked.



### FILLING WITH FUEL

Fill with fuel with the engine switched off.


To open the fuel filler flap, firmly pull the handle on the floor on the left of the driver's seat.

If you are filling up your tank, do not continue after the 3rd cut-off of the pump; this could cause your vehicle to malfunction.

**The capacity of the tank is approximately 15.4 gallons (70 litres).**

**A filler cap hook is provided on the inside of the fuel filler flap.**

## PETROL/LPG TWIN FUEL VERSION

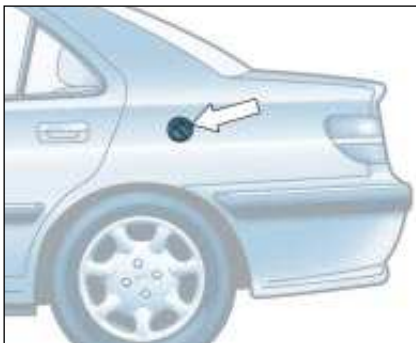

### Filling the LPG tank

(Capacity, approximately 46 litres)

- switch off the ignition,
- unscrew the cap protecting the filler opening,
- lock the filler nozzle onto the opening (if necessary, screw the appropriate adapter\*, located in the insulated compartment, onto the filler opening first),
- push the button on the pump,
- once filling has stopped automatically, unlock the filler nozzle,
- screw the protective cap back onto the filler opening.

\* According to destination.



### Petrol gauge

When the low petrol level indicator comes on, fill the tank without delay as the engine can only start using petrol. Furthermore, a low petrol level may result in fuel circuit faults.



### Gas gauge

If the outside temperature is high, the gas level indicated by the fuel gauge may be slightly higher than the actual level.



### Safety advice

The safety valve must be closed before any maintenance or repair work is carried out on your vehicle. To close it, switch off the ignition.

Ensure that there is no risk that the loads carried may damage the tank.


### Testing the tank

Decree of 18/01/43 and application of article 3 of the A.M. of 24/11/82.

The maximum interval between successive tests is eight years. However, the test must be repeated whenever the vehicle is sold, if this sale takes place more than 5 years following the last test.

It is imperative that any work on the LPG feed system is carried out by a PEUGEOT dealer.

## YOUR 406 IN DETAIL

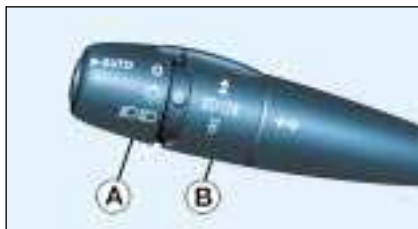

### THE LIGHTS STALK

#### Front and rear lights

Selection is by turning ring **A**.



Lights off



Side lights on



Dipped/main beam headlamps



Automatic switching on of lights

#### Dipped/Main beam change

Pull the stalk towards you.

**Note:** with the ignition off, if the driver's door is open, a buzzer sounds if you have left your lights on.

#### Front fog lamps and rear fog lamp

Rotate the ring **B** forwards to switch on and backwards to switch off. The status is confirmed by the light on the instrument panel.



Front fog lamps (1st forwards turn of the ring)



Front fog lamps and rear fog lamp (2nd forwards turn of the ring)

**Note:** to switch off the rear fog lamp and the front fog lamps, turn the ring twice backwards.



#### Direction indicators (flashers)

**Left:** downwards.

**Right:** upwards.



*In good or rainy weather, both day and night, the front fog lamps and the rear fog lamp are dazzling and are prohibited. Do not forget to switch them off when they are no longer needed.*

## YOUR 406 IN DETAIL

### AUTOMATIC SWITCHING ON OF THE LIGHTS

Side lights and dipped beam headlamps switch on automatically if the light is poor, or during continuous operation of the windscreen wipers. They switch off as soon as the light becomes bright enough or the windscreen wipers stop.

This function is active when the vehicle is supplied to the customer.

To disarm or activate the function:

- ☞ Place the key in the accessories position (1st notch),
- ☞ Press the end of the lights stalk for more than two seconds.

***Note:** In foggy weather, the brightness sensor can detect sufficient light. Because of this, the lights do not come on automatically.*

**Do not cover the brightness sensor connected to the rain sensor, located in the windscreen behind the mirror. It is used for automatic switching on of the lights.**

### Operating check

#### Activation

Activation of this function is accompanied by an audible signal and the message "**Automatic lighting of the headlamps activated**" on the multifunction display.

**Note:** Always operate the lighting controls manually where this is possible.

#### Disarming

Disarming of the function is accompanied by an audible signal and the message "**Automatic lighting of the headlamps deactivated**" on the multifunction display.

When driving, if this function is switched off when the headlamps would switch on in automatic mode, the lights remain on.

It is however possible to disarm this function and switch off the lights by:

- manually switching off the lights using the lights stalk,
- switching off the engine.

**If the brightness sensor does not function correctly**, the system activates the function (the lights come on). The driver is alerted by the flashing of the "dipped beam" warning light on the instrument panel.

Contact a PEUGEOT dealer to have the system checked.


### Follow me Home

When there is a low level of brightness or at night, if you leave your vehicle, the side lights and the dipped beam lights may remain on for approximately one minute.

To do this:

- ☞ place the lights stalk in the **AUTO** position,
- ☞ place the key in the accessories position (first notch),
- ☞ press the end of the lights stalk for more than two seconds,
- ☞ place the lights stalk in the **0** position,
- ☞ flash the headlamps,
- ☞ get out of the car and lock it.

## YOUR 406 IN DETAIL

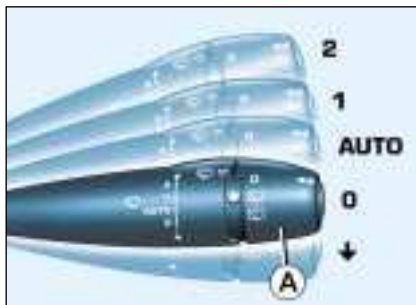

### WINDSCREEN WIPER STALK

#### Front windscreen wipers

2 Rapid wipe (heavy rain)

1 Normal wipe (moderate rain).

**AUTO** Automatic wipe

0 Off.

↓ Single wipe (press downwards).

#### Operation

In position **1** or **2**, when the vehicle stops, the windscreen wiper changes to a lower wiping speed, then resumes its initial speed when the vehicle starts again.

**When the ignition has been switched off for more than a minute with the stalk in the AUTO position, it is necessary to reactivate this function.** To do this, move the stalk to any position, then move it back to the **AUTO** position.

#### Automatic windscreen wiper

In the **AUTO** position, the wipers operate automatically and **adjust their speed to the intensity of the rainfall.**

#### Operating check

#### Switching on

Activation of the function is accompanied by the message "**Automatic windscreen wiper actuated**" on the multifunction display.

**In the event of malfunction in the AUTO position**, the windscreen wiper will operate in downgrade mode.

Contact a PEUGEOT dealer to have the system checked.



*Do not mask the rain detector located on the windscreen behind the interior mirror.*

*If you take the vehicle to an automatic car wash, switch off the ignition or check that the windscreen wiper stalk is not in the automatic position.*

*In Winter, it is advisable to wait for complete de-icing of the windscreen before switching on the automatic wipe.*



#### Rear screen wiper (estate)

Turn ring **A** to the first notch, for intermittent wiping.



#### Rear screen wash (estate)

Turn ring **A** beyond the first notch; the windscreen wash then the windscreen wiper operate for a fixed period.

#### Windscreen and headlamp wash

Pull the windscreen wiper stalk towards you. The windscreen wash then the windscreen wipers operate for a fixed period.


The windscreen wash and headlamp wash operate simultaneously for two seconds, **only if the headlamps are on.**

# YOUR 406 IN DETAIL

## TRIP COMPUTER



Pressing the button on the end of the **wash/wipe stalk** enables the following data to be displayed:

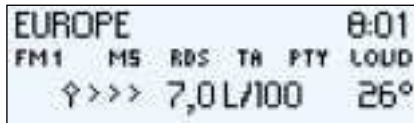


Display B

- the range
- the distance travelled
- the average consumption
- the current consumption
- the average speed

### Zero reset

Press the stalk for more than two seconds.

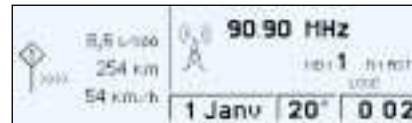

Display C

- the current consumption and the range,
- the average consumption, the distance travelled and the average speed calculated over a period "1",
- the average consumption, the distance travelled and the average speed calculated over a period "2".

Periods "1" and "2" are defined by the frequency of the zero reset. They allow, for instance, daily calculations over period "1" and monthly calculations over period "2".

### Zero reset

When the required period is displayed, press the stalk for more than two seconds.

## YOUR 406 IN DETAIL



### Range

The display shows the distance that can still be covered with the fuel remaining in the tank.

**Note:** this figure may rise if there is a change in driving style or road surface, causing a significant drop in current fuel consumption.

If there are less than 3 litres of fuel in the tank, only three segments will be displayed.



### Current fuel consumption

This gives the fuel consumption recorded during the last two seconds. This function is only displayed when the vehicle is travelling at more than 12 m.p.h. (20 km/h).



### Average consumption

This is the ratio between the amount of fuel consumed and the distance travelled since the computer was last reset to zero.



### Average speed

This is obtained by dividing the distance travelled by the period of time the vehicle has been in use (with the ignition on), since the computer was last reset to zero.




### Distance travelled

This shows the distance travelled since the computer was last reset to zero.

After the trip computer has been reset to zero, the range data becomes meaningful only after the vehicle has been in use for a certain period.

If horizontal segments are displayed instead of figures when driving, contact a PEUGEOT dealer.

## YOUR 406 IN DETAIL

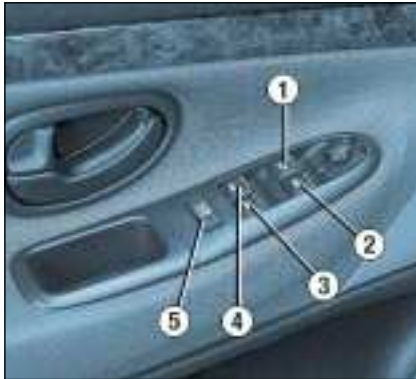

### ELECTRIC WINDOWS

#### 1 - Driver's electric window switch.

You have two options:

- **Manual operation:**  
Press or pull switch **1** gently. The window stops as soon as the switch is released.
- **Automatic operation:**  
Press or pull switch **1** fully. The window opens or closes completely when the switch is released. Pressing the switch again stops the movement of the window.

#### Safety auto-reverse

When the window on the driver's side rises and meets an obstacle, it stops and partially lowers again.

#### Notes:

In the case of unwanted opening of the window on closing (for example, in the case of frost) if the window will not rise and goes into safety auto-reverse mode, lower it completely and raise it again immediately, by pulling the switch until the window closes completely. Continue to press the switch for approximately one second after closing.

Following reconnection of the battery, in the event of a malfunction, you must reinitialise the safety auto-reverse function:

- open the window completely, then close it, it will rise in stages of a few centimetres with each press, repeat the operation until the window is completely closed,
- continue to press the switch for at least one second after reaching this position.

**The safety auto-reverse function is not operational during these operations.**

#### 2 - Passenger's electric window switch.

#### 3 - Rear right electric window switch.

#### 4 - Rear left electric window switch.

#### 5 - Disarming the rear window switches (child safety).

For the safety of your children, press switch 5 to prevent operation of the rear windows irrespective of their position.

The 1st press activates the switch and the 2nd press deactivates it.



*Always remove the key from the ignition when leaving the vehicle, even for a short time.*

*In the event of contact when operating the windows, you must reverse the movement of the window. To do this, press the switch concerned.*

*When the driver operates the passenger window switches, he must ensure that no one is preventing correct closing of the window.*

*The driver must ensure that passengers use the electric windows correctly.*

*Be aware of children when operating the windows.*



## YOUR 406 IN DETAIL

---



### EXTERIOR MIRRORS

#### Electric rear view mirrors

Turn knob **6** to the right or to the left to select the corresponding mirror.

Move knob **6** in all four directions to adjust.

When parked, the mirrors can be folded back manually.

#### Fold-back electric mirrors

With the ignition on, turn knob **6** to position **A**.




*The outside of the mirror on the driver's side is convex (area at edge defined by dotted line) in order to eliminate the "blind spot".*

*Objects observed in the driver's and passenger's mirrors are in reality closer than they appear.*

*This must be taken into account to judge correctly the distance of vehicles approaching from behind.*

## YOUR 406 IN DETAIL

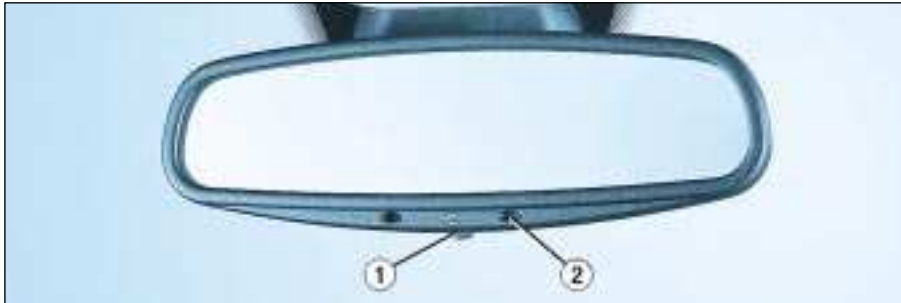

### Automatic day/night interior mirror

This automatically and gradually changes between the day and night positions. To prevent dazzling, the glass of the mirror darkens automatically depending on the intensity of the light from behind. It clears as the light (headlamps of following vehicles, sunlight) decreases, ensuring maximum visibility.

#### Operation

Switch on the ignition and press switch 1:

- Indicator light 2 lit (switch pressed): automatic operation.
- Indicator light 2 off: automatic system off. The mirror remains at its most clear.

#### Special feature

To ensure maximum visibility during manoeuvres, the mirror clears automatically when reverse gear is engaged.

### Manual interior mirror

The interior mirror has two positions:

- day (normal),
- night (anti-dazzle).

To change from one to the other, push or pull the lever on the lower edge of the mirror.



### AREAS FOR TOLL CARDS/CAR PARK TICKETS

The athermic windscreen has two non-reflective zones located either side of the base of the interior mirror. They are intended for affixing toll cards and/or car park tickets.

## YOUR 406 IN DETAIL



### HEADLAMP ADJUSTMENT

Depending on the load in your vehicle, it is recommended that the headlamp beam is adjusted.

- 0** 1 or 2 people in the front seats.
- 3 people.
- 1** 5 people.
- 2** 5 people + maximum authorised load.
- 3** Driver + maximum authorised load.

**Initial setting is position 0.**



### Hazard warning lights

Press the button, the direction indicators flash.

They can operate with the ignition off.

### Automatic lighting of hazard warning lights\*

When braking in an emergency, depending on the force of deceleration, the hazard warning lights come on automatically. They switch off automatically the first time you accelerate.

It is also possible to switch them off by pressing the button.



### STEERING WHEEL HEIGHT AND DEPTH ADJUSTMENT

When the vehicle is stationary, unlock the steering wheel by pulling handle **A**.

Adjust the height and depth of the steering wheel, then lock it by pushing handle **A** down fully.



### HORN

Press one of the spokes or the centre of the steering wheel.

\* According to destination.

## YOUR 406 IN DETAIL



### COURTESY LIGHTS



Off.



On when one of the doors is opened.



Permanently on when the ignition key is in the accessories position or the ignition is on.

**1 - Front courtesy light**

**2 - Rear courtesy light**

**3 - Map-reading lights**


With the key in the accessories position or the ignition on, operate the relevant switch.



### Sun visor with illuminated courtesy mirror

With the ignition on, the mirror is automatically lit up when the flap is opened.

## YOUR 406 IN DETAIL

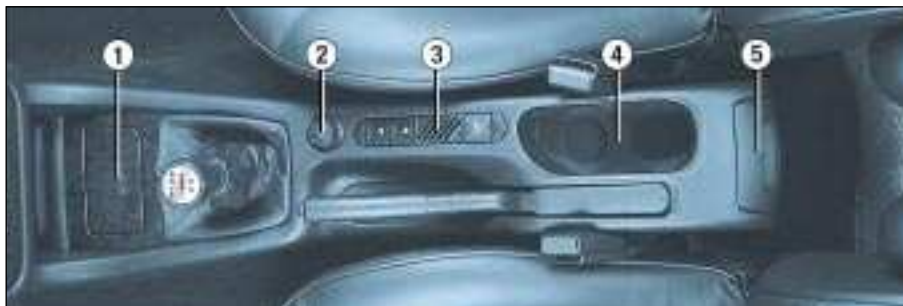

### CENTRE CONSOLE

#### 1. Front ashtray

Press the cover to open the ashtray.

To empty it, after opening, push the cover forwards.

#### 2. Lighter

Push in and wait a few moments until it springs out automatically.

#### 3. Coin storage

#### 4. Cup holder

#### 5. Rear ashtray

Release to empty, by pulling it sharply towards you.

To refit the ashtray, push it into its housing.



### Rear screen sun blind

Pull the blind by the central tab, and then position the hooks in the slots **A**.

### Rear shelf compartment

This is provided for the storage of a first aid kit.

The catch on the lid is designed to withstand a weight of 9lbs (4 kg) on impact.

## YOUR 406 IN DETAIL



### Luggage cover (estate)

Pull the luggage cover towards you with both hands and position it in the notches **A**. Guide the luggage cover back when closing it.



### Rear parcel shelf

**To remove:** turn control **B**, raise the rear of the shelf and remove it by pulling it towards you.

**To refit:** insert the front part in the notches **C** then fold down the rear part.

### Light

The boot light works when the boot is opened.

### Luggage net

The stowing rings allow the net to be placed in different positions.



### Storage compartments

There are two storage compartments located behind the boot side trim.

To gain access to a compartment, pull the handle towards you and free the panel by moving it upwards.

## DRIVING YOUR 406



**V6 Engine**



**1.8 litre and 2 litre petrol engines, 2 litre turbo diesel HDI engine**

### THE AUTOMATIC AUTOADAPTIVE GEARBOX

The 4-gear **automatic** gearbox provides the comfort of **integral automatic regulation**, enhanced by a **sport programme** (switch **A**) and a **snow programme** (switch **B**).

#### Gear selection gate

– Move the lever in the gate to select one of the functions. Once the position has been selected, the indicator light for that function is displayed on the instrument panel.

**Park (parking):** for **immobilising** the vehicle and for **starting** the engine, with the handbrake on or off.

**Reverse:** to drive in **reverse gear** (select this position when the vehicle is stationary, engine at idle).

**Neutral:** for **starting the engine** and for **parking**, with the handbrake on.

**Drive:** to drive in **auto-adaptive mode** (with automatic changing of the four gears).

**3:** for **urban** driving or for driving on **winding roads** (automatic changing of the first three gears only).

**2:** for **mountain** roads or for **towing a trailer** (automatic changing of the first two gears only).

**1:** or tackling **steep gradients** (selection of first gear only).

**Special feature of the gearbox (1.8 and 2 litre petrol engines, 2 litre turbo diesel HDI engine)**

Selection of first gear is by pressing switch **C**, with the lever in position **2**.

To change out of first gear, press switch **C** again or move the selector lever.

## DRIVING YOUR 406

### Moving off

With the engine running, to move off with the selector lever in position **P**:

- ☞ **It is essential to press the brake pedal to exit position P** (shift lock),
- ☞ Select the required function (**R, D, 3, 2** or **1**) then gradually release the pressure on the brake pedal; the vehicle will **move off** immediately.

You can also move off with the selector lever in position **N**:

- ☞ Release the handbrake with your foot on the brake,
- ☞ Select the required function (**R, D, 3, 2** or **1**) then gradually release the pressure on the brake pedal; the vehicle will **move off** immediately.

### Automatic operation

Automatic changing of the **four gears**:

- ☞ Select function **D** in the gate.

The gearbox always selects the most suitable gear on the basis of the following parameters:

- driving style,
- road characteristics,
- the vehicle's load.

The gearbox operates in **auto-adaptive mode** without any action on your part.

### Remarks:

To obtain maximum acceleration without touching the gear lever, press the accelerator pedal down as far as it will go (kickdown). The gearbox will change down automatically or stay in the gear selected, up to maximum engine speed.

When braking, the gearbox changes down automatically so as to provide efficient engine braking.

If you take your foot off the accelerator suddenly, the gearbox will not change up, so as to improve safety.



*When the engine is idling, with the brakes not applied, if function **R, D, 3, 2** or **1** is selected, the vehicle will move even if you are not accelerating.*

*For this reason, **do not leave children unsupervised inside the vehicle, when the engine is running.***

*When maintenance operations need to be carried out with the engine running, apply the handbrake and select function **P**.*

*Never select function **N** when the vehicle is moving.*

*Never select functions **P** or **R** unless the vehicle is stationary.*

*Do not change from one position to another to improve braking efficiency on a slippery surface.*

*With the selector lever in position **P**, it will be impossible to change to another position if your battery is flat.*



## DRIVING YOUR 406

### Sport and Snow programmes

In addition to the auto-adaptive programme, you have a choice of two specific programmes. The programme selected is displayed on the instrument panel.

#### Sport Programme

☞ Press button **S**, once the vehicle has started and function **D** has been selected.

The gearbox automatically favours dynamic driving.

#### Snow programme

This programme favours starting operations and drive to improve traction.

☞ Press button **\***, once the vehicle has started and function **D** has been selected.

The gearbox adapts to driving on slippery roads.

#### Note:

You can return to the auto-adaptive programme at any time.

☞ Press button **S** or **\*** again to cancel the programme selected.

### Difficulties in operation

Any disruption of the system is signalled by the alternate flashing of the Sport and Snow lights on the instrument panel.

In this case, the gearbox will operate in downgrade mode (locked in 3rd gear). You may feel a substantial knock when reverse is selected from **P** to **R** or from **N** to **R** (without any risk of damage to the gearbox).

Do not exceed 60 m.p.h. (100 km/h), speed restrictions permitting.

Contact a PEUGEOT dealer without delay.



### MANUAL GEARBOX

#### Reverse\*

To change to reverse gear, lift the ring under the gear lever knob and push the gear lever to the left then to the front.

**Reverse gear can only be engaged when the vehicle is stationary with the engine idling.**

\* According to engine.

## DRIVING YOUR 406

### Sport and Snow programmes

In addition to the auto-adaptive programme, you have a choice of two specific programmes. The programme selected is displayed on the instrument panel.

#### Sport Programme

☞ Press button **S**, once the vehicle has started and function **D** has been selected.

The gearbox automatically favours dynamic driving.

#### Snow programme

This programme favours starting operations and drive to improve traction.

☞ Press button **\***, once the vehicle has started and function **D** has been selected.

The gearbox adapts to driving on slippery roads.

#### Note:

You can return to the auto-adaptive programme at any time.

☞ Press button **S** or **\*** again to cancel the programme selected.

### Difficulties in operation

Any disruption of the system is signalled by the alternate flashing of the Sport and Snow lights on the instrument panel.

In this case, the gearbox will operate in downgrade mode (locked in 3rd gear). You may feel a substantial knock when reverse is selected from **P** to **R** or from **N** to **R** (without any risk of damage to the gearbox).

Do not exceed 60 m.p.h. (100 km/h), speed restrictions permitting.

Contact a PEUGEOT dealer without delay.



### MANUAL GEARBOX

#### Reverse\*

To change to reverse gear, lift the ring under the gear lever knob and push the gear lever to the left then to the front.

**Reverse gear can only be engaged when the vehicle is stationary with the engine idling.**

\* According to engine.

## DRIVING YOUR 406

### TRACTION CONTROL (ASR) AND DYNAMIC STABILITY CONTROL CONTROL (ESP)

These systems are linked and complement the ABS.

The ASR system optimises drive to prevent the wheels skidding, by acting on the brakes of the drive wheels and on the engine. It also allows the directional stability of the vehicle to be improved on acceleration.

If there is a variation between the trajectory followed by the vehicle and that required by the driver, the ESP system automatically acts on the engine and the brake of one or more wheels, in order to put the vehicle back on course.

### Operation of the ASR and ESP systems



When one of these two systems is operating, this light flashes.

### Disarming the ESP/ASR systems

In certain conditions (vehicle stuck in mud or snow, or on loose ground...), it could prove useful to disarm the ASR system to make the wheels spin and regain grip.

- ☞ Press the switch "**ESP OFF**", situated to the left of the steering wheel.

The switch lights up and the indicator lights come on, accompanied by the message "**ASR/ESP de-activated**" on the multi-function display: the ESP and ASR systems no longer affect the operation of the engine or the brakes.

### They engage again:

- ☞ automatically when the ignition is switched off,
- ☞ manually by pressing the switch again.

### Operating check



When a system malfunction occurs, the switch light flashes and the indicator light comes on.

Contact a PEUGEOT dealer to check the system.



*The ESP system offers increased safety during normal driving, but should not incite the driver to take risks or to drive at high speed.*

*The operation of the system is assured to the extent to which the recommendations of the manufacturer regarding the wheels (tyres and wheel rims), the braking components, the electronic components and the assembly and repair procedures within the PEUGEOT network are respected.*

*After an accident or impact, have the system checked by a PEUGEOT dealer.*

### Handbrake

#### Applying

When parking, pull the handbrake to immobilise your vehicle.

**Warning:** when parking on a slope, direct your wheels towards the pavement and apply the handbrake.

#### Releasing

Pull the handle and press the button to release the handbrake.

## DRIVING YOUR 406



### CRUISE CONTROL

Cruise control enables the vehicle to maintain a steady speed programmed by the driver, regardless of the road characteristics and without the driver having to touch the accelerator or brake pedals.

In order for it to be memorised, the vehicle speed must be greater than 40 km/h or 60 km/h, depending on the engine, and fourth gear at least must be engaged (second gear for the automatic gearbox).

#### Operation

- ☞ Place switch **1** in the **ON** position. A speed can be memorised.
- ☞ Place switch **1** in the **OFF** position to cancel.

#### Memorising a speed

As soon as you reach the chosen speed, press button **2** or **3**. This memorises the speed, which will be maintained automatically.

**Note:** It is possible to accelerate and

drive momentarily at a speed greater than the memorised speed. When the accelerator pedal is released, the vehicle will return to the memorised speed.

#### Cancelling the memorised speed

If you wish to cancel the memorised speed:

- ☞ press button **4** or the brake or clutch pedal.

#### Recalling the memorised speed

After cancellation, press button **4**. Your vehicle will return to the last memorised speed.

#### Changing a memorised speed

To memorise a speed higher than the previous one:

- ☞ press button **3**;
- ☞ release it when you have reached the required speed.

To memorise a speed lower than the previous one:

- ☞ press button **2**;
- ☞ release it when you have reached the required speed.

#### Cancelling the cruise control

- ☞ Place switch **1** in the **OFF** position or switch off the ignition.



*Do not use cruise control on slippery roads or in heavy traffic.*



### THE ABS ANTI-LOCK BRAKING SYSTEM

When used with approved tyres in good condition, the ABS increases the stability and manoeuvrability of your vehicle, particularly on poor or slippery road surfaces.

The anti-lock braking system comes into operation automatically when there is a risk of wheel lock.

The normal operation of the ABS may make itself felt by slight vibrations of the brake pedal.

**In emergency braking, press very firmly without releasing the pressure.**

### EMERGENCY BRAKING ASSISTANCE SYSTEM

In an emergency, this system enables the optimum braking pressure to be reached more quickly, thus reducing the stopping distance.

It is triggered by the speed at which the brake pedal is activated. The effect of this is a reduction in the resistance of the pedal and an increase in braking efficiency.

## DRIVING YOUR 406

### AIR BAGS

The air bags have been designed to maximise the safety of the occupants in the event of serious collisions; they work in conjunction with the force limiting seat belts.

In the event of a serious collision, the electronic detectors record and analyse any abrupt deceleration of the vehicle: if the triggering threshold is reached, the air bags inflate instantly and protect the occupants of the vehicle.

Immediately after the impact, the air bags deflate rapidly, so that they do not hinder the visibility of the occupants nor their possible exit from the vehicle.

The air bags will not be deployed in collisions which are not serious, for which the seat belt is sufficient to provide maximum protection. The seriousness of the collision depends on the nature of the obstacle and the speed of the vehicle at the moment of impact.

**Air bags only operate when the ignition is switched on.**

**Note:** the gas escaping from the air bags can be a minor irritant.



### FRONT AIR BAGS

These are folded in the centre of the steering wheel for the driver and in the fascia for the front passenger. They are deployed simultaneously, except in cases where the air bag is disarmed.

### Front air bag malfunction



If this warning light comes on, accompanied by a buzzer and the message "Air bag fault" on the multi-function display, contact a

PEUGEOT dealer to have the system checked.

### Passenger air bag precautions

For a vehicle fitted with a passenger air bag disarming switch:



- disarm the air bag if you install a rear-facing child seat on the front passenger seat,
- arm the air bag for an adult passenger.

For a vehicle not fitted with a passenger air bag disarming switch:



- do not install a rear-facing child seat on the front passenger seat.

Never place your feet or any object on the fascia.

## DRIVING YOUR 406



### Disarming the passenger air bag\*

To ensure the safety of your child, it is essential to disarm the passenger air bag when you install a rear-facing child seat on the front passenger seat.

☞ With the ignition switched off, insert the key into the passenger air bag disarming switch 1, turn it to the "OFF" position, then remove the key keeping the slot in this position.

The air bag warning light on the instrument panel is lit throughout the disarming process.

In the "OFF" position, the passenger air bag will not be triggered in the event of an impact.

As soon as the child seat is removed, turn the air bag slot to the "ON" position to re-activate the air bag and thus ensure the safety of your passenger in the event of an impact.

\* According to destination.



### Operating check

This is confirmed by an indicator light, accompanied by an audible signal and a message on the multi-function display.

With the ignition on (2nd notch), illumination of this warning light accompanied by an audible signal and the message "Passenger air bag disarmed" on the multi-function display, indicates that the passenger air bag is disarmed (switch in the "OFF" position).

### SIDE AIR BAGS

The side air bags are incorporated into the backs of the front seats, on the door side.

They are deployed independently of each other, on whichever side the collision occurs.

### Operating check

This is confirmed by an indicator light, accompanied by an audible signal and a message on the multi-function display.



If this indicator light comes on, accompanied by an audible signal and the message "Air bag fault" on the multifunction display, contact a PEUGEOT dealer to have the system checked.

## DRIVING YOUR 406

---



**For the front and side air bags to be fully effective, observe the following safety rules:**

- *Wear a correctly adjusted seat belt.*
- *Sit in a normal upright position (passengers must not place their feet on the fascia).*
- *Do not leave any accessories, objects or pets between the occupants and the air bags.  
It could hamper the operation of the air bags or injure the occupants.*
- *All work on the air bag system is strictly forbidden unless it is carried out by an approved PEUGEOT dealer.*
- *After an accident or if the vehicle has been stolen or broken into, have the air bag systems checked.*
- *The air bag systems have been designed to be fully operational for 10 years from the date of registration of the vehicle.  
Have them replaced by a PEUGEOT dealer after this period.*

### **Front air bags**

- *Do not drive holding the steering wheel by its spokes or resting your hands on the centre part of the wheel.*
- *Smoke as little as possible; deployment of the air bags can cause burns or the risk of injury from a cigarette or pipe.*
- *Never remove or pierce the steering wheel or hit it violently.*

### **Side air bags**

- *Do not fix or glue anything to the backs of the front seats. This could cause injury to the chest or arms when the side air bag inflates.*
- *Do not sit with the upper part of the body any nearer to the door than necessary.*
- *Only put approved covers on the seats. Contact your PEUGEOT dealer.*

## DRIVING YOUR 406



### Disarming the passenger air bag\*

To ensure the safety of your child, it is essential to disarm the passenger air bag when you install a rear-facing child seat on the front passenger seat.

☞ With the ignition switched off, insert the key into the passenger air bag disarming switch 1, turn it to the "OFF" position, then remove the key keeping the slot in this position.

The air bag warning light on the instrument panel is lit throughout the disarming process.

In the "OFF" position, the passenger air bag will not be triggered in the event of an impact.

As soon as the child seat is removed, turn the air bag slot to the "ON" position to re-activate the air bag and thus ensure the safety of your passenger in the event of an impact.

\* According to destination.



### Operating check

This is confirmed by an indicator light, accompanied by an audible signal and a message on the multi-function display.

With the ignition on (2nd notch), illumination of this warning light accompanied by an audible signal and the message "Passenger air bag disarmed" on the multi-function display, indicates that the passenger air bag is disarmed (switch in the "OFF" position).

### SIDE AIR BAGS

The side air bags are incorporated into the backs of the front seats, on the door side.

They are deployed independently of each other, on whichever side the collision occurs.

### Operating check

This is confirmed by an indicator light, accompanied by an audible signal and a message on the multi-function display.



If this indicator light comes on, accompanied by an audible signal and the message "Air bag fault" on the multifunction display, contact a PEUGEOT dealer to have the system checked.



## DRIVING YOUR 406

---



**For the front and side air bags to be fully effective, observe the following safety rules:**

- *Wear a correctly adjusted seat belt.*
- *Sit in a normal upright position (passengers must not place their feet on the fascia).*
- *Do not leave any accessories, objects or pets between the occupants and the air bags.  
It could hamper the operation of the air bags or injure the occupants.*
- *All work on the air bag system is strictly forbidden unless it is carried out by an approved PEUGEOT dealer.*
- *After an accident or if the vehicle has been stolen or broken into, have the air bag systems checked.*
- *The air bag systems have been designed to be fully operational for 10 years from the date of registration of the vehicle.  
Have them replaced by a PEUGEOT dealer after this period.*


### **Front air bags**

- *Do not drive holding the steering wheel by its spokes or resting your hands on the centre part of the wheel.*
- *Smoke as little as possible; deployment of the air bags can cause burns or the risk of injury from a cigarette or pipe.*
- *Never remove or pierce the steering wheel or hit it violently.*

### **Side air bags**

- *Do not fix or glue anything to the backs of the front seats. This could cause injury to the chest or arms when the side air bag inflates.*
- *Do not sit with the upper part of the body any nearer to the door than necessary.*
- *Only put approved covers on the seats. Contact your PEUGEOT dealer.*

## MAINTENANCE OF YOUR 406

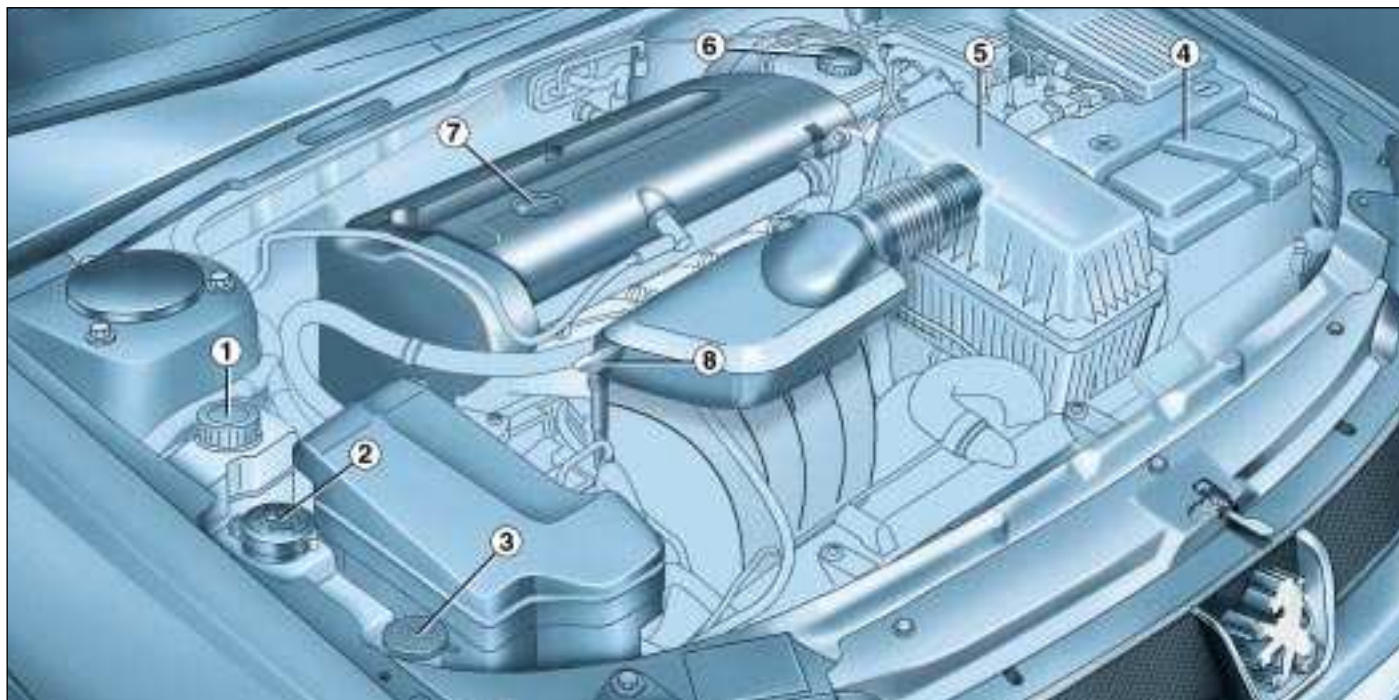

### 1.8 litre 16V and 2 litre 16V petrol engines

1 - Power steering.

2 - Coolant reservoir.

3 - Windscreen and headlamp\* wash reservoir.

4 - Battery.

5 - Air filter.


6 - Brake and clutch fluid reservoir.

7 - Engine oil filler cap.

8 - Dipstick.

\* According to destination.

## MAINTENANCE OF YOUR 406

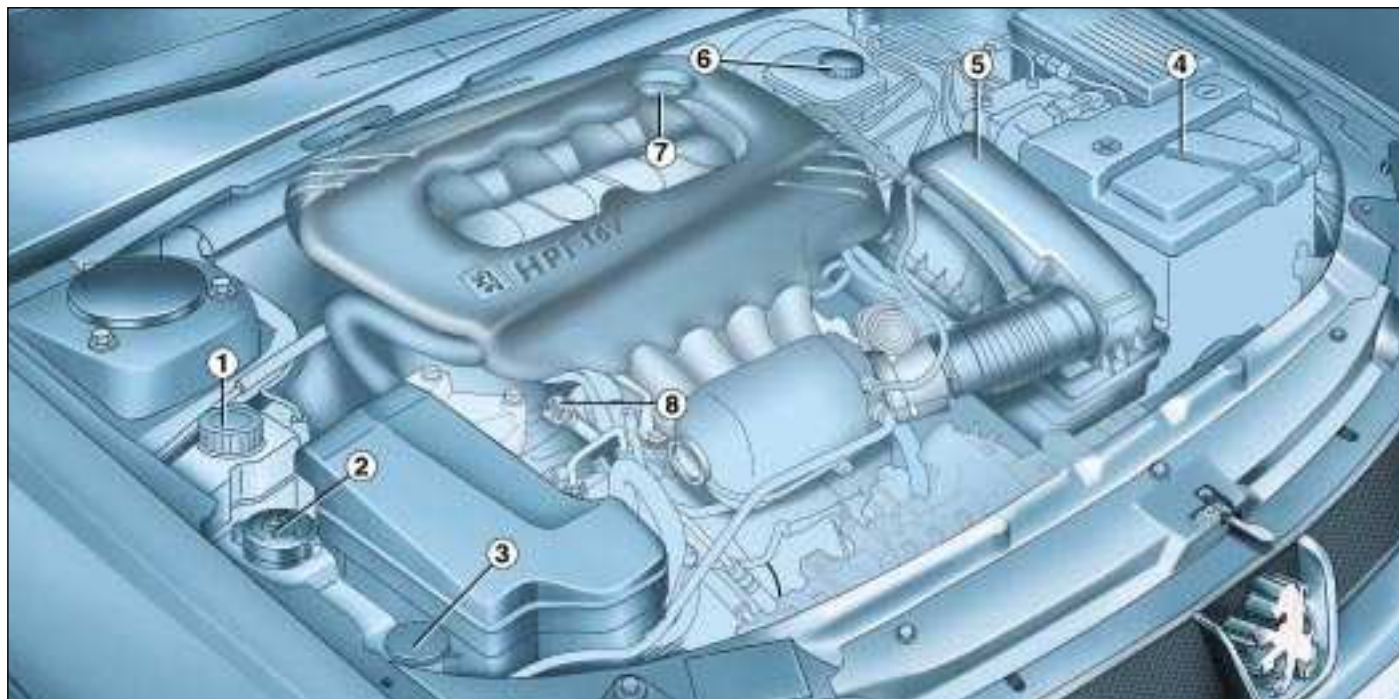

### 2 litre 16 valve HPI petrol injection engine

- 1 - Power steering reservoir.
- 2 - Coolant reservoir.

3 - Windscreen and headlamp\* wash reservoir.


- 4 - Battery.
- 5 - Air filter.

6 - Brake and clutch fluid reservoir.

- 7 - Engine oil filler cap.
- 8 - Dipstick.

\* According to destination.

## MAINTENANCE OF YOUR 406

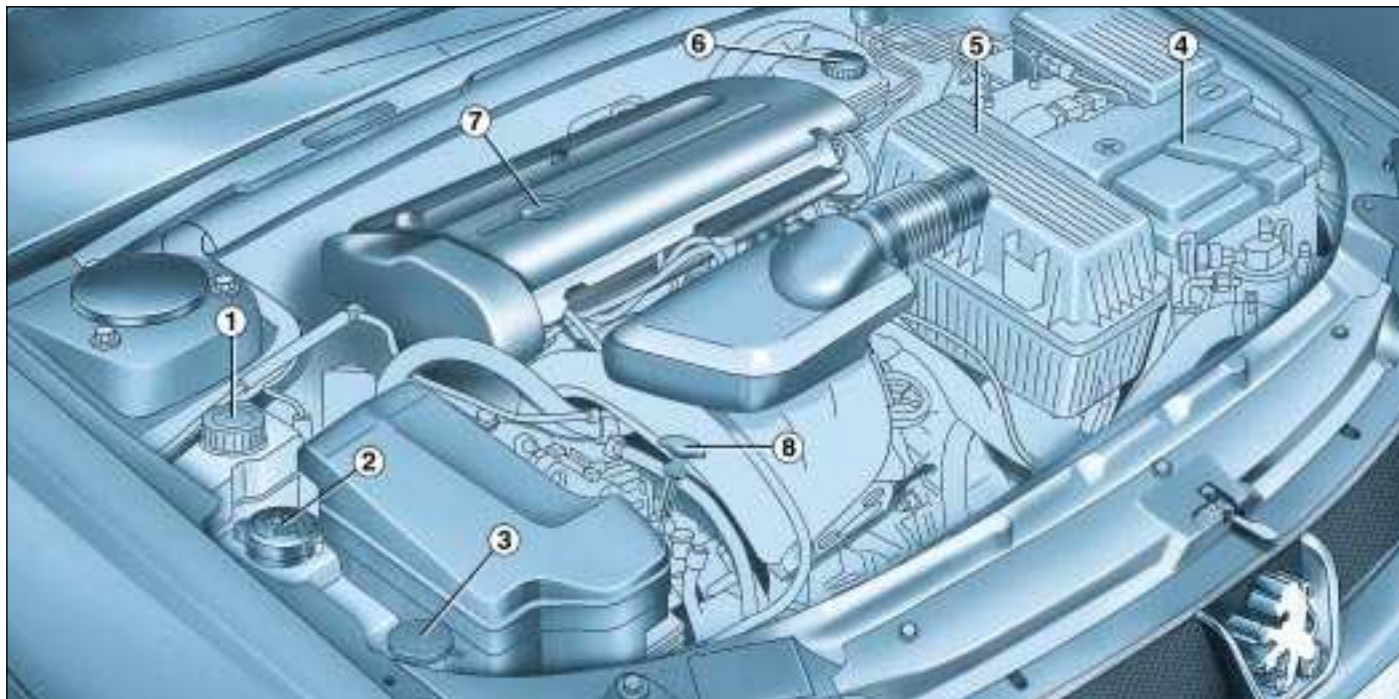

### 2.2 litre 16 valve petrol engine

1 - Power steering reservoir.

2 - Coolant reservoir.

3 - Windscreen and headlamp\*  
wash reservoir.

4 - Battery.

5 - Air filter.

6 - Brake and clutch fluid reservoir.


7 - Engine oil filler cap.

8 - Dipstick.

\* According to destination.



## MAINTENANCE OF YOUR 406

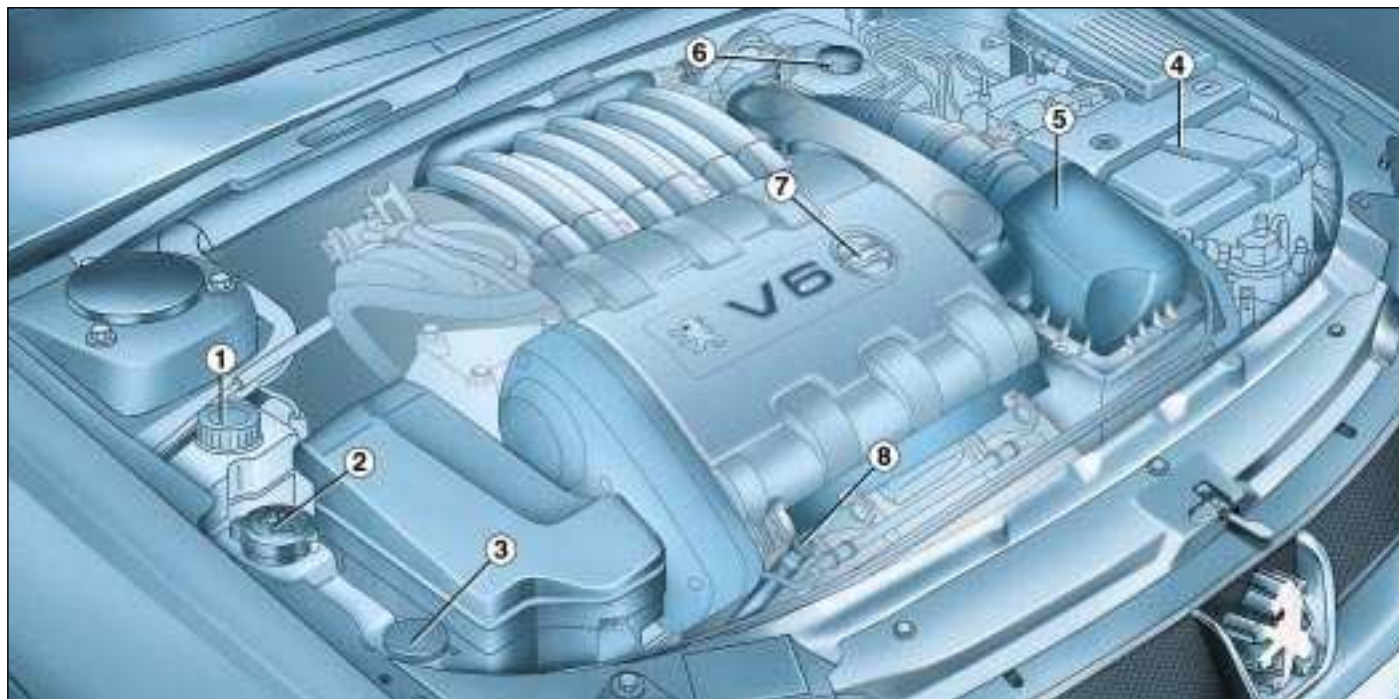

### 3 litre 24 valve V6 petrol injection engine

- 1 - Power steering reservoir.
- 2 - Coolant reservoir.

- 3 - Windscreen and headlamp\* wash reservoir.


- 4 - Battery.
- 5 - Air filter.

- 6 - Brake and clutch fluid reservoir.
- 7 - Engine oil filler cap.

- 8 - Dipstick.

\* According to destination.

## MAINTENANCE OF YOUR 406

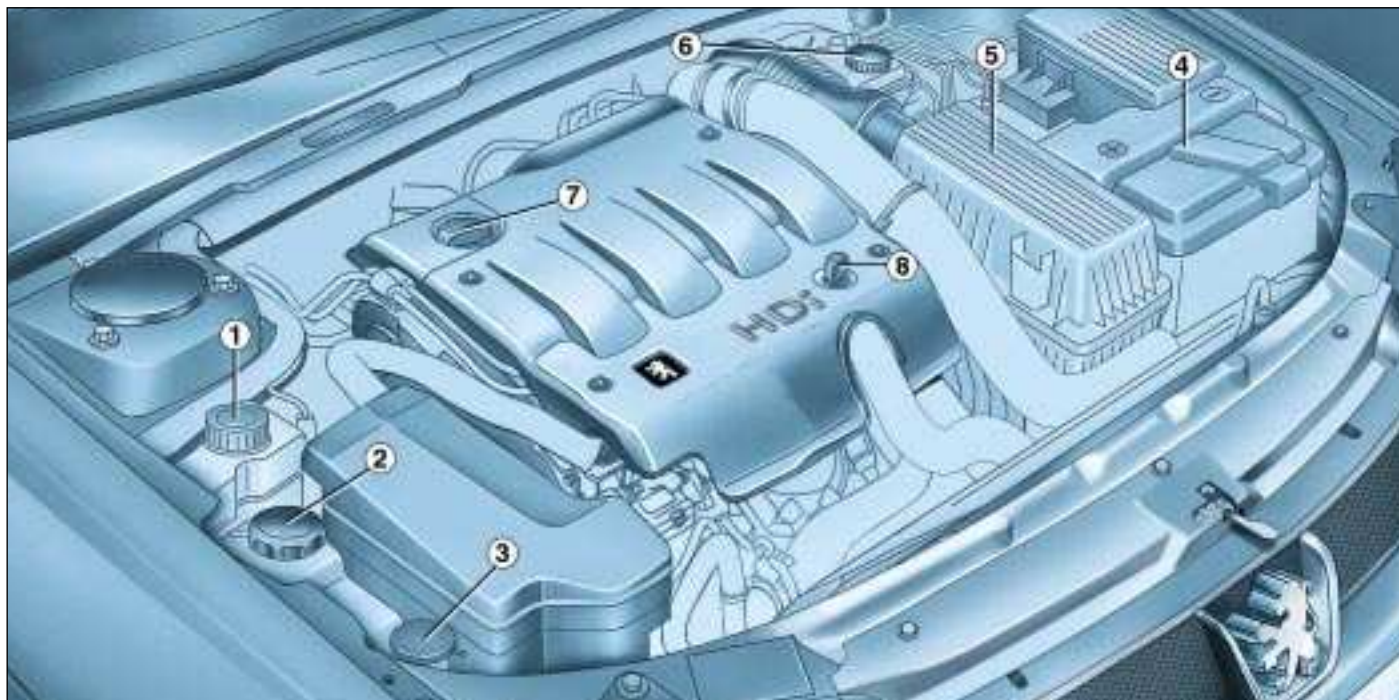

### 2 litre turbo diesel HDI engine (90 bhp/110 bhp)

- 1 - Power steering.
- 2 - Coolant reservoir.

3 - Windscreen and headlamp\*  
wash reservoir.

4 - Battery.

5 - Air filter.


6 - Brake and clutch fluid reservoir.

7 - Engine oil filler cap.

8 - Dipstick.

\* According to destination.

## MAINTENANCE OF YOUR 406

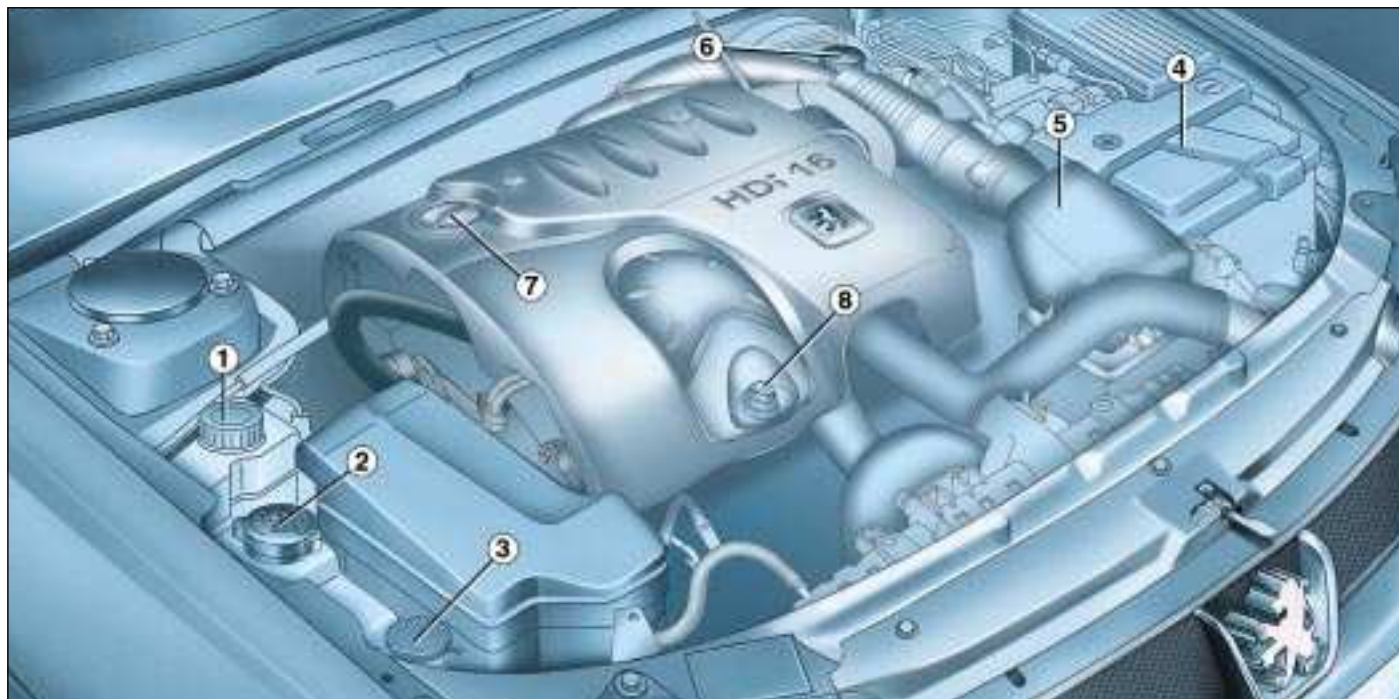

### 2.2 litre 16V turbo diesel HDI engine

1 - Power steering reservoir.

2 - Coolant reservoir.

3 - Windscreen and headlamp\* wash reservoir.

4 - Battery.

5 - Air filter.

6 - Brake and clutch fluid reservoir.

7 - Engine oil filler cap.

8 - Dipstick.

\* According to destination.

 
# MAINTENANCE OF YOUR 406

## CHECKING THE LEVELS

### Oil level

Check the level regularly and top up between changes. Maximum consumption is 0.5 litres per 600 miles (1 000 km).

The oil level should be checked with the vehicle level and the engine cold using the oil gauge or the dipstick.



### Dipstick

There are two marks on the dipstick:

**A** = maximum

Never fill past this mark.

**B** = minimum

To maintain the reliability of the engines and of the emission control systems, the use of additives in the engine oil is prohibited.

### Oil change

According to the information given in "PEUGEOT SERVICING".

**Note:** avoid any prolonged contact of used oil with the skin.

### Viscosity selection

In all cases, the oil selected must meet the manufacturer's requirements.

### Brakes and clutch level:

- The level should always be between the DANGER and MAX marks on the reservoir.
- If the level drops substantially, contact a PEUGEOT dealer immediately.

### Fluid change:

- must be carried out according to the manufacturer's servicing schedule.
- use fluids recommended by the manufacturer, which fulfil DOT 4 standards.

**Note:** the brake fluid is noxious and very corrosive. Avoid any contact with the skin.

### Coolant level

Use the fluid recommended by the manufacturer.

When the engine is warm, the temperature of the coolant is controlled by the engine fan. Because this fan can operate with the ignition off and because the cooling system is pressurised, wait for at least one hour after the engine has stopped before carrying out any work.

To avoid any risk of burns, slacken the cap to the first notch to release the pressure. When the pressure has dropped, remove the cap and top up the level.

### Used products

*Do not dispose of used oil, brake fluid or coolant down drains or on the ground.*

### Power steering fluid level

Open the reservoir with the engine cold. The level should always be above the MINI mark, close to the MAXI mark.

### Windscreen and headlamp\* wash fluid level

For best quality cleaning and for your safety, we recommend that you use products recommended by PEUGEOT.

\* According to destination.



# MAINTENANCE OF YOUR 406

## CHECKS

### Battery

At the start of winter, have your battery checked by a PEUGEOT dealer.

### Air filter

Regular replacement of the filter element is essential. **If you drive in very dusty conditions, change it twice as often.**

### Brake pads

Brake pad wear depends on the style of driving, in particular for vehicles that are used in town, for short journeys.

It may be necessary to check the thickness of the pads even between services.

### Handbrake

Where the handbrake travel is too great or there is a reduction in the performance of the system, the handbrake should be adjusted, even between services. Have the system checked by a PEUGEOT dealer.

### Manual gearbox

This does not need an oil change. Check the level according to the manufacturer's servicing schedule.

### Automatic gearbox

This does not need an oil change. Have the level checked by a PEUGEOT dealer according to the manufacturer's servicing schedule.

### Oil filter

Replace the cartridge regularly in accordance with the servicing schedule.



*Only use products recommended by Automobiles PEUGEOT.*

*To ensure best performance from components as important as the power steering and the braking system, PEUGEOT selects and offers quite specific products.*

# MAINTENANCE OF YOUR 406

## CHECKS

### Battery

At the start of winter, have your battery checked by a PEUGEOT dealer.

### Air filter

Regular replacement of the filter element is essential. **If you drive in very dusty conditions, change it twice as often.**

### Brake pads

Brake pad wear depends on the style of driving, in particular for vehicles that are used in town, for short journeys.

It may be necessary to check the thickness of the pads even between services.

### Handbrake

Where the handbrake travel is too great or there is a reduction in the performance of the system, the handbrake should be adjusted, even between services. Have the system checked by a PEUGEOT dealer.

### Manual gearbox

This does not need an oil change. Check the level according to the manufacturer's servicing schedule.

### Automatic gearbox

This does not need an oil change. Have the level checked by a PEUGEOT dealer according to the manufacturer's servicing schedule.

### Oil filter

Replace the cartridge regularly in accordance with the servicing schedule.



*Only use products recommended by Automobiles PEUGEOT.*

*To ensure best performance from components as important as the power steering and the braking system, PEUGEOT selects and offers quite specific products.*

## MAINTENANCE OF YOUR 406




### CHANGING A WHEEL

#### Access to the spare wheel and jack

**Saloon:** lift the boot carpet using the lifting hook. Secure the hook behind the boot seal.

**Estate:** unscrew the two carpet retaining screws a quarter turn using the ignition key or a coin. Lift the carpet and secure the retaining hook behind the tailgate seal.

**7-seater estate:** fold back the third row seat, then lift the carpet to gain access to the spare wheel.

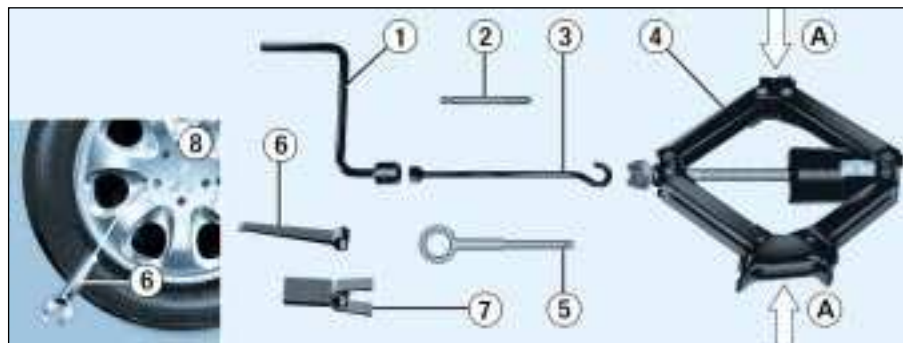

#### Tools

- 1 - Wheel brace.
- 2 - Centralising tool.
- 3 - Trim remover/wheel brace extension.
- 4 - Jack.
- 5 - Removable towing eye.
- 6 - Alloy wheel trim remover.
- 7 - Trim cap tool.

The tool holder supports the boot floor.

Reposition it to prevent any deformation of the floor when loaded.

Tighten the spare wheel securing strap to prevent noise and for your safety in the event of a frontal impact.

#### Removal

- Park the vehicle on level, stable and non-slippery ground.
- Apply the handbrake, engage first or reverse gear (position **P** for the automatic gearbox).
- Remove the wheel trim using the wheelbrace by pulling next to the valve. For vehicles fitted with alloy wheels **8**, remove the centre trim by using tool **6** in one of the holes.
- Loosen the wheel bolts.

For vehicles with alloy wheels **8**, remove the chrome trim caps beforehand (see page on 'special features of alloy wheels' in this section).

## MAINTENANCE OF YOUR 406



- The jack is fitted with a system which enables it to be folded or unfolded rapidly. Take the jack from the toolkit and fold it by pressing the ends **A**. Place the jack at one of the locations **E** underneath the vehicle (as close as possible to the wheel to be changed) and unfold it by pulling the ends **A**.
- Extend the jack using the wheelbrace **1** and the extension **3**.
- Take out a wheel bolt at the top and fit the centralising tool **2**.
- Loosen the wheel bolts and remove the wheel.

### Fitting a wheel

- Position the wheel using the centralising tool to assist you.
- Tighten the bolts by hand, and remove the centralising tool.
- Partly tighten the bolts using the wheelbrace.
- Fold the jack and remove it.
- Fully tighten the wheel bolts using the wheelbrace.
- Replace the wheel trim, except in the case of a space-saver wheel, by starting with the valve and pressing on using the palm of your hand.



*For your safety, always change the wheel:*

- on level, stable, non-slippery ground,
- with the handbrake applied,
- with first or reverse gear engaged (position **P** for the automatic gearbox).
- Never go underneath a vehicle which is supported only by a jack (use a ramp).


### After changing the wheel

- have the tightening of the bolts and the tyre pressure checked by a PEUGEOT dealer as soon as possible,
- have the punctured tyre repaired and refit it to the vehicle as soon as possible.

### 7 seater Estate model

*The space-saver spare wheel fitted with a 125/80R15 tyre must only be used as a short-term measure. Tyre pressure is 61 lb in<sup>2</sup> (4.2 bars), maximum speed is 50 mph (80 km/h).*

## MAINTENANCE OF YOUR 406

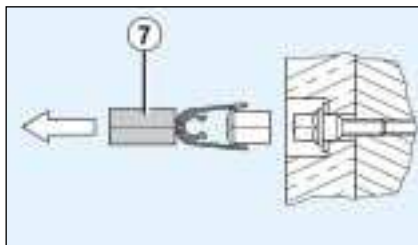


### Special features of alloy wheels

#### Bolt covers

Alloy wheel bolts are covered by chrome trims.

Use tool 7 to remove the trims before slackening the bolts.

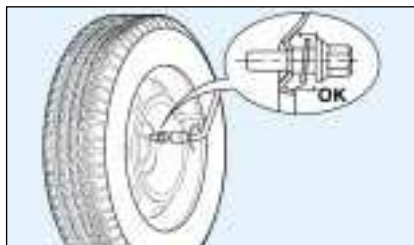


### Fitting the spare wheel

If your vehicle is fitted with a steel spare wheel, when fitting it, it is **normal** to notice when tightening the bolts that the washers do not come into contact with the rim. The spare wheel is secured by the cone-shape of each bolt.

### Fitting snow tyres

If you fit snow tyres mounted on steel wheels to your vehicle, it is **essential** to use special bolts available from your PEUGEOT dealer.

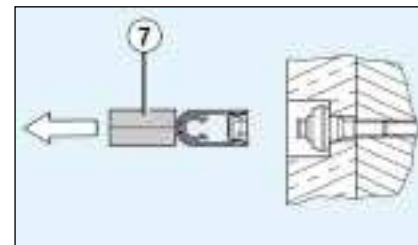


### Anti-theft bolts\*

If your wheels are fitted with an anti-theft bolt (one per wheel), the chrome trim and then the plastic cover must be removed using tool 7, before unscrewing the bolt using one of the two anti-theft sockets (which were given to you on delivery of your vehicle along with the duplicate keys and the confidential card) and the wheel brace 1.

**Note:** make a careful note of the code number engraved on the head of the anti-theft socket. This will enable you to obtain duplicate anti-theft sockets from a Peugeot dealer.

\* According to model and destination.

## PETROL/LPG TWIN FUEL VERSION

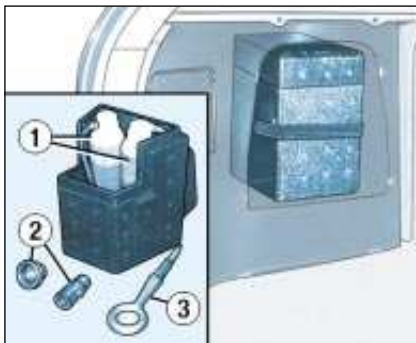

### Puncture

#### Insulated storage compartment

This is located in the boot and contains:

- the temporary tyre repair cans **1** (your 406 LPG does not have a spare wheel),
- the adaptors **2** necessary for filling the LPG tank in some countries,
- the towing eye **3**.



### Using the repair cans

(Refer to the directions on the cans also)

- if possible, remove the object which caused the puncture,
- rotate the wheel so that the valve is in the same position as the figures 2 or 10 on a clock,
- shake the cans vigorously before use. In very cold weather, warm the cans between your hands for few minutes,
- hold the valve with one hand and with the other press the injection nozzle on the can firmly onto the valve, holding it straight,
- maintain the pressure firmly for one minute,


- carry out the same operation with the second can, then drive immediately, **at a moderate speed**, to the nearest garage.

**The cans enable you to carry out a temporary repair.**

**After use, the tyre must be changed.**

**As the cans are pressurized, they must not be exposed to a temperature above 50 °C.**

**Store them away from heat in the insulated storage compartment.**

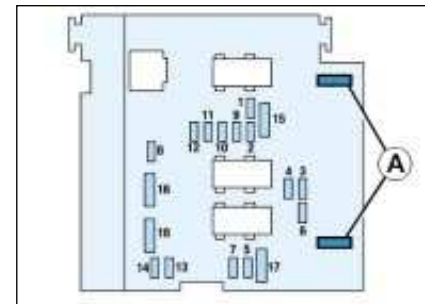

### Fuses

The LPG functions are protected by the two fuses **A** in the fuse box located in the engine compartment.

# MAINTENANCE OF YOUR 406



## CHANGING A BULB

### 1 - Dipped beam headlamps

### 2 - Main beam headlamps

#### 2 bulbs (H7-55 W)

- Press the tab and remove the protective cover corresponding to the faulty bulb.
- Disconnect the connector.
- Press the end of the securing clip to remove it. Change the bulb.
- When fitting, ensure that the direction notches are positioned correctly and that the securing clip is correctly fixed.
- Reconnect the connector.
- Refit the protective cover.

### 3 - Side lights (W 5 W)

Turn the socket using the lever and remove it. Change the bulb.

### 4 - Direction indicators (P 21 W)

Turn the bulb holder a quarter turn and remove it. Change the bulb.

**Note:** only handle H7 bulbs using a dry cloth.

To replace the left-hand bulbs, remove the protective battery cover.



## Direction indicator (WY 5 W)

- Pull the rear section of the transparent cover and release the assembly.
- Turn the connector a quarter turn and remove it.
- Change the bulb.




*Amber bulbs must be replaced by bulbs of identical specification and colour.*

*In certain weather conditions (low temperatures, humidity), the presence of condensation on the inside of the headlamp glass is normal; it disappears a few minutes after the lights have been switched on.*



## MAINTENANCE OF YOUR 406

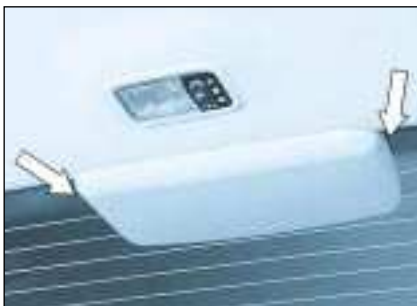


### Third brake light - saloon (5 W5W bulbs)

Lower the two metal clips on either side of the light and slide the cover towards the rear.

Remove the bulb-holder.

Change the faulty bulb.

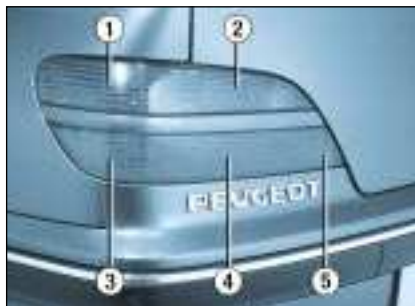

### Rear lights, saloon


**1 - Direction indicators (P 21 W).**

**2 - Reversing lights (P 21 W).**

**3 - Brake lights/Side lights (P 21/5 W).**

**4 - Side lights (P 21/5 W).**

**5 - Fog lamp (P 21 W).**

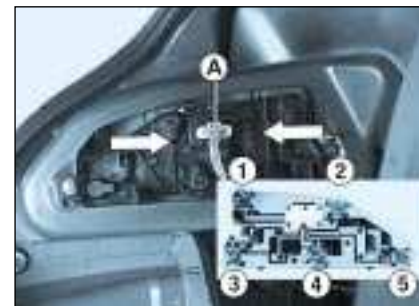


These 5 bulbs are changed from inside the boot:

- remove the retaining clips then release the carpet,
- remove the connector by pressing the tab **A**,
- remove the bulb holder by squeezing the tabs,
- change the faulty bulb.



## MAINTENANCE OF YOUR 406

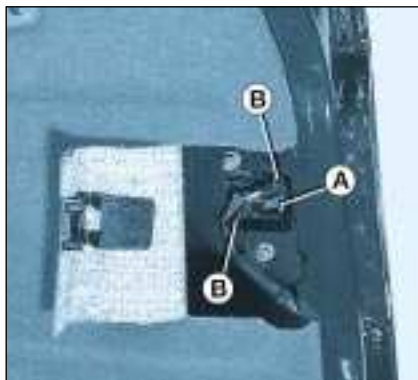

### Tailgate lights

Open the flap using the cut-out provided.

Disconnect the connector by releasing tab **A**.

Unscrew the two nuts.

Remove the light by squeezing the two tabs **B**.



Extract the bulb holder by pressing the tabs **C**.

Change the faulty bulb.

**1 - Side lights (P 21/5 W).**

**2 - Reversing lights (P 21 W).**

**3 - Fog lamp (P 21 W).**



### Number plate lights (W 5 W)

Remove the translucent protector.

Change the faulty bulb.

## MAINTENANCE OF YOUR 406



### Rear lights, estate

#### Wing lights

To remove the trim, pull the handle towards you and release the panel upwards.




Open the flap using the ignition key.  
 Remove the connector by pressing the metal bar **A**.  
 Unscrew the wing nut **B**.  
 Release the light.



To gain access to the bulbs, press the tabs and release the bulb holder.  
**1 - Brake/side lights (P 21/5 W).**  
**2 - Direction indicators (P 21 W).**  
 Change the faulty bulb.

## MAINTENANCE OF YOUR 406

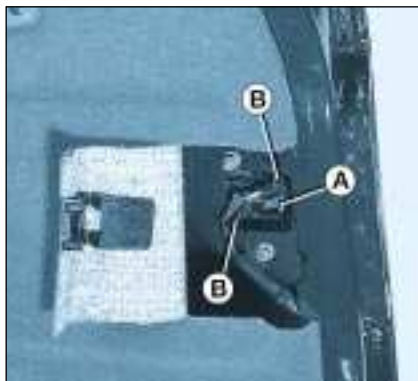

### Tailgate lights

Open the flap using the cut-out provided.

Disconnect the connector by releasing tab **A**.

Unscrew the two nuts.

Remove the light by squeezing the two tabs **B**.



Extract the bulb holder by pressing the tabs **C**.

Change the faulty bulb.

**1 - Side lights (P 21/5 W).**

**2 - Reversing lights (P 21 W).**

**3 - Fog lamp (P 21 W).**



### Number plate lights (W 5 W)

Remove the translucent protector.

Change the faulty bulb.

# MAINTENANCE OF YOUR 406



## CHANGING A FUSE

The fuse boxes are under the fascia and in the engine compartment.

### Fascia fuse box

Turn the three screws a quarter turn with a coin. Pull at **A** and tilt the cover to access the fuses.

## Removing and changing a fuse

Before changing a fuse you must find out the cause of the fault and have it put right. The fuse numbers are indicated on the fuse box.

Use the special pliers **A** attached to the box.

**Always change a faulty fuse for one of the same rating.**

Correct



Incorrect




Pliers A



Fuse n°.	Rating	Functions
<b>A</b>	<b>20 A</b>	Locking/Unlocking.
<b>B</b>	<b>10 A</b>	Rear fog lamps.
<b>C</b>	<b>40 A</b>	Demisting of mirrors.
<b>D</b>	<b>15 A</b>	Rear screen wiper.
<b>E</b>	<b>30 A</b>	Electric windows.
<b>F</b>	<b>15 A</b>	Supply to: Instrument panel, Display, Audio equipment, Satellite navigation system, Air conditioning.

Remove the fascia panel lower trim to access the built-in systems interface.

## MAINTENANCE OF YOUR 406

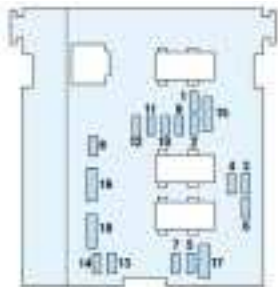

### Engine compartment fuses

#### Fuse box

To access the fuse box in the engine compartment (beside the battery), unclip the cover.

**Carefully close the cover when you have finished.**

Fuse N°	Rating	Functions
1*	10 A	Reversing lights - Double injection relay - Engine oil temperature - Oil level - Air conditioning compressor.
2*	15 A	Fuel pump - Canister solenoid valve.
3*	10 A	Electronic Control unit.
4*	10 A	Engine control unit and automatic gearbox.
5	10 A	Particulate Emission Filter control unit - Rear windscreen relay.
6	15 A	Front fog lamps.
7	20 A	Headlamp wash.
8*	20 A	Direct petrol injection engine control unit - Clutch pedal.
9*	15 A	Left-hand dipped beam lights.
10*	15 A	Right-hand dipped beam lights.



*The electrical system of your vehicle is designed to operate with standard or optional equipment.*

*Before installing other electrical equipment or accessories on your vehicle, contact a PEUGEOT dealer.*

*Some electrical accessories or the way in which they are fitted can have damaging effects on the operation of your vehicle; the electronic control circuits, the audio circuit and the battery charging circuit.*

*PEUGEOT will not accept responsibility for the cost incurred in repairing your vehicle or for rectifying the malfunctions resulting from the installation of accessories not supplied and not recommended by PEUGEOT and not installed in accordance with its instructions, in particular where the equipment in question consumes more than 10 milliamperes.*


*\* The maxi-fuses provide additional protection for the electrical systems. All work must be carried out by a PEUGEOT dealer.*

## MAINTENANCE OF YOUR 406

.....

Fuse N°	Rating	Functions
11*	10 A	Left-hand main beam.
12*	10 A	Right-hand main beam.
13*	15 A	Horn.
14	10 A	Front and rear screen wash pump.
15*	30 A	Ignition coil - Windscreen wiper - Oxygen sensor - Oil pressure - Injection system.
16*	30 A	Air pump and oil temperature - Oil level - Brake lights function - Alternator - Water in diesel detector - Injection relay control.
17*	30 A	Passenger's electric seat.
18	40 A	Heater blower - Starter - Windscreen wiper slow speed.

## PETROL/LPG TWIN FUEL VERSION

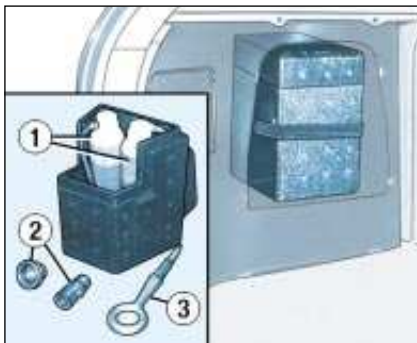

### Puncture

#### Insulated storage compartment

This is located in the boot and contains:

- the temporary tyre repair cans **1** (your 406 LPG does not have a spare wheel),
- the adaptors **2** necessary for filling the LPG tank in some countries,
- the towing eye **3**.



### Using the repair cans

(Refer to the directions on the cans also)

- if possible, remove the object which caused the puncture,
- rotate the wheel so that the valve is in the same position as the figures 2 or 10 on a clock,
- shake the cans vigorously before use. In very cold weather, warm the cans between your hands for few minutes,
- hold the valve with one hand and with the other press the injection nozzle on the can firmly onto the valve, holding it straight,
- maintain the pressure firmly for one minute,


- carry out the same operation with the second can, then drive immediately, **at a moderate speed**, to the nearest garage.

**The cans enable you to carry out a temporary repair.**

**After use, the tyre must be changed.**

**As the cans are pressurized, they must not be exposed to a temperature above 50 °C.**

**Store them away from heat in the insulated storage compartment.**

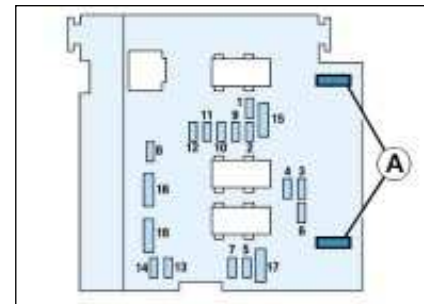

### Fuses

The LPG functions are protected by the two fuses **A** in the fuse box located in the engine compartment.

# MAINTENANCE OF YOUR 406



## CHANGING A FUSE

The fuse boxes are under the fascia and in the engine compartment.

### Fascia fuse box

Turn the three screws a quarter turn with a coin. Pull at **A** and tilt the cover to access the fuses.

## Removing and changing a fuse

Before changing a fuse you must find out the cause of the fault and have it put right. The fuse numbers are indicated on the fuse box.

Use the special pliers **A** attached to the box.

**Always change a faulty fuse for one of the same rating.**

Correct



Incorrect



Pliers A



Fuse n°.	Rating	Functions
<b>A</b>	<b>20 A</b>	Locking/Unlocking.
<b>B</b>	<b>10 A</b>	Rear fog lamps.
<b>C</b>	<b>40 A</b>	Demisting of mirrors.
<b>D</b>	<b>15 A</b>	Rear screen wiper.
<b>E</b>	<b>30 A</b>	Electric windows.
<b>F</b>	<b>15 A</b>	Supply to: Instrument panel, Display, Audio equipment, Satellite navigation system, Air conditioning.

Remove the fascia panel lower trim to access the built-in systems interface.



## MAINTENANCE OF YOUR 406

.....

### Fascia fuse box

Fuse N°	Rating	Functions
1	shunt	Central air bag.
2	5 A	Ventilation controls.
3	10 A	Instrument panel.
4	5 A	Ignition +ve signal for Built-in Systems Interface.
5	–	Not used.
6	10 A	Steering wheel controls.
7	15 A	Alarm siren.
8	10 A	Satellite navigation system.
9	5 A	Battery +ve signal for Built-in Systems Interface.
10	15 A	Audio equipment.
11	10 A	Third brake light.
12	10 A	Right-hand brake light.
13	20 A	Driver's electric window.
14	30 A	Rear window power.
15	–	Battery +ve towing socket.
16	20 A	Memorisation of seats.
17	20 A	Passenger's electric seat.
18	10 A	Lighter lighting - Display - Lighting for switches and ash tray - Automatic gearbox selector lever.

## MAINTENANCE OF YOUR 406

.....

Fuse N°	Rating	Functions
19	10 A	Rear fog lamps.
20	10 A	Rear right and front left side light.
21	10 A	Rear left and front right side light.
22	10 A	Glove box lighting - Map reading light - Courtesy mirror light - Front and rear courtesy lights - Lighting for electric windows pad and Electrochrome rear view mirror.
23	20 A	Lighter.
24	–	Not used.
25	20 A	Audio equipment.
26	–	Not used.
27	5 A	Rear window relay.
28	15 A	Heated seats.
R	5 A	Replacement fuse.
R2	10 A	Replacement fuse.
R3	30 A	Replacement fuse.
R4	20 A	Replacement fuse.
R5	15 A	Replacement fuse.

## MAINTENANCE OF YOUR 406

### BATTERY

#### To charge the battery using a battery charger:

- Disconnect the battery,
- Follow the instructions for use given by the battery charger manufacturer,
- Reconnect starting with the negative (–) terminal,
- Check that the terminals and connectors are clean. If they are covered with sulphate (white or greenish deposit), disconnect them and clean them.

#### To start the vehicle from another battery:

- Connect the red cable to the positive (+) terminals of the two batteries,
- Connect one end of the green or black cable to the negative (–) terminal of the slave battery,
- Connect the other end of the green or black cable to an earth point on the broken down vehicle, as far as possible from the battery,

Operate the starter, let the engine run.

Wait for the engine to return to idle, then disconnect the cables.

**It is advisable to disconnect the battery if the vehicle is not to be used for a period of more than one month.**

### Economy mode

With the engine switched off and the ignition key in the "running" or "accessories" position for about half an hour, certain electrical equipment (displays, instrument panel, warning lights, courtesy lights, electric windows, wipers etc.) will switch off automatically to avoid draining the battery.

Once the electrical equipment goes into economy mode, it is necessary to start the engine to enable the equipment to work again.



- *Never disconnect a terminal when the engine is running.*
- *Never charge a battery without first disconnecting the terminals.*
- *Close the sunroof before disconnecting the battery. If it does not operate normally following re-connection of the battery, you must re-initialise it by turning the control to the maximum tilt position and pressing it for a few seconds.*
- *After every reconnection of the battery, switch on the ignition and wait 1 minute before starting to allow the electronic systems to be initialised. If slight difficulties are experienced after this, please contact a PEUGEOT dealer.*

## MAINTENANCE OF YOUR 406

### FITTING AUDIO EQUIPMENT

Your vehicle is equipped with certain factory-fitted audio equipment:


- roof aerial,
- coaxial aerial cable,
- basic interference suppression,
- supply to front speakers,
- supply to rear speakers and tweeters,
- two 8-way connectors.

### FITTING THE SPEAKERS

The factory-fitted equipment allows you to fit:

- 165 mm diameter speakers to the front doors,
- 55 mm diameter tweeters to the fascia,
- special elliptical-shaped speakers at the rear of the saloon,
- 100 mm diameter speakers at the rear of the estate.

Contact your PEUGEOT dealer.

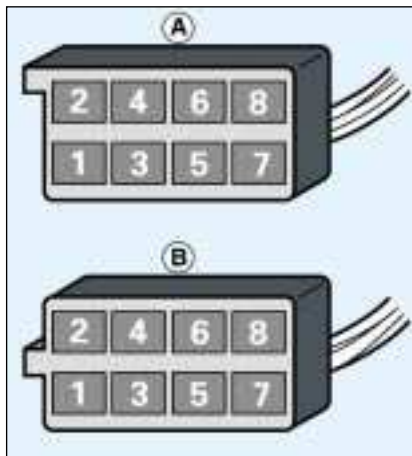

### Wiring positions and functions

- A1** : Spare.
- A2** : Do not use.
- A3** : Do not use.
- A4** : Do not use.
- A5** : Spare.
- A6** : **(+ve)** Accessories.
- A7** : **(+ve)** Permanent.
- A8** : Earth.

- B1** : **(+ve)** Rear right loud-speaker.
- B2** : **(-ve)** Rear right loud-speaker.
- B3** : **(+ve)** Front right loud-speaker and tweeter.
- B4** : **(-ve)** Front right loud-speaker and tweeter.
- B5** : **(+ve)** Front left loud-speaker and tweeter.
- B6** : **(-ve)** Front left loud-speaker and tweeter.
- B7** : **(+ve)** Rear left loud-speaker.
- B8** : **(-ve)** Rear left loud-speaker.

## MAINTENANCE OF YOUR 406



### TOWING YOUR VEHICLE

#### Without lifting (4 wheels on the road)

You should always use a tow bar.

The towing eye is inside the spare wheel.

#### From the front:

Lift the cover using the flat part of the towing eye.

Screw in the towing eye until it locks.

#### From the rear:

Unclip the cover by passing your hand behind the bumper and pushing.

Screw in the towing eye until it locks.

#### Lifting (2 wheels on the road only)

It is preferable to raise the vehicle by the wheels.

**Never use the radiator crossmember.**

### Special features of the automatic gearbox

When towing with four wheels on the ground, the following rules must be obeyed:

- gear lever in position **N**,
- tow the vehicle at less than 30 m.p.h. (50 km/h) over a maximum distance of 30 miles (50 km).
- do not add oil to the gearbox.

## MAINTENANCE OF YOUR 406

---

### **TOWING A TRAILER, CARAVAN, BOAT ETC.**

Only use original PEUGEOT tow bars that have been tested and approved from the design stage of your vehicle.

The tow bar must be fitted by a PEUGEOT dealer.

Your vehicle is basically designed for transporting people and luggage but it may also be used for towing a trailer.

Driving with a trailer subjects the vehicle to more significant stress and its driver must be particularly careful.

Air density decreases with altitude, thus reducing engine performance. The maximum towing load must be reduced by 10 % for every 1 000 metres of altitude.

### **Driving advice**

**Distribution of loads:** Distribute the load in the trailer so that the heaviest items are as close as possible to the axle and the nose weight approaches the maximum permitted without exceeding it.

**Cooling:** Towing a trailer on a slope increases the temperature of the coolant.

As the fan is electrically controlled, its cooling capacity is not dependent on the engine speed.

On the contrary, use a high gear to lower the engine speed, and reduce your speed.

The maximum towing speed on a long slope depends on the gradient and the outside temperature.

For vehicles fitted with a direct injection petrol engine, after towing or driving at high speed for a long period of time, the fan may operate for approximately 6 minutes.

In all cases, pay attention to the coolant temperature.

If the warning light comes on, stop the vehicle and switch off the engine as soon as possible.

**Tyres:** Check the tyre pressures of the towing vehicle and the trailer, observing the recommended pressures.

**Brakes:** Towing increases the braking distance.

**Lights:** Check the electrical signalling on the trailer.

**Side wind:** Take into account the increased sensitivity to side wind.

## MAINTENANCE OF YOUR 406



### FITTING ROOF BARS

When fitting transverse roof bars to the estate, ensure that they are positioned correctly.

The correct positions are shown by marks on each of the longitudinal bars.

Use accessories approved by Automobiles PEUGEOT and follow the manufacturer's fitting instructions.

#### Maximum authorised weight on the roof rack

**Saloon: 165 lbs. (75 kg)**

**Estate: 220 lbs. (100 kg)**




### Removing the mat

When removing the mat on the driver's side, move the seat as far back as possible and remove the fixings.

When refitting the mat, position it and replace the fixings by turning them a quarter of a turn.

## MAINTENANCE OF YOUR 406

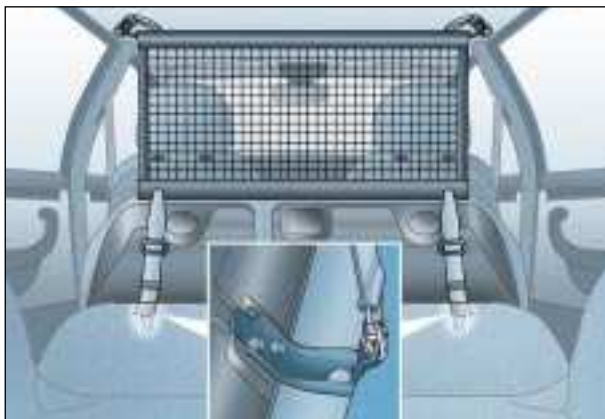

**FRONT POSITION**



**REAR POSITION**

### **HEAVY DUTY LUGGAGE NET (Estate)**

The heavy duty luggage net may be installed behind the front seats (**in the front position**) or behind the rear seats (**in the rear position**).

#### **Luggage net fixings in the front position**

- Fold down the rear seats (see section on 'Rear seats, Estate').
- Open the corresponding top fixings.
- Detach the anchor points.
- Locate the ends of the metal bar in these fixings.
- Fix the two hooks of the inside straps of the net in the stowing holes provided on the frame brackets of the rear seats.
- Tighten the two straps.

#### **Luggage net fixings in the rear position**

- Remove the rear parcel shelf.
- Open the corresponding top fixings.
- Detach the anchor points.
- Locate the ends of the metal bar in these fixings.
- Fix the two hooks of the inside straps of the net in the stowing holes on the floor.
- Tighten the two straps.

**Note:** The stowing rings are located perpendicular to the corresponding top fixings.



## MAINTENANCE OF YOUR 406

---

### 406 ACCESSORIES

For your PEUGEOT only use accessories and original parts approved by the manufacturer.

These accessories and parts are all adapted to your PEUGEOT, after being tested and approved for reliability and safety, which PEUGEOT cannot guarantee for other products.

A wide choice of original accessories, approved by PEUGEOT, is available through the dealer network. They all carry the PEUGEOT guarantee.

- **Security** : Alarms, window engraving, wheel anti-theft devices, first aid kit etc.
- **Protection** : Covers compatible with side air bags, mats, door sill protector, styling strips.
- **Communication** : Telephone, satellite navigation, audio equipment, CD changer, speakers.
- **Customising** : Alloy wheels, wheel trims, spoiler, sports exhaust.
- **Comfort** : Air conditioning, sun roofs\*, storage facilities, portable refrigerator, luggage net, telephone console, armrest, door sill protector, boot storage, door deflectors.
- **Leisure pursuits** : Tow bar, roof bars, carriers (for bicycles and skis), roof boxes, snow chains etc.
- **Children** : Booster seats and child seats, side blinds, rear blinds.
- **Maintenance products** : Windscreen washer fluid, internal and external cleaning and maintenance products.



\* As the fitting of a sun roof may require cutting of the roof strengthener, it is essential to use original PEUGEOT products only.

## TECHNICAL DATA

MODELS: Model codes	PETROL ENGINES			
	8B6FZ 8E6FZ 8F6FZ		8BRFN 8ERFN 8FRFN	
<b>ENGINES</b>	<b>1.8 Litre 16V</b>		<b>2 Litre 16V</b>	
Capacity (cm <sup>3</sup> )	1 749		1 997	
Bore x stroke	82.7 x 81.4		85 x 88	
Number of valves	16		16	
Max. power: EU standard (KW)	85		100	
Max. power at engine speed (r.p.m)	5 500		6 000	
Max. torque: EU standard (Nm)	160		190	
Max. torque at engine speed (r.p.m)	4 000		4 100	
Fuel	Unleaded		Unleaded	
Catalytic converter	Yes		Yes	
Electronic injection	Yes		Yes	
<b>GEARBOX</b>	Manual (5-speed)	Automatic (4-speed)	Manual (5-speed)	Automatic (4-speed)
<b>CAPACITIES (in litres)</b>				
Engine (with filter replacement)	4.25	4.25	4.25	4.25
Gearbox - Final drive	1.9	–	1.9	–

# TECHNICAL DATA

MODELS: Model codes	PETROL ENGINES	
	8BR6F 8ER6F	8BRLZ 8ERLZ 8FRLZ
<b>ENGINES</b>	<b>2 Litre 16V</b>	<b>2 litre HPI 16V</b>
Capacity (cm <sup>3</sup> )	1 997	1 997
Bore x stroke	85 x 88	85 x 88
Number of valves	16	16
Max. power: EU standard (KW)	100	103
Max. power at engine speed (r.p.m)	6 000	6 000
Max. torque: EU standard (Nm)	190	192
Max. torque at engine speed (r.p.m)	4 100	4 000
Fuel	Leaded	Unleaded
Catalytic converter	Yes	Yes
Electronic injection	Yes	Yes
<b>GEARBOX</b>	Manual (5-speed)	Manual (5-speed)
<b>CAPACITIES (in litres)</b>		
Engine (with filter replacement)	4.25	4.25
Gearbox - Final drive	1.9	1.9

## TECHNICAL DATA

MODELS: Model codes	PETROL ENGINES		
	8B3FZ 8E3FZ 8F3FZ	8BXXFX 8EXFX	
<b>ENGINES</b>	<b>2.2 Litre 16V</b>	<b>24V V6 Injection</b>	
Capacity (cm <sup>3</sup> )	2 230	2 946	
Bore x stroke	86 x 96	87 x 82.6	
Number of valves	16	24	
Max. power: EU standard (KW)	116	152	
Max. power at engine speed (r.p.m)	5 650	6 000	
Max. torque: EU standard (Nm)	217	285	
Max. torque at engine speed (r.p.m)	3 900	3 750	
Fuel	Unleaded	Unleaded	
Catalytic converter	Yes	Yes	
Electronic injection	Yes	Yes	
<b>GEARBOX</b>	Manual (5-speed)	Manual (5-speed)	Automatic (4-speed)
<b>CAPACITIES (in litres)</b>			
Engine (with filter replacement)	4.25	4.75	4.75
Gearbox - Final drive	1.85	1.85	—

# TECHNICAL DATA

MODELS: Model codes	DIESEL ENGINES				
	8BRHY 8ERHY 8FRHY	8BRHZ/S 8ERHZ/S 8FRHZ/S		8BRHS 8ERHS 8FRHS	8B4HX 8E4HX 8F4HX
<b>ENGINES</b>	<b>Diesel Turbo 2 Litre HDI</b>	<b>Diesel Turbo 2 Litre HDI</b>			<b>Diesel Turbo 2.2 litre 16V HDI</b>
Capacity (cm <sup>3</sup> )	1 997	1 997			2 179
Bore x stroke	85 x 88	85 x 88			85 x 96
Number of valves	8	8			16
Max. power: EU standard (KW)	66	80/79		79	98
Max. power at engine speed (r.p.m)	4 000	4 000			4 000
Max. torque: EU standard (Nm)	205	250			314
Max. torque at engine speed (r.p.m)	1 900	1 750			2 000
Fuel	Diesel	Diesel			Diesel
Catalytic converter	Yes	Yes			Yes
Electronic injection	Electronic	Electronic			Electronic
<b>Particulate emission filter (PEF)</b>	No	No	Yes	Yes	Yes
<b>GEARBOX</b>	Manual (5-speed)	Manual (5-speed)	Automatic (4-speed)	Manual (5-speed)	Manual (5-speed)
<b>CAPACITIES (in litres)</b>					
Engine (with filter replacement)	4.5	4.5	4.5	4.5	4.5
Gearbox - Final drive	1.9	1.85	–	–	1.85

## PETROL/LPG TWIN FUEL VERSION

Models	Saloon	Estate/Family estate
<b>Model codes</b>	<b>8B6FZ</b>	<b>8E6FZ/8F6FZ</b>
<b>Engine</b> Cubic capacity (cm <sup>3</sup> ) Bore x stroke Number of valves Max. power: EU standard (KW) LPG max. power: EU standard (KW) Max. torque: EU standard (Nm) Fuel Catalytic converter Electronic injection	<b>1.8 litre 16V</b>  1 749 82.7 x 81.4 16 85 to 5 500 rpm 80 to 5 500 rpm 160 to 4 000 rpm Unleaded/LPG Yes Yes	
<b>Gearbox</b>	Manual (5-speed)	
<b>Petrol/LPG consumption (in litres)</b>  Urban driving Inter-urban driving Mixed driving Emission of CO <sub>2</sub> by mass	10.6/14.4 6.0/8.1 7.7/10.4 182/168	10.8/14.8 6.2/8.5 7.9/10.8 187/174
<b>Weights and towing weights (in kg)</b>  Kerb weight Gross vehicle weight (GVW) Gross train weight (GTW) Braked trailer weight (within GTW limit) Recommended nose weight	1 472 1 855 3 055 1 200 80	1 527 2 015 3 215 1 200 80

## TECHNICAL DATA

Consumption, saloon			As per directive 99/100 in M.P.G. (litres/100 km)			
Engine	Model codes driving	Gearbox	Urban driving	Inter-urban	Mixed driving	Emission of CO <sub>2</sub> by mass
1.8 litre 16 valve	Manual	8B6FZ	26.6 (10.6)	47.1 (6.0)	36.7 (7.7)	182 g/km
1.8 litre 16 valve	Automatic	8B6FZ	22.9 (12.3)	45.6 (6.2)	33.6 (8.4)	201 g/km
2 litre 16 valve	Manual	8BRFN	24.6 (11.5)	43.5 (6.5)	34.0 (8.3)	197 g/km
2 litre 16 valve	Automatic	8BRF/N	22.9 (12.3)	43.5 (6.5)	32.8 (8.6)	206 g/km
2 litres 16 valve	Manual	8BR6F	–	–	–	–
2 litre 16 valve HPI	Manual	8BRLZ	27.4 (10.3)	47.1 (6.0)	37.6 (7.5)	177 g/km
2.2 litre 16V	Manual	8B3FZ	22.0 (12.8)	43.5 (6.5)	32.1 (8.8)	210 g/km
V6 24 valve	Manual	8BXXFX	20.6 (13.7)	39.2 (7.2)	29.4 (9.6)	229 g/km
V6 24 valve	Automatic	8BXXFX	19.7 (14.3)	37.6 (7.5)	28.2 (10)	238 g/km
2 litre HDI	Manual	8BRHY	38.2 (7.4)	64.2 (4.4)	51.4 (5.6)	148 g/km
2 litre HDI	Manual	8BRHZ/S	37.6/37.0 (7.5/7.6)	62.8/61.7 (4.5/4.6)	50.4/49.6 (5.6/5.7)	147/149 g/km
2 litre HDI	Automatic	8BRHZ	31.7 (8.9)	55.4 (5.1)	43.5 (6.5)	173 g/km
2.2 litre HDI 16V	Manual	8B4HX	32.1 (8.8)	57.6 (4.9)	44.1 (6.4)	168 g/km

Fuel consumption values correct at time of printing.

## TECHNICAL DATA

Consumption, estate			As per directive 99/100 in M.P.G. (litres/100 km)			
Engine	Model codes driving	Gearbox	Urban driving	Inter-urban	Mixed driving	Emission of CO <sub>2</sub> by mass
1.8 litre 16V	Manual	8E6FZ 8F6FZ	26.2 (10.8)	45.6 (6.2)	35.8 (7.9)	187 g/km
1.8 litre 16V	Automatic	8E6FZ 8F6FZ	22.8 (12.4)	44.1 (6.4)	32.8 (8.6)	206 g/km
2 litre 16 valve	Manual	8ERFN 8FRFN	24.6 (11.5)	42.8 (6.6)	33.6 (8.4)	200 g/km
2 litre 16 valve	Automatic	8ERFN 8FRFN	22.9 (12.3)	42.8 (6.6)	32.4 (8.7)	208 g/km
2.2 litre 16 valve	Manual	8ER6F	–	–	–	–
2 litre HPI 16V	Manual	8ERLZ 8FRLZ	27.2 (10.4)	45.6 (6.2)	36.7 (7.7)	185 g/km
2.2 litre 16 valve	Manual	8E3FZ 8F3FZ	22.0 (12.8)	40.4 (6.7)	31.8 (8.9)	212 g/km
V6 24 valve	Manual	8EXFX 8FXFX	20.3 (13.9)	38.1 (7.4)	28.8 (9.8)	234 g/km
V6 24 valve	Automatic	8EXFX 8FXFX	19.4 (14.5)	36.6 (7.7)	27.6 (10.2)	243 g/km
2 litre HDI	Manual	8ERHY 8FRHY	37.8 (7.5)	61.7 (4.6)	49.6 (5.7)	151 g/km
2 litre HDI	Manual	8ERHZ/S 8FRHZ/S	37.7 (7.5/-)	60.1 (4.7/-)	49.6 (5.7/-)	156/- g/km
2 litre HDI	Automatic	8ERHZ 8FRHZ	30.4 (9.3)	54.3 (5.2)	42.2 (6.7)	178 g/km
2.2 litre HDI 16V	Manual	8E4HX 8F4HX	32.1 (8.8)	55.4 (5.1)	43.5 (6.5)	170 g/km

Fuel consumption values correct at time of printing.



## TECHNICAL DATA

### Weights and towing weights (in kg), SALOON

Engines	1.8 litre 16 valve	1.8 litre 16 valve	1.8 litre 16 valve	2 litre 16 valve	2 litre 16 valve	2 litre HPI 16V	2.2 litre 16 valve	V6 24 valve
<b>Gearbox</b>	Manual	Manual	Auto	Manual	Auto	Manual	Manual	Manual
<b>Model codes: 8B</b>	LFY	6FZ	6FZ	RFN	RFN	RLZ	3FZ	XFX
• Kerb weight	1 260	1 315	1 340	1 350	1 370	1 340	1 370	1 455
• Gross vehicle weight (GVW)	1 790	1 855	1 880	1 890	1 910	1 880	1 910	1 995
• Gross train weight (GTW)*	2 990	3 055	2 980	3 090	3 110	3 080	3 110	3 295
• Braked trailer weight (within GTW limit)	1 500	1 300	1 300	1 500	1 500	1 500	1 500	1 500
• Recommended nose weight	80	80	80	80	80	80	80	80

Engines	V6 24 valve	2 litre HDI	2 litre HDI	2 litre HDI	2.2 litre HDI 16V			
<b>Gearbox</b>	Auto.	Manual	Manual	Auto.	Manual			
<b>Model codes: 8B</b>	XFX	RHY	RHZ	RHZ	4HX			
• Kerb weight	1 475	1 300	1 410	1 400	1 410			
• Gross vehicle weight (GVW)	2 015	1 870	1 950	1 940	1 950			
• Gross train weight (GTW)*	3 315	3 070	3 150	3 450	3 150			
• Braked trailer weight (within GTW limit)	1 500	1 500	1 500	1 500	1 500			
• Recommended nose weight	80	80	80	80	80			

\* The speed of a towing vehicle is limited to 60 m.p.h. (100 km/h).

# TECHNICAL DATA

## Weights and towing weights (in kg), ESTATE

Engines	1.8 litre 16 valve	1.8 litre 16 valve	2 litre 16 valve	2 litre 16 valve	2 litre HPI 16 valve	2.2 litre 16 valve	V6 16 valve	V6 16 valve
<b>Gearbox</b>	<b>Manual</b>	<b>Auto.</b>	<b>Manual</b>	<b>Auto.</b>	<b>Manual</b>	<b>Manual</b>	<b>Manual</b>	<b>Auto.</b>
<b>Model codes: 8E</b>	<b>6FZ</b>	<b>6FZ</b>	<b>RFN</b>	<b>RFN</b>	<b>RLZ</b>	<b>3FZ</b>	<b>XFZ</b>	<b>XFZ</b>
• Kerb weight	1 365	1 395	1 400	1 420	1 400	1 420	1 505	1 525
• Gross vehicle weight (GVW)	2 015	2 045	2 050	2 070	2 050	2 070	2 155	2 175
• Gross train weight (GTW)*	3 215	3 245	3 250	3 270	3 250	3 270	3 455	3 475
• Braked trailer weight (within GTW limit)	1 500	1 500	1 500	1 500	1 500	1 500	1 500	1 500
• Recommended nose weight	80	80	80	80	80	80	80	80

Engines	2 litre HDI	2 litre HDI	2 litre HDI	2.2 litre HDI 16 valve				
<b>Gearbox</b>	<b>Manual</b>	<b>Manual</b>	<b>Auto.</b>	<b>Manual</b>				
<b>Model codes: 8E</b>	<b>RHY</b>	<b>RHZ</b>	<b>RHZ</b>	<b>4HX</b>				
• Kerb weight	1 380	1 425	1 460	1 460				
• Gross vehicle weight (GVW)	2 030	2 075	2 110	2 110				
• Gross train weight (GTW)*	3 230	3 275	3 310	3 310				
• Braked trailer weight (within GTW limit)	1 500	1 500	1 500	1 500				
• Recommended nose weight	80	80	80	80				

\* The speed of a towing vehicle is limited to 60 m.p.h. (100 km/h).

## TECHNICAL DATA

.....

### Weights and towing weights (in kg), 7-SEATER ESTATE


Engines	1.8 litre 16 valve	1.8 litre 16 valve	2 litre 16 valve	2 litre 16 valve	2 litre HPI 16V	2.2 litre 16 valve	2 litre HDI	2 litre HDI
<b>Gearbox</b>	<b>Manual</b>	<b>Auto.</b>	<b>Manual</b>	<b>Auto.</b>	<b>Manual</b>	<b>Manual</b>	<b>Manual</b>	<b>Manual</b>
<b>Model codes: 8F</b>	<b>6FZ</b>	<b>6FZ</b>	<b>RFN</b>	<b>RFN</b>	<b>RLZ</b>	<b>3FZ</b>	<b>RHY</b>	<b>RHZ</b>
• Kerb weight	1 405	1 425	1 420	1 440	1 405	1 440	1 400	1 445
• Gross vehicle weight (GVW)	2 035	2 050	2 050	2 070	2 035	2 070	2 030	2 125
• Gross train weight (GTW)*	3 235	3 255	3 250	3 270	3 235	3 270	3 230	3 325
• Braked trailer weight (within GTW limit)	1 500	1 500	1 500	1 500	1 500	1 500	1 500	1 500
• Recommended nose weight	80	80	80	80	80	80	80	80

Engines	2 litre HDI	2 litre HDI 16 valve						
<b>Gearbox</b>	<b>Auto.</b>	<b>Manual</b>						
<b>Model codes: 8F</b>	<b>RHZ</b>	<b>4HX</b>						
• Kerb weight	1 460	1 465						
• Gross vehicle weight (GVW)	2 140	2 145						
• Gross train weight (GTW)*	3 340	3 345						
• Braked trailer weight (within GTW limit)	1 500	1 500						
• Recommended nose weight	80	80						




\* The speed of a towing vehicle is limited to 60 m.p.h. (100 km/h).

# TECHNICAL DATA

Dimensions, saloon (in mm)

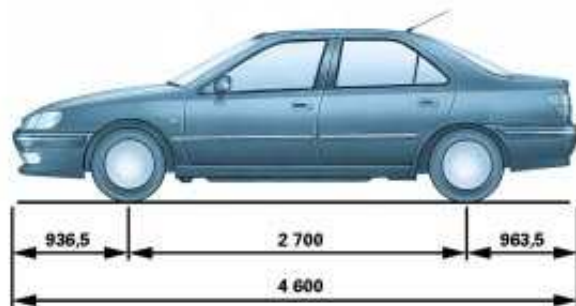


Dimensions, estate (in mm)

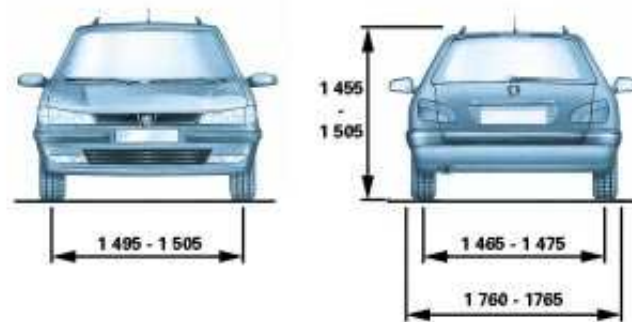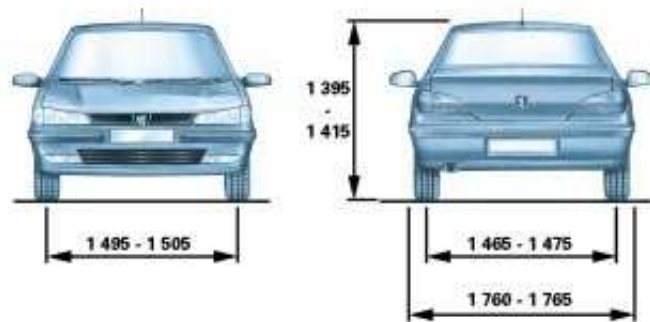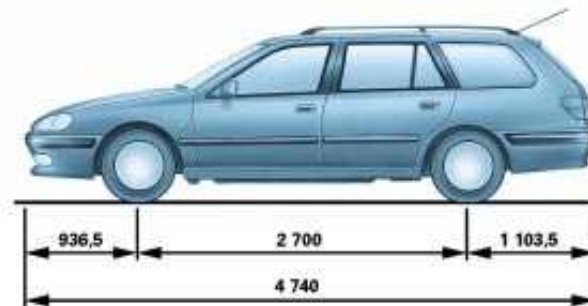

## TECHNICAL DATA

---

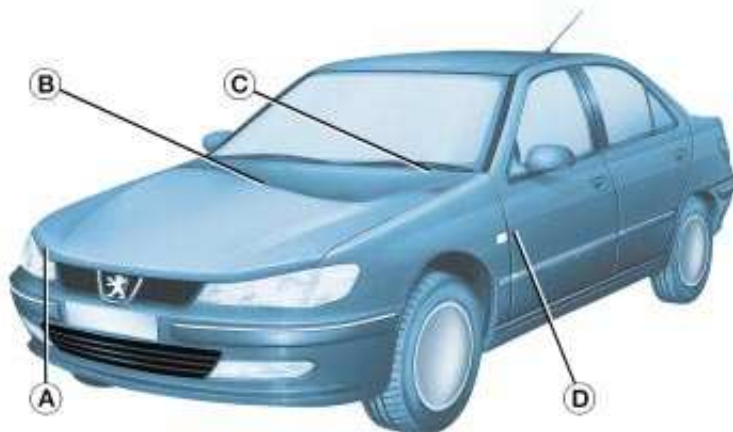

### THE IDENTIFICATION FEATURES OF YOUR 406

**A. Manufacturer's plate.**

**B. Model serial number.**

**C. Serial number on the fascia.**

**D. Tyres and paint colour reference.**

The label **D** on the driver's door pillar, near the hinges, gives:

- the wheel and tyre sizes,
- the brands of tyres approved by the manufacturer,
- the tyre pressures (**the tyre pressure must be checked when the tyre is cold, at least once a month**),
- the paint colour reference.