


# DASHBOARD

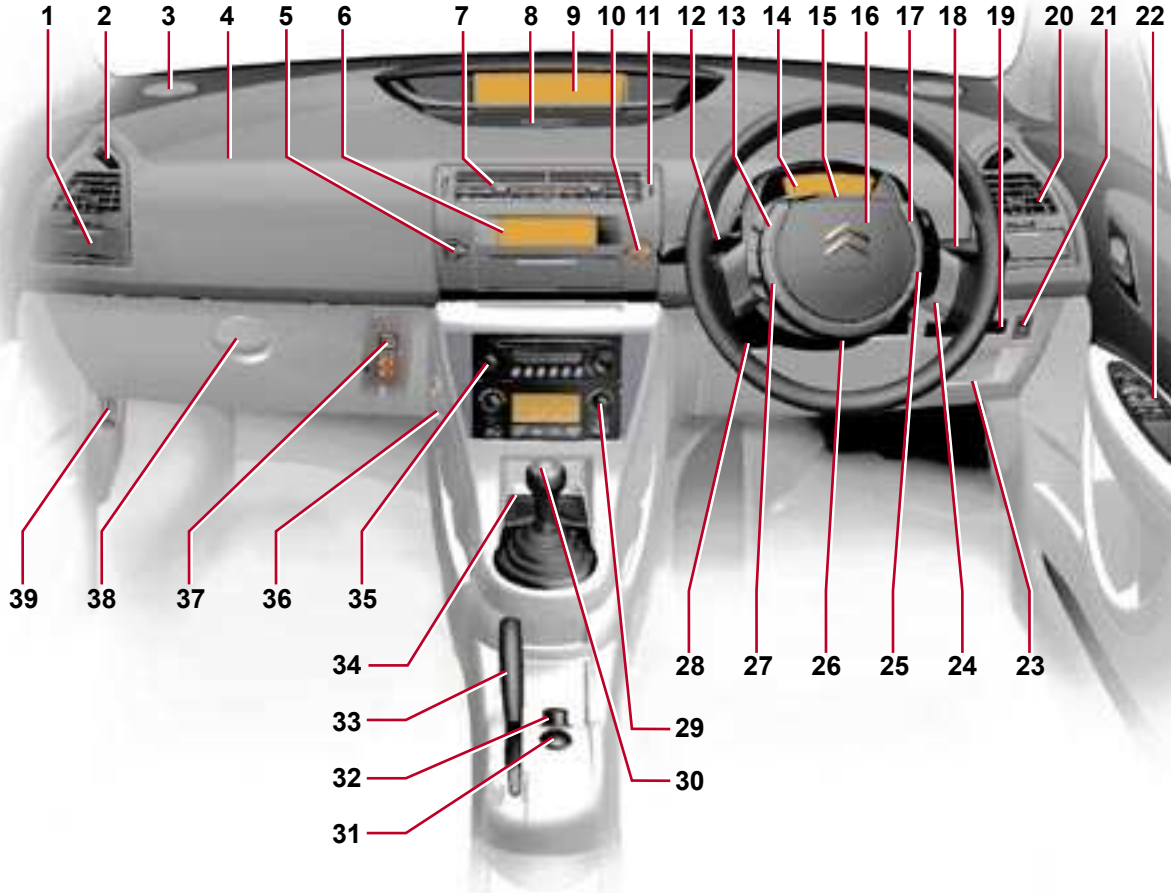

# DASHBOARD

- 1 Storage drawer (right and left).
- 2 Side window demister vent (right and left).
- 3 Loudspeaker (Tweeter) (right and left).
- 4 Passenger's airbag.
- 5 Control for central locking of doors and boot.
- 6 Multifunction display.
- 7 Centre air vents.
- 8 Controls:
  - Trip mileage recorder reset button.
  - Dashboard lighting.
  - Display of alerts and Status of functions.
- 9 Instrument panel.
- 10 Hazard lamps control.
- 11 Scented air freshener.
- 12 Controls:
  - Lighting.
  - Direction indicators.
  - Front foglamps.
  - Foglamps.
- 13 Controls for speed limiter and cruise control.
- 14 Tachometer / Automatic gearbox display.
- 15 Signalling confirmation warning lamps.
- 16 Driver's airbag.
- 17 Radio-CD controls.
- 18 Controls:
  - Windscreen wiper.
  - Screen wash.
  - Rear screen wiper.
  - Trip computer.
- 19 Controls:
  - ESP.
  - Parking assistance.
  - Lane Departure Warning System.
  - Anti-intrusion alarm.
- 20 Lateral air vent (right and left).
- 21 Headlamps adjustment.
- 22 Controls:
  - Rear view mirrors.
  - Windows.
  - Child safety.
- 23 Oddments poket.
- 24 Steering lock and ignition switch.
- 25 Optional function controls.
- 26 Horn.
- 27 Optional function controls.
- 28 Steering column adjustment lever.
- 29 Air conditioning or heating/ventilation.
- 30 Gear lever.
- 31 12 volt accessory socket (150 W max.).
- 32 Cigar lighter.
- 33 Handbrake.
- 34 Ashtray.
- 35 Radio-CD or NaviDrive radio navigation.
- 36 Carrier bag hook.
- 37 Key-operated switch:
  - Passenger's airbag activation/deactivation.
- 38 Lower glovebox.
  - Fuse box access.
- 39 Bonnet release lever.

# TACHOMETER

**Display of engine speed**  
(during the running-in period, see “Running-in”)  
**and display of gear engaged and automatic gearbox status**



Approaching maximum engine speed, the screen changes from orange to red, to indicate the necessity to engage a higher gear.

# INSTRUMENT PANEL

On opening of the driver's door or unlocking with the remote control, for approx. 30 seconds there is activation of the instrument panel and rev counter and display of the mileage counters and if applicable the maintenance symbol.

## Central display

- 1 Fuel gauge
- 2 Range
- 3 Trip mileage recorder
- 4 Speed limiter and cruise control settings
- 5 Speed indicator
- 6 Maintenance indicator, on switching on ignition, then total mileage counter
- 7 Checking the engine oil level
- 8 Coolant temperature



Display of warning lamps

Trip mileage recorder reset button

Display of alerts and Status of functions

Display of warning lamps

## Display lighting rheostat

With vehicle lamps on, press to adjust.

If after increasing the brightness you wish to reduce it, you have first to increase it to the maximum then release. Next you can reduce the brightness. And vice versa.

# FIXED CENTRED CONTROLS STEERING WHEEL

Controls for speed limiter  
and cruise control

Lighting  
and signalling  
warning lamps

Audio system controls



Optional function controls

Horn

Multifunction  
display controls

# FIXED CENTRED CONTROLS STEERING WHEEL

Controls for speed limiter  
and cruise control

Audio system controls

See Chapter IV  
or your NaviDrive  
instructions

30/33



**Selection of cruise control or speed limiter**

**Activation of speed limiter and Deactivation / Reactivation of cruise control and speed limiter**

**To decrease the speed / To activate cruise control**

**To increase the speed / To activate cruise control**

**Search of higher frequencies**

**Scrolling of memorised stations**

**To increase the sound volume**

**To decrease the sound volume**

**Mute**

# FIXED CENTRED CONTROLS STEERING WHEEL

## Optional function controls

## Multifunction display controls

Display lighting rheostat

49



Starting voice recognition  
(See Chapter IV or your NaviDrive instructions)

Air recirculation

84-86



49



Validation of the function selected or of the value modified


Pick up / hang up

(See Chapter IV or your NaviDrive instructions)

Access to the "Main menu"\*

Scrolling in the multifunction display

50-57

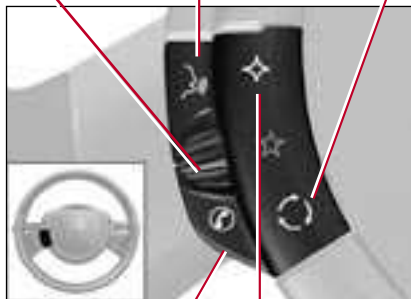

Telephone pick-up / hang-up  
(See Chapter IV or your NaviDrive instructions)

Display of the «Directory» menu  
(See Chapter IV or your NaviDrive instructions)

Personal button:  
- Black panel (default function), or  
- Interior lamp switching on / off, or  
- Log of alerts, or  
- Status of functions

For display of the personalisation menu relating to this button, give a long press on it.

Selection of type of information displayed on the right of the screen (radio, trip computer, navigation / guidance, etc.) and for screen **A**, choice of activation / deactivation of your functions and choice of your adjustments

To cancel the current operation or to return to the previous screen

\* In compliance with national legislation in some countries the "Menu" control is deactivated during driving.

# WARNING LAMPS



## Lighting and signalling warning lamps



**LH direction indicator**  
See “Signalling”



**RH direction indicator**  
See “Signalling”



**Foglamps (rear)**  
See “Signalling”

**All the direction indicators flash simultaneously when the hazard warning lamps are switched on.**



**Foglamps (front)**  
See “Signalling”



**Sidelamps**  
See “Signalling”



**Dipped beam**  
See “Signalling”  
If this warning lamp flashes, it is indicating a malfunctioning of the directional headlamps.  
Contact a CITROËN dealer.



**Main beam**  
See “Signalling”



## WARNING LAMPS

**Imperative stop warning lamp**

When the warning lamp comes on, it is imperative to stop the vehicle and switch off the engine. Contact a CITROËN dealer.

This lamp is accompanied by a STOP symbol on the display.

**Warning lamp for handbrake, brake fluid level and braking distribution fault.**

When the engine is running, this warning lamp indicates that the handbrake is applied or incompletely released, that the brake fluid level is insufficient, or that the braking system is malfunctioning.

If the warning lamp remains lit when the handbrake is released, stop immediately and contact a CITROËN Dealer. (See “Brakes”).

**Front LH seat belt not fastened**

This lamp comes on if the LH seat belt is not fastened when the ignition is switched on and while the vehicle is moving at up to 20 km/h (approx. 12 mph). Above 20 km/h (12 mph), the warning lamp flashes for around 120 seconds. Then it remains on.

**Front RH seat belt not fastened**

When you switch on the ignition, the warning lamp remains on if the front passenger seat belt is not fastened. It goes out when the engine is running, doors closed, after 30 seconds.

Then it comes on, if the belt is not fastened, while the vehicle is moving at up to 20 km/h (approx. 12 mph).

Above 20 km/h (12 mph), the warning lamp flashes for around 120 seconds.

**Rear seat belts not fastened**

Operation is identical to that of the front passenger’s seat belt warning lamp.

**Doors open detection**

This warning lamp, when the engine is running, comes on if a door, the bonnet and/or the boot is open.

**Front passenger’s airbag deactivation warning lamp**

See “Airbags”.

**Front / side airbag fault warning lamp**

See “Airbags”.

**Anti-lock Braking System**

The ABS warning lamp lights when the ignition is switched on and should go out after a few seconds.

If the warning lamp does not go out, there may be a system malfunction. (See “Brakes”).

**Diesel Preheater**

See the instructions for starting the engine.

Refer to Chapter II “Starting”.

# WARNING LAMPS



## SERVICE warning lamp

This warning lamp remains on for a serious fault.

Contact a CITROËN dealer as soon as possible

The lamp stays on only for a short time for a minor fault.

Contact a CITROËN dealer if necessary.

To learn the origin of the corresponding alert message, refer to the «Log of alerts» (see chapter II) or your NaviDrive instructions.



## Depollution system warning lamp

If it flashes or lights up while you are driving, this indicates a depollution system operating fault.

Urgently consult a CITROËN Dealer.



## Child safety warning lamp

At each activation, either manual or via the window control panel, this lamp lights up and then goes out approx. 10 seconds after the engine is started.



## ESP/ASR warning lamp In operation

When either the ESP or ASR system is brought into operation, the **ESP/ASR** warning lamp flashes.

### In the event of a problem

When the vehicle is moving, the lighting of the **ESP/ASR** warning lamp indicates that the system is malfunctioning.

Contact a CITROËN dealer.

### Deactivation

Illumination of the ESP/ASR warning lamp and of the ESP control, means that the system is deactivated.

See «ESP».



## Low fuel level warning lamp

When the fuel tank is full, all the indicator bars are illuminated.

If the fuel low warning lamp comes on, there remain around 7 litres of fuel in the tank and 2 or 3 bars will flash in the instrument panel.

If the last bar disappears, there are only around 2 litres of fuel in the tank.




## “Foot-on-brake” starting warning lamp for (6 speed) Electronic Gearbox System

During the engine starting phase, this flashes if you are not pressing the brake pedal.

See “(6 speed) Electronic Gearbox System”.

This warning lamp may flash in the instrument panel to remind you to apply the brake when engaging reverse gear.

# SIGNALLING

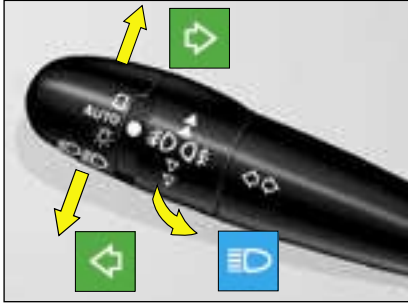

## Direction indicators

Left: move the stalk downwards.

Right: move the stalk upwards.

Movement of the steering wheel returns the stalk to the off position automatically.

## Headlamp flash

Pull the stalk towards you to flash headlamps.

The headlamp flash operates even with the ignition off.

## Horn

Press at the bottom of the steering wheel fixed hub.



## Hazard warning lamps

Simultaneous operation of the direction indicators.

**Only use these if there is danger**, for example when you have to stop suddenly or in unusual driving conditions.

They also operate without the ignition being on.

## Emergency lighting of hazard warning lamps

Sudden vehicle deceleration automatically causes the hazard warning lamps to activate.

These cease automatically when you reaccelerate or manually if you press the hazard warning lamps control on the dashboard.

## Sound signal for lamps left on


This is heard when the driver's door is opened, ignition switched off, to indicate that lamps are still on.

It stops when the door is closed, the lamps are switched off, or the ignition is switched on.

This signal is inactive if the automatic lighting / guide-me-home headlamps are activated.

**The direction indicators will not work when the hazard warning lamps are in use.**

# SIGNALLING

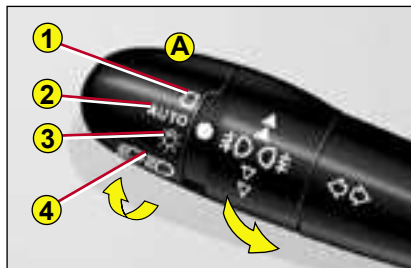

## Lighting control switch

- 1 Stop
- 2 Automatic lighting
- 3 Sidelamps
- 4 Dipped beam / Main beam



### All lighting off

Turn the barrel **A** forward.



### Automatic lighting of headlamps

Sidelamps and dipped beams come on automatically in conditions of poor ambient light or when the wipers are in continuous operation.

They go out as soon as the light is again sufficient or approx. 5 minutes after the wipers have stopped.

To activate this function, place control **A** on position 2.

**Do not cover the brightness sensor, which is visible from the outside of the windscreen, behind the interior rear view mirror.**

Turn the barrel **A** forward.



### Sidelamps on

Turn the barrel **A** forward.



### Dipped beams / main beams on

Pull the stalk towards you to change from dipped beam to main beam and vice versa.

## Guide-me-home lighting

This function lights your headlamps, for example to illuminate your exit from a car park.

This function is activated:

- Manually by pulling the lighting stalk towards you, ignition switched off.
- Automatically, provided that:
  - the automatic headlamp lighting has been activated,
  - the guide-me-home lighting has been activated. For this, select in the "Main menu", then in "Personalisation-Configuration", the lighting and signalling sub-menu and then activate the function.

See chapter "Multifunction display"


**Note:** It is possible to modify the duration of the guide-me-home lighting (approx. 60, 30 or 15 seconds) in the menu "Personalisation-Configuration".

For screen A, the duration is fixed.

38/50-57



# SIGNALLING

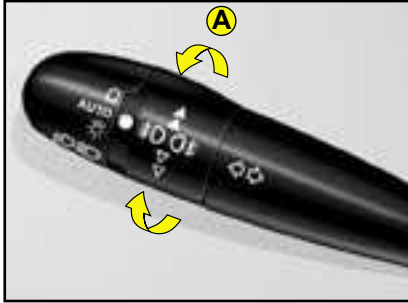

## Vehicles equipped with FRONT FOGLAMPS AND REAR FOGLAMPS (Ring A)



They operate when sidelamps, dipped beams or main beams are switched on.

## For a vehicle equipped with rear foglamps:

- 1 touch forwards: switches on rear foglamps.
- 1 touch rearwards: switches off rear foglamps.

## For a vehicle equipped with front and rear foglamps:

- 1 touch forwards: switches on front foglamps.
- 2nd touch forwards: switches on rear foglamps.
- 1 touch rearwards: switches off rear foglamps.
- 2nd touch rearwards: switches off front foglamps.

### Note:

The rear foglamps must only be used when visibility is severely reduced (fog, snow).



## Headlamps adjustment

You are advised to adjust the aim of the headlamps in accordance with vehicle load.

In the dashboard on the right hand side of the steering column.

- 0 Empty
- 1 Lightly laden
- 2 Half laden
- 3 Fully laden

**Note:** Vehicles equipped with Xenon headlamps have automatic headlamp adjustment as a function of vehicle load.

**In conditions of poor visibility, if the ambient brightness does not trigger the automatic lighting, it is up to you to switch on your dipped beams manually, as well as your foglamps.**

# SCREEN WIPE



## Windscreen wiper stalk

- 2 Fast speed
- 1 Normal speed
- I Intermittent
- 0 Stop

### Press downward for:

- automatic wipe,
- single wipe.

**Position I:** The timing of the intermittent wipe adjusts automatically to the speed of the vehicle.

**Position 1 or 2:** when stationary, the windscreen wiper speed automatically reduces.

**As a safety precaution, the wiper system is deactivated approx. 1 minute after the ignition has been switched off.**

On switching the ignition back on, to reactivate the function:

- return to the **Stop position**,
- change to the **position desired**.

**Vehicle fitted with a rain sensor.**

**Press downwards:** Automatic wipe activated.

**Note:** A press downwards triggers a single wipe, but without deactivating automatic wipe.

**Deactivation of automatic wipe:**

- Go to position **I** then return to position **0** or,
- Stop the engine.


**WARNING:**

**Do not cover the rain sensor**, which is visible from the outside of the wind-screen, behind the interior rear view mirror.

For vehicle washing, it is essential to switch off the ignition or deactivate the automatic wipe.

**As a safety precaution, the wiper system is deactivated approx. 1 minute after the ignition has been switched off.**

## SCREEN WIPE

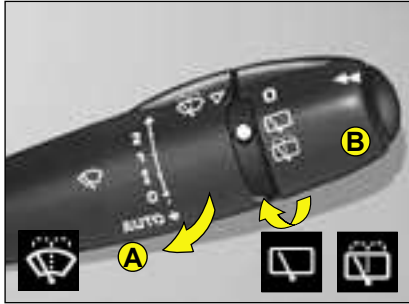**A - Windscreen washer**

To operate the windscreen wash, pull the wiper stalk towards you.

Screen wash is accompanied by a timed screen wipe, the head-lamp wash also operates if dipped beams are switched on.

**B - Rear screen wiper**

To deactivate



Intermittent rear wiper.



Timed rear screen wash / wipe.

**Automatic operation**

This function is active when the windscreen wipers are operating and you engage reverse gear.

Activation / deactivation of this function is possible in the menu "Personalisation - Configuration" of the "Main menu".

Deactivation may be necessary when a bicycle-carrier is installed on the tailgate.

**Changing the wiper blades**

The wipers should be stopped in the **maintenance position** (during replacement).

For this, switch off the ignition then, within one minute, action the wiper stalk. The wipers will position themselves to the centre of the windscreen.

After replacement, the wipers resume their normal position once the ignition has been switched on and there is an action on the wiper stalk.

51/54



**Always check that the windscreen and rear screen wipers can operate freely, for example if fitting a bicycle carrier, or in freezing temperatures.**

**Remove any accumulation of snow from the base of the windscreen.**


# SEAT BELT HEIGHT ADJUSTMENT STEERING COLUMN ADJUSTMENT



## Seat belt height adjustment (5-door model)

The correct positioning for the seat belt anchorage is mid-shoulder height (see chapter USER PRECAUTIONS).

To adjust it, pinch the control and slide it in the desired direction.

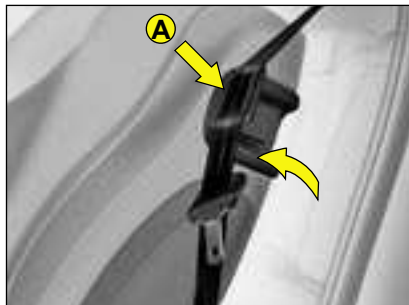

## Holding the seat belt (3-door model)

Raise then lock part A, to retain the seat belt buckle when it is unfastened.

It is necessary to remove the seat belt from the buckle retainer before moving the seat to access the rear seat positions.



Both the height and reach of the steering wheel can be adjusted.

**With the vehicle at rest**, first adjust the seat to the most suitable position, then adjust the position of the steering wheel.

See "Driving position".

Unlock the steering by pulling the control towards you. Adjust the steering wheel position then lock by pushing the control fully downwards.


If you press firmly downwards on your steering wheel after locking, you may hear a slight click. The steering is then in its definitive position.



**As a matter of safety, these actions should not be attempted  
when the vehicle is moving.**



# FRONT SEATS

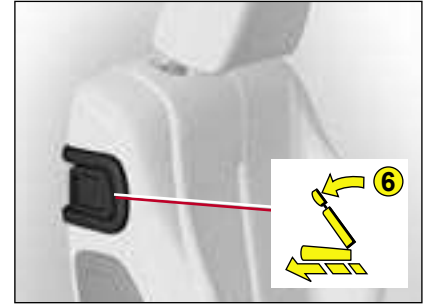

# FRONT SEATS

## Manual adjustments



### Head restraint

To raise, pull upwards. To lower, press on the unlocking button and on the head restraint. The adjustment is correct when the upper edge of the restraint is level with the top of your head. The head restraint is also angle-adjustable.

To remove, press on the unlocking button and pull upwards.

**Note:** Never drive the vehicle without the head restraints fitted.



### Reach

Lift the control bar and adjust to the desired position.



 
### Lumbar supports

Turn the control and adjust to the desired position.



### Driver's seat height

Raise or lower the control the number of times required to obtain the desired position.



### Backrest angle

Use the control **A** to adjust the backrest angle.

It is possible to recline the backrest to an angle of 45° by tilting it until it locks; press the control to unlock.



### Access to the rear seats


To access or exit the rear seat positions, tilt the control **6** towards the front to fold the front seat back-rest and slide the front seat forwards.

Afterwards the front seat will revert to its initial position.

Make sure that the seat is securely locked in place.

**Note:** This control holds the seat belt in position (see preceding page).

## FRONT SEATS

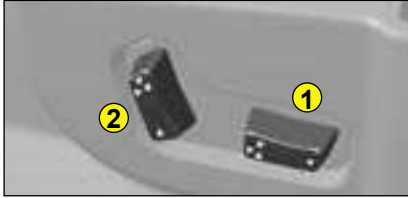**Electrically operated adjustments**

- ❶ Adjustment of seat height, angle and reach
- ❷ Adjustment of backrest angle and lumbar support

**Heated seats**

The front seats can be heated independently. Use the controls placed on the sides of the seats, turning them to select one of three heating levels:

- 0:** Stop.
- 1:** Gentle heat.
- 2:** Medium heat.
- 3:** Strong heat.

The seat temperature will adjust accordingly.

**Note:** The heated seats will only operate when the engine is running.



- ❶ Raise or lower the front of control **1** to make the front of the seat cushion higher or lower.



- ❶ Raise or lower the rear of control **1** to make the seat higher or lower.



- ❶ Action control **1** to the front or to the rear to move the seat forward or back.



- ❷ Push the top of control **2** forward or back to adjust the backrest angle.




- ❷ Raise or lower control **2** to increase or decrease the lumbar support.

**Note:** The seats can still be moved on a temporary basis:

- when opening one of the front doors.
- after switching off the ignition.

# FRONT SEATS

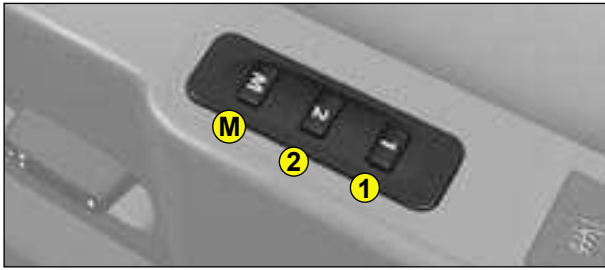

## Memorisation of driving positions

You have the possibility to memorise two driving positions, via the buttons **M/1** and **M/2**.

## Memorisation using the buttons

To memorise, using the buttons located on the side of the seat:

- turn the ignition key to the drive position (2nd notch),
- adjust your seat and your exterior rear view mirrors,
- press on button **M** then immediately on button **1** «first driving position» or on button **2** «second driving position».

The memorisation is recognised by an audible signal. Memorising of a new position cancels the previous one.

## Recall of a memorised driving position

**Vehicle stopped** (ignition on or engine running)

- Press briefly on button **1** or **2** to recall the corresponding memorised position.

**Note:** after five consecutive recalls of a memorised position, this function will be deactivated until the engine is started.

## Vehicle moving

- Keep button **1** or **2** pressed to recall the corresponding memorised position.


## INTERIOR REAR VIEW MIRROR

**Manual interior mirror**

The lever on the lower edge enables you to place the rear view mirror in either of two positions:

**Day position:** the lever is not visible.

**Night position (antidazzle):** the lever is visible.

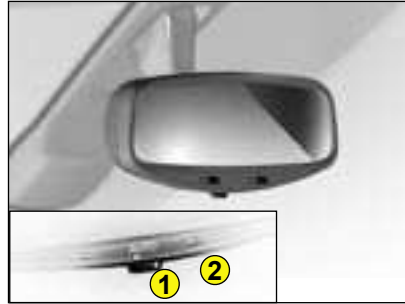**Automatic photochromic interior rear view mirror**

This provides an automatic and progressive changing between day use and night use.


To avoid causing dazzle, the mirror automatically becomes darker as a function of the intensity of light coming from the rear. It becomes lighter as soon as brightness diminishes, thus ensuring optimal vision.

**To operate**

Switch on the ignition and press control **1**.

- Warning lamp **2** on: automatic mode.
- Warning lamp **2** off: automatic mode stopped. The mirror remains in its lightest definition.

**Note:** for optimal vision, the mirror lightens automatically when reverse gear is engaged.

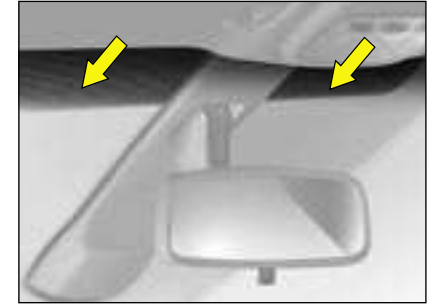**Permit holder**

The athermic windscreen incorporates a zone located either side of the rear view mirror base, to allow the reading of access cards (e.g. motorway toll passes).

# DOOR MIRRORS



## Adjustment of rear view mirrors

Functions with ignition switched on.

From the driver's position, select the rear view mirror via the control **1**, then adjust in the four directions by moving the control **2**.

Deicing of rear view mirrors is coupled with electric demisting of the rear screen.

## Fold-back of door mirrors

When the vehicle is parked, the door mirrors can be folded back either manually or electrically.

### Electric fold-back

From the central position, one press towards the rear on control **1** folds the rear view mirrors back.

To return them to the initial position, press again on the control towards the rear.

### Automatic fold-back

Automatic fold-back operates when you lock the doors with the remote control.

The opposite movement applies when you unlock the doors, except if you operated fold-back before switching off the ignition.

**Note:** Automatic fold-back of the rear view mirrors can be deactivated. Consult your CITROËN dealer.

## Adjustment of the indexed positions for the passenger's and driver's rear view mirrors

With the engine running:

- Select the rear view mirror using control **1**.
- Engage reverse gear, the mirror glass automatically positions itself to improve your vision of the pavement.
- If necessary, adjust the mirror to your preference using the electric control **2**.

## Deactivation of the rear view mirror indexing function

To deactivate the function, move control **1** to the central position.

# WINDOWS



## Electric operation

The driver uses the controls located on the door to operate the vehicle's electric windows.

**Note:** the electric windows can also be operated for a limited time after the ignition has been switched off (including after the front doors have been opened).

## Sequential control

An action on the control to the first notch causes a window movement which stops as soon as the control is released. An action on the control to the second notch causes the window to close or open fully, a further press on the control stops the movement.

## Anti-pinch device

An anti-pinch device stops the window from rising. If it meets an obstacle, it goes back down.

**After a battery disconnection or in the event of a malfunction**, you have to **re-initialise** the anti-pinch function:

- Lower the window fully using the control, then close. It will rise only a few centimetres.
- Press repeatedly on the control until the window is fully closed.

**Warning:** During this operation, the anti-pinch protection does not work.

## Child safety



This prevents the rear windows from being operated, and the rear doors from being opened, from the rear seat positions.

It is activated by means of a press on control **A** located on the electric windows control panel. The warning lamp in the instrument panel lights up for approx. 10 seconds.


Each time the ignition is switched on, the warning lamp comes on for approx. 10 seconds.

Opening of the doors from the outside and operation of the rear electric windows remain possible from the front of the vehicle.

### **ALWAYS PAY ATTENTION TO WHERE CHILDREN ARE WHEN OPENING OR CLOSING WINDOWS.**

- Always remove the ignition key when leaving the vehicle, even for short periods.
- If the driver is operating the passenger's electric window control, the driver should ensure that no passenger is obstructing the window from closing.
- The driver should check that the electric windows are used properly by the passengers.
- Should there be any risk of a person becoming trapped by a window closing, you should immediately reverse the window movement. To do this, reverse the position of the control concerned.

## CRUISE CONTROL

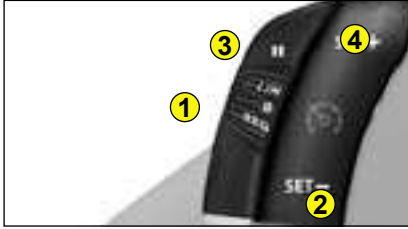

This driving assistance function allows you to drive at the speed of your choice without the need to action the accelerator. It is available at speeds above 40 km/h (25 mph), in the higher gears only.

Control **A** for cruise control is located below the lighting/signal-stalk.

**Note: Information relating to the cruise control is displayed in zone A of the instrument panel.**

#### To select the function

Turn control **1** to position “REG”.

#### To select a cruising speed

At the time you select the function via the control **1**, there is no cruise speed previously memorised:



Accelerate to the desired speed, then press button **2** or button **4**. The cruise speed will then be memorised and displayed in zone **A** on the instrument panel.



You can then release the accelerator pedal. The vehicle will automatically keep to that chosen speed.

**Note:** The vehicle speed may vary slightly from that memorised.

#### Adjustment of the memorised speed while cruise control is in operation

To adjust the memorised speed, displayed in zone **A**, press on:

- button **4** to increase the speed,
- button **2** to decrease the speed.

**Note:** you can use successive presses to modify the cruise speed in steps of 1 km/h and a continuous press to jump in steps of 5 km/h.

#### To exceed the cruise speed temporarily

While cruise control is in use, it is always possible to go above the cruise speed simply by pressing the accelerator pedal (for example to overtake another vehicle). The speed displayed in zone **A** flashes.

You have only to release the accelerator pedal to return to your cruise speed.

**Note:** if during cruise control the system cannot keep to the cruise speed (e.g. on a steep descent), then the speed flashes. If necessary, brake to curb your speed.



# CRUISE CONTROL



## Deactivation of cruise control with memorised speed

- Either by pressing the brake pedal or the clutch pedal.
- Or with a press on button 3.
- Or when ESP or ASR is active.

**Note:** cruise control is disengaged when the gear lever is in neutral position.

These actions bring up the display “OFF” in zone A in the instrument panel.

These actions do not cancel your cruise speed which remains displayed on the instrument panel.



## Reactivation of cruise control

- **by recalling the memorised speed:**

Following a deactivation, press on button 3. Your vehicle automatically resumes the memorised cruise speed displayed in zone A.

- **by selecting the current speed:**

Press on button 2 or 4 as soon as the desired speed is reached. The information “OFF” will then disappear from zone A.

## To cancel the function

- by moving the control from position “REG” to position 0.
- by stopping the engine.

The cruise speed chosen previously is no longer memorised.

**In the event of a malfunction,** a message is displayed, accompanied by a sound signal and lighting of the SERVICE warning lamp.

Consult your CITROËN dealer.



**Cruise control must only be used where road conditions permit driving at a constant speed.**

**Do not use it on congested roads or when weather and road conditions are poor.**

**The driver must still remain attentive and in complete control of the vehicle.**

**You are recommended to keep your feet within range of the pedals.**

## SPEED LIMITER



This driving assistance device allows you to select a maximum speed that you wish not to exceed. This has to be a speed greater than 30 km/h (approx. 20 mph). The speed limiter controls are located on the steering wheel.

**Note:** The information relating to the limiter is displayed in zone A of the instrument panel.

#### To select the function

Turn control **1** to position “LIM”.

On selection of the function, the last speed memorised and the information “OFF” will appear:



#### To adjust the maximum speed

Provided the engine is running, you can adjust the memorised maximum speed, with short or long presses on:

- button **4** to increase the memorised maximum speed,
- button **2** to decrease the memorised maximum speed.

**Note:** successive presses modify the memorised speed in steps of 1 km/h (1 mph), a continuous press in steps of 5 km/h (3 mph).

#### Activation of the maximum speed

When the desired maximum speed is displayed, press button **3** to activate the limitation.

The information “OFF” then disappears from zone **A**.

While the function is active, pressing the accelerator pedal will not enable you to go beyond the programmed speed unless you press the pedal hard down past the tight spot (see “Temporary exceeding of the maximum speed”).



**Note:** The vehicle speed may vary slightly from that memorised.

# SPEED LIMITER

## Deactivation of the maximum speed

Press button 3.

The information “OFF” will appear on the instrument panel screen.

This action does not cancel the memorised maximum speed, which remains displayed in zone A of the instrument panel.



## Temporary override of the maximum speed

You can exceed the memorised maximum speed at any time by pressing the accelerator pedal hard down past the tight spot.

During the time the limit speed is being exceeded, the displayed speed flashes.

You have only to release the accelerator pedal to return below the maximum speed, thus keeping the function active.

**Note:** if during speed limitation, the system cannot keep to the maximum speed (especially on a steep descent or if you accelerate too hard) the speed flashes. Adapt your speed as necessary.

The function will re-engage when your speed has returned below the desired maximum.



## To stop the function

- move the control from position “LIM” to position 0.
- or stop the engine.

The speed that you chose is memorised.

**In the event of a malfunction,** a message is displayed, accompanied by a sound signal and lighting of the SERVICE warning lamp. Consult your CITROËN dealer.



**A floor carpet not recommended by CITROËN risks sliding under the accelerator pedal, thus preventing you from pressing past the tight spot.**

**It will then be impossible to exit from the desired limitation, unless by acting on the steering wheel control.**

**The driver must still remain attentive and in complete control of the vehicle.**



# 6-SPEED ELECTRONIC GEARBOX SYSTEM

The 6-speed electronic gearbox offers you a choice of two driving modes :

- **automatic mode**,
- **manual mode**, with two methods of control : **the controls under the steering wheel and the gear selector** on the central console.

For each of these two modes, a Sport option, corresponding to a more dynamic driving style, is also available.

 61 → 65

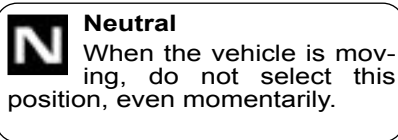

- **Manual gear changing using the selector :** or
  - push the selector to change up a gear,
  - pull the selector to change down a gear.

- **Manual gear changing using the controls under the steering wheel:**  
An action on one of the controls under the steering wheel «+» or «-» gives you an immediate change of gear.

**Note :** During heavy acceleration, a higher gear will not engage if the driver does not action the gear selector or the controls under the steering wheel.

# 6-SPEED ELECTRONIC GEARBOX SYSTEM

## Starting the vehicle

- To start the engine, the gear selector has to be in position **N**.
- Press the brake pedal.
- Action the starter.
- When the engine is running, select **R**, **A** or **M** as required.
- Check the position you have engaged in the rev counter.

**Note** : If the vehicle has been stationary for a long time, or if you have pressed the brake pedal a number of times while stationary, it will be necessary to press the brake pedal hard down in order to authorise the engine to start.

## Engaging reverse gear

Only engage reverse gear when the vehicle is completely stationary.

- When the vehicle is moving at very low speed, if reverse gear is requested (position **R**), this will be taken into account only when the vehicle stops.

The «foot on brake» warning lamp may flash in the instrument panel to remind you to brake.

- If vehicle is moving at high speed and reverse gear is requested, the warning lamp «**N**» will flash and your vehicle will go automatically into neutral. To re-engage a gear, you have only to return the gear selector to position **A** or **M**.

**Note** : A sound signal indicates when reverse gear is engaged.

If parking assistance is deactivated, the sound signal for reverse gear engaged is absent.



## Temporary manual mode

In automatic mode, a touch on the controls under the steering wheel «+» or «-» lets you change gear immediately.

The warning lamp «**AUTO**» remains displayed in the rev counter.

In the absence of any new action, automatic mode reactivates depending on the driving conditions.

# HILL START ASSIST

(with 6 speed electronic gearbox system)

To aid starting on a gradient, your vehicle is equipped with a system which keeps it temporarily immobilised.

It keeps the brakes applied for a brief moment, precisely the time taken for moving your foot from the brake pedal to the accelerator pedal.

**This function is only active when the vehicle has been completely stationary, with your foot on the brake pedal, in particular conditions on a slope.**

**Note :**

The hill start assist function cannot be deactivated.



Display of these warning lamps indicates a malfunctioning of the hill start assist function.




**On an ascending slope, with the vehicle stationary, the vehicle is held for a brief moment when you release the brake pedal, provided you are in A or M.**



**On a descending slope, provided the vehicle is stationary and reverse gear is engaged, the vehicle is held for a brief moment when you release the brake pedal.**



**Warning : do not exit the vehicle during the hill start assist phase.**

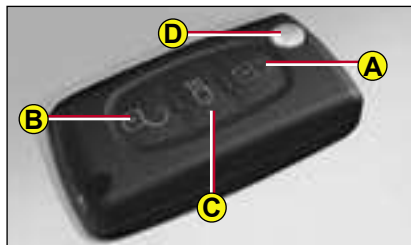

**Note:** The simultaneous use of other high frequency equipment (mobile telephones, domestic alarms...) may momentarily hinder the operation of the remote control.

In the event of a permanent fault, the remote control should be reinitialised. (See next page).

## Central unlocking

A short press on button **B** unlocks your vehicle.

This operation is confirmed by the rapid flashing of the direction indicators and the lighting of the interior lamp (if the function is activated). It can also deploy the exterior rear view mirrors.

## Central locking - Closing of windows - Deadlocking

- A short press on button **A** locks your vehicle.

- A long press on button **A** locks your vehicle and closes the windows.

This operation is confirmed by the direction indicators illuminating for approx. two seconds and by the interior lamp switching off. This also folds the exterior rear view mirrors.

If any of the doors, or the boot, is open or not properly closed, central locking does not operate.

**For vehicles equipped with deadlocking**, two successive presses on button **A** deadlock the vehicle. It is then impossible to open the doors from either inside or outside the vehicle.

**It is dangerous to operate the deadlocking when a person is in the vehicle as unlocking is impossible from the inside (without the remote control).**

**When closing the windows using the remote control, the user should make sure that nobody is obstructing the windows from shutting properly.**

## Guide-me-home lighting

A press on button **C** operates the guide-me-home lighting (illumination of the sidelamps and dipped beams for approx. one minute).

A second press prior to the end of this timing cancels the guide-me-home lighting.

## Locating of the vehicle

To locate the vehicle on a carpark, press button **A**, the interior lamps come on and the direction indicators flash for a few seconds. The vehicle remains locked.

## Folding and ejection of the key

Button **D** is for folding and ejecting the key from its housing in the remote control.

If you do not press on button **D**, you could damage the mechanism.

**Take care not to place the remote control in contact with grease or dust, or leave it in the rain or in a damp environment.**

**A hard object also on the key ring, pressing on the key while it is in the ignition, can cause a malfunction.**

## Changing the remote control battery

Unclip the cover to gain access to the battery.

**Battery:** CR 0523: 3V.

## Re-initialisation of the remote control

After a change of battery, it is necessary to re-initialise the remote control. To do that, switch on the ignition and immediately action button **A** on your remote control to trigger the action desired. This may take some ten seconds.

**Note:** Make a careful note of the numbers for the keys and for the remote control on the ASSISTANCE card. Keep this in a safe place.

**Do not throw away the old batteries. They should be returned to the CITROËN dealer or deposited in a recognised recycling facility (camera shops etc.).**

**Except when reinitialising, the remote control cannot function while the key is in the ignition, even when switched off.**

**Warning:** By inadvertently actioning the remote control, when for example it is in your pocket, you can unlock the vehicle without your realising it.

**However, if none of the doors is opened within thirty seconds following an unlocking, the doors will automatically relock.**

**Warning:** There is a risk of damage if the replacement battery is not the correct one.

**Only use batteries that are identical or equivalent to those approved by CITROËN.**





## Electronic immobiliser key

The key operates all the vehicle's locks as well as the ignition.

**Note:** For safety reasons, a buzzer will sound if you have switched off the ignition and opened the driver's door without previously removing the ignition key.

The key can be used to deactivate the front passenger's airbag (see "Airbag").

## Central locking using the key

A brief action with the key locks the vehicle.

## Deadlocking: Central locking using the key

A second action straightaway with the key deadlocks the vehicle. It is then impossible to open the doors from either inside or outside the vehicle. A long action with the key closes the windows.

**Note:** With the vehicle stationary and the engine switched off, locking is signalled by the flashing of the interior locking control warning lamp.

If any of the doors, or the boot, is open or not properly closed, central locking does not operate.

## Electronic immobiliser

The ELECTRONIC IMMOBILISER device locks the engine supply system.

The system activates automatically as the key is removed from the ignition.

All the vehicle's keys contain an electronic immobiliser device.

After you switch on the ignition, a dialogue starts between the key and the electronic immobiliser device. The metallic part of the key must be correctly deployed in order to ensure a successful dialogue.

## If the key is not recognised, starting is not possible.

If this occurs, leave your vehicle immobilised and contact a CITROËN dealer.



**It is dangerous to operate the deadlocking when a person is in the vehicle as unlocking is impossible from the inside (without the remote control).**

**The key number is on the label attached to the key.**

**Should you lose your key or remote control, the CITROËN dealer network can supply replacements.**



A confidential card is given to the new owner when he takes delivery of his new vehicle.

This card bears a hidden access code for the use of the CITROËN dealer when maintaining the electronic immobiliser device.

**Do not scratch the protective strip**, the security of the immobiliser system depends on the information below remaining covered.

Should the card be lost, the immobiliser device can no longer be considered secure.

In the event of a change of vehicle ownership, it is essential for the new owner to possess the CODE card.  
Never leave it in the vehicle.



## Advice

Keep the code card bearing your personal electronic immobiliser number in a safe place (never in the vehicle).


If any key modifications become necessary (addition, cancellation or replacement of the key), you must take the confidential card together with all the keys to a CITROËN dealer.

Also, for any operation on your vehicle's electronic systems, CITROËN may need to request this card from you.



**Never attempt to modify the electronic immobiliser's electrical circuit, as that could render your vehicle undriveable.  
Should the confidential card become lost, a CITROËN dealer would have to undertake a major repair.**

# ANTI-INTRUSION ALARM

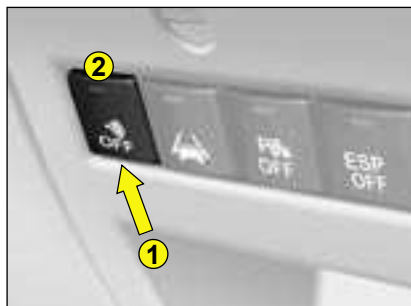

Your vehicle may be equipped with an ANTI-INTRUSION ALARM.

This ensures:

- Exterior perimeter protection by means of detectors on the access points (doors, tailgate, bonnet) as well as on the electrical supply.
- Interior volumetric protection by means of ultrasonic sensors (detecting movement inside the passenger compartment). This can be deactivated using control **1**.



The installation also includes a siren and a warning lamp **2** visible from the outside, indicating the three possible alarm statuses:

- Alarm not armed (not on standby), warning lamp off.
- Alarm armed (on standby), the warning lamp flashes slowly.
- Alarm triggered (signal of an intrusion), the warning lamp flashes rapidly if the alarm is disarmed with a press on button **B**. It stops flashing as soon as you switch on the ignition.

**Note:** if there is a malfunction the warning lamp comes on permanently.

## DISARMING THE ALARM USING THE REMOTE CONTROL

The alarm is disarmed when you unlock the vehicle (by pressing button **B** on the remote control).

## DISARMING THE ALARM USING THE KEY

Unlock the doors with the key. The siren is triggered. Enter the vehicle and switch on the ignition to stop the siren. Otherwise the siren will continue for about 30 seconds.

## OPERATION OF THE ALARM

### **First make sure that all the vehicle's doors are closed.**

The alarm is armed by pressing button **A** on the remote control.

When the alarm is armed, the protections become active within 5 seconds (perimeter) and 45 seconds (volumetric).

Provided the alarm is armed, any intrusion triggers the siren for 30 seconds, accompanied by the illumination of the direction indicators.

The alarm then reverts to armed status, but the deployment remains memorised and is signalled by the rapid flashing of the alarm warning lamp **2** when you press the unlocking button **B**. The flashing stops when you switch on the ignition.

The siren is also triggered if there is a cutting of the electrical supply. To stop it, restore the electrical supply then give a press on the unlocking button **B**.

#### **Note:**

- *If you wish to lock your vehicle without arming the alarm, just lock the vehicle with the key.*
- *If you try to lock your vehicle when a door or the boot is still open, the central locking will not operate, but your alarm becomes armed after approx. 45 seconds.*

**Note:** *the siren is automatically disarmed (for example if you need to disconnect the battery) immediately after you unlock the vehicle using the remote control.*

## **Deactivation of volumetric detection**

The alarm is able to operate with only perimeter protection if you deactivate the volumetric protection (if for example you wish to leave an animal in the vehicle).

To do this, switch off the ignition, then press immediately on control **1** for at least one second.

The warning lamp **2** should be on permanently. It will start to flash when the alarm activates.


Arm the alarm by locking your vehicle using the remote control.

## **Automatic activation (according to country)**

The alarm arms automatically 2 minutes after the boot or the last door is closed.

In order to prevent the alarm then being triggered by a door or the boot being opened, it is essential to press again on the unlocking button **B** on the remote control.

# STEERING LOCK - IGNITION - STARTER

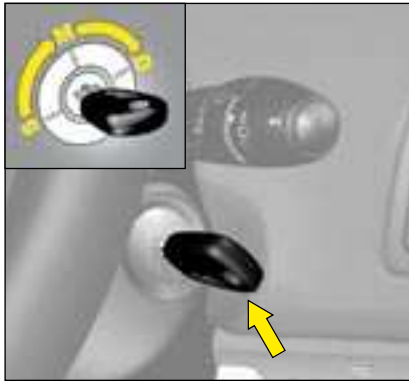

- **S: Steering lock**

To free the steering, turn the steering wheel slightly at the same time as turning the key; avoid using undue force.

- **M: Ignition**


Depending on the vehicle version, the following warning lamps should also light up for a short time:

ESP system, Depollution system, ABS, Airbags, Front passenger's airbag deactivation, Handbrake, STOP, SERVICE, and Fuel Low.

If one of these lamps fails to come on, it could indicate a fault in the system concerned.

- **D: Starter**

Release the key as soon as the engine has started. Never turn it when the engine is running.

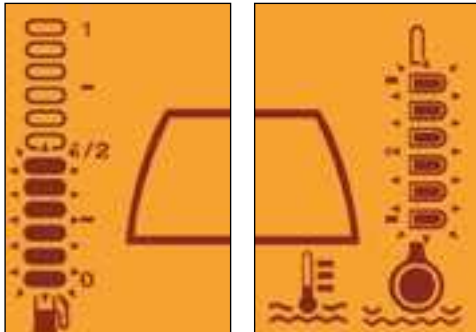

Test with the key in ignition drive position



## II

### Steering lock

**S:** After removing the key from the ignition, turn the steering wheel to engage the steering lock. The key can only be removed in position **S**.

**M:** Running position. The steering is unlocked - to enable the key to be turned to position **M**, it may be necessary to turn the steering slightly.

**D:** Starting position.

For starting and stopping the engine, see “Starting”.

### Economy mode

In order not to discharge the battery when the engine is stopped, your vehicle goes automatically into economy mode.

The electrical components relating to comfort and headlamps (not sidelamps or hazard warning lamps) are automatically cut.

To reactivate them, it is necessary to restart the engine.

**Note:** If the system goes into economy mode, a message is displayed.



**NEVER REMOVE THE IGNITION KEY BEFORE THE VEHICLE COMES TO A COMPLETE STOP.**

**ALWAYS DRIVE WITH THE ENGINE RUNNING SO THAT YOU RETAIN THE SERVO FOR BRAKING AND STEERING**

**(risk of engaging the steering lock and losing safety features).**

When parking, remove the ignition key and carefully turn the steering wheel until the steering lock engages.

## II

### Steering lock

**S:** After removing the key from the ignition, turn the steering wheel to engage the steering lock. The key can only be removed in position **S**.

**M:** Running position. The steering is unlocked - to enable the key to be turned to position **M**, it may be necessary to turn the steering slightly.

**D:** Starting position.

For starting and stopping the engine, see “Starting”.

### Economy mode

In order not to discharge the battery when the engine is stopped, your vehicle goes automatically into economy mode.

The electrical components relating to comfort and headlamps (not sidelamps or hazard warning lamps) are automatically cut.

To reactivate them, it is necessary to restart the engine.

**Note:** If the system goes into economy mode, a message is displayed.



**NEVER REMOVE THE IGNITION KEY BEFORE THE VEHICLE COMES TO A COMPLETE STOP.**

**ALWAYS DRIVE WITH THE ENGINE RUNNING SO THAT YOU RETAIN THE SERVO FOR BRAKING AND STEERING**

**(risk of engaging the steering lock and losing safety features).**

When parking, remove the ignition key and carefully turn the steering wheel until the steering lock engages.

# STARTING

## Manual gearbox

- **Ensure that the gear lever is in the neutral position.**
- Do not touch the accelerator.
- In the case of diesel engine vehicles: turn the key to the drive position. Wait for the pre-heater warning lamp to go off, if it is on.
- Action the starter by turning the key until the engine starts (but not for more than ten seconds).
- In temperatures lower than 0°C, apply the clutch during the action on the starter in order to aid starting. Then release the clutch slowly.

## (6 speed) Electronic Gearbox System

- Check that you are in position **N**.
- Fully depress the brake pedal.
- Do not touch the accelerator.
- For Diesel engines: turn the key to position **M**. Wait for the pre-heater warning lamp to go off if it is on.
- Action the starter by turning the key until the engine turns over (not for longer than ten seconds).

**Note** : If the vehicle has been stationary for a long time, or if you have pressed the brake pedal a number of times while stationary, it will be necessary to press the brake pedal hard down in order to authorise the engine to start.

## Automatic gearbox

- Check that you are in position **P** or **N**.
- Do not touch the accelerator.
- For Diesel engines: turn the key to position **M**. Wait for the pre-heater warning lamp to go off if it is on.
- Action the starter by turning the key until the engine turns over (not for longer than ten seconds).

**Note:** If it does not work at first, switch off the ignition, wait for ten seconds, then operate the starter again as described above.



## Advice

### Vehicles equipped with a Turbo:

Turbo equipped engines **MUST** be allowed to return to idle for several seconds before switching off the ignition. Failure to do so could cause serious damage to the turbo unit.

Flicking the throttle pedal as the ignition is turned off can lead to severe damage to the turbo unit.







When the ignition is switched on, the display indicates:

- maintenance indicator, engine oil level indicator and trip mileage recorder,
- then the total and trip mileage recorders.

## Engine oil level indicator

When the ignition is switched on, the maintenance indicator is displayed for several seconds followed by the engine oil level for approximately 10 seconds. (See "Maintenance indicator").



This display indicates normal operating.



A flashing of "**OIL**" indicates an oil level that is below the minimum.

Check using the manual dipstick. See "Levels".

Check the oil level with the vehicle on horizontal ground, the engine having been switched off for at least 15 minutes.

Consult your CITROËN dealer.



A flashing of "**OIL -- --**" indicates a malfunctioning of the indicator.

Consult your CITROËN dealer.

# MAINTENANCE INDICATOR

The maintenance indicator informs you when the next service is due, in conformity with the servicing programme detailed in the vehicle's Maintenance Guide. This information is determined as a function of two parameters: the mileage travelled and the time elapsed since the previous service.

## Operation

On switching on the ignition, the maintenance indicator spanner appears in the display for several seconds; the mileage recorder display indicates how many miles remain to be travelled before the next service is due (in thousands and hundreds of miles).

**For example:** you have the following distance left to travel before the next service:



A few seconds afterwards, the total mileage display appears.



## Functioning if the distance to the next service is less than 600 miles

Each time the ignition is switched on, and for five seconds, the maintenance symbol and the mileage will flash.

**For example:** you have the following distance left to travel before the next service: 900 km.

For five seconds on switching on the ignition, the display shows



A few seconds afterwards, the total mileage display appears and the maintenance symbol remains illuminated.

This signifies that the vehicle will be due for a service shortly.



## Functioning if the service interval is exceeded

Each time the ignition is switched on, the maintenance symbol and the extra mileage travelled (with a minus in front) will flash.

**For example:** the preset service distance has been exceeded by 300 miles. Your vehicle must be serviced as soon as possible.



A few seconds after you have switched on the ignition, the total mileage recorder returns to its normal operation and **the maintenance symbol remains illuminated.**

 



# MAINTENANCE INDICATOR



## Maintenance intervals

If your vehicle is used in particularly harsh conditions, it is necessary to select the maintenance schedules for "special operating conditions" (see the Maintenance Guide) which consist of more frequent services.

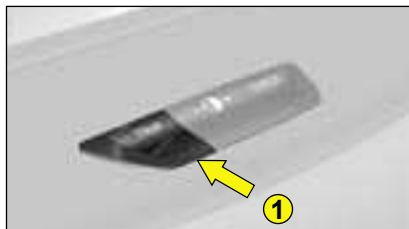

## Resetting the maintenance indicator to zero

Your CITROËN dealer performs this operation after each service. However, if you carry out the servicing yourself, the procedure for resetting to zero is as follows:

- Switch off the ignition, then place the key on position **S**, steering lock.
- Press control **1** and keep it pressed.
- Switch on the ignition.
- Keep control **1** pressed until the zero appears and the maintenance symbol disappears.
- Switch off the ignition.

# DASHBOARD CONTROLS



## Dashboard lighting

The rheostat is active if the sidelamps are on and applies to:

- the instrument panel
- the displays
- the rev counter

The desired brightness is selected via control **A** or by pressing control **B**.


With control **B**, press until the brightness is at maximum. Release, press until you reach minimum.



## Dark button

After the first press on control **C**, only the top part of the display remains illuminated.

A second press on control **C** triggers black panel mode.

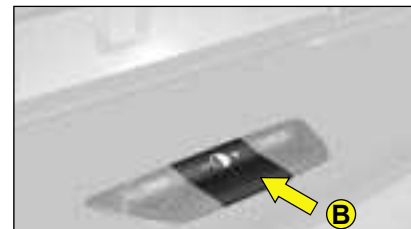

## Black panel (with headlamps on)

This function switches off certain of the displays, for night driving. It can be activated:

- either by 2 presses on control **C**
- or by 1 press on control **D** if this control has been programmed with the black panel function.

The instrument panel continues to show vehicle speed as well as the cruise control and speed limiter functions if these are activated.

If there is an alert or a modification of functions or adjustments, black panel is interrupted.

To programme control **D**:


- give a long press on control **D**,
- then select the black panel function on the multifunction display, using the arrow controls of your Radio/CD or NaviDrive system. Validate with a press on «OK».

**Note:** the lighting rheostat still operates in black panel mode.

# MULTIFUNCTION DISPLAY

## Display A

II

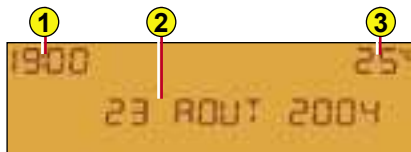

The driver is advised not to manipulate the controls described above while driving.

- 1 - Time.
- 2 - Date and Display zone
- 3 - Ambient temperature

If the outside temperature is between +3°C and -3°C, the temperature display flashes (risk of ice).


**Note:** The outside temperature displayed may be higher than the actual temperature if the vehicle is standing in bright sunshine.



The display of certain types of information is sometimes scrolled and sometimes alternated.

### Controls:

- A** - Access to the "Main menu"
- B** - Scrolling in the display menus.
- C** - Validation and Selection in the menus, of the function chosen or value modified
- D** - Cancellation of the operation or return to the previous display.
- E** - Selection of the type of information displayed in zone 2 (date, radio/CD and trip computer)
- E** or **F** - In the Menus, choice of activation/deactivation of your functions and choice of your adjustments.

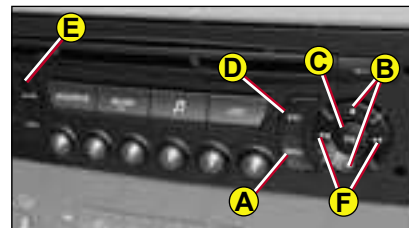


### Main menu

By pressing control **A** then **B**, you have access to the following functions:

- **Radio-CD** (See Chapter IV)
- **Vehicle configuration**, to activate/deactivate:
  - Triggering of rear screen wipe
  - Automatic guide-me-home lighting, with choice of duration
- **Options**, to display the alerts
- **Display adjustments**, to adjust the date and time on the display
- **Languages**, to select the display language
- **Units**, to access the choices of units of Temperature and Fuel Consumption

# MULTIFUNCTION DISPLAY



## Display A

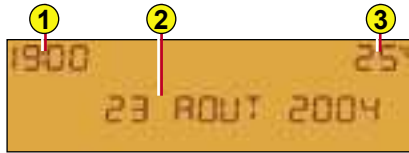

### PERSONALISATION and CONFIGURATION

#### To activate/deactivate rear screen wipe on engaging reverse gear:

- Press on **A**.
- Select, using **B**, the sub-menu to personalise-configure your vehicle, then confirm your choice by a press on **C**.
- Select rear screen wipe, using **B**.
- The system tells you whether the function is active/inactive. Modify this status by a press on **E** or **F**.
- Validate with a press on **C**.

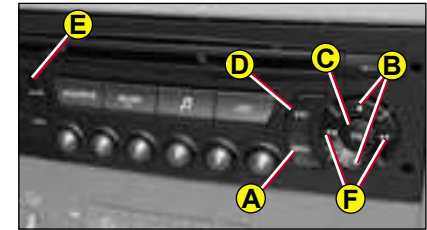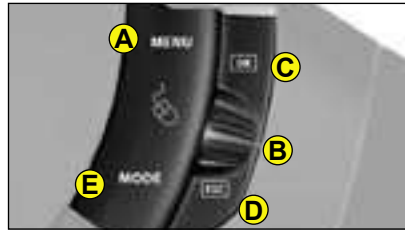

#### To activate/deactivate the automatic guide-me-home lighting:

- Press on **A**.
- Select, using **B**, the sub-menu to personalise-configure your vehicle, then confirm your choice by a press on **C**.
- Select guide-me-home lighting, using **B**.
- The system tells you whether the function is active/inactive. Modify this status by a press on **E** or **F**.
- Validate with a press on **C**.

# MULTIFUNCTION DISPLAY

## Display A

II




### To display the log of alerts:

- Press on **A**.
- Using **B**, select the sub-menu for options. Confirm with two presses on **C**.

**Note:** You can cancel the start of the display by selecting **E** to abandon, validate with a press on **C**.

The alerts that have previously been signalled to you but not resolved, are recalled to you in a scroll. To delete the display of an alert, press **D**.

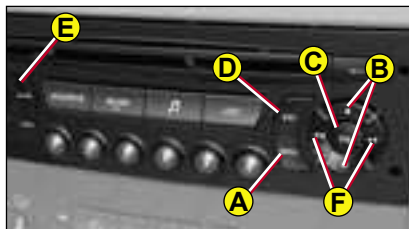

### To adjust the date and the time:

- Press on **A**.
- Using **B**, select the sub-menu for Display Adjustments, then confirm with a press on **C**.
- Using **B**, select what you wish to modify: year, month, day, hour, minutes, or display mode.
- Make your adjustment by presses on **E** or **F**. You can continue your adjustments, selecting further parameters by pressing **B**. When you have finished your adjustments, press **C**.

### To choose the language:

- Press on **A**.
- Using **B**, select the sub-menu for Languages. Confirm your choice with a press on **C**.
- By presses on **E** or **F**, select the language of your choice then validate with a press on **C**.

### To choose units:

- Press on **A**.
- Using **B**, select the sub-menu for Units. Confirm your choice with a press on **C**.
- Using **B**, select the unit you wish to modify (Temperature or Consumption).
- Via presses on **E** or **F**, select the unit of your choice, then validate with a press on **C**.

**Note:** This choice concerns all the types of information (fuel consumption, speed, etc.) that appear on the displays.

# TRIP COMPUTER

## Display version A

 


### Range

This indicates the mileage that can still be travelled using the fuel remaining in the tank.

When the distance remaining to be travelled is less than about 25 km (approx. 15 miles), only three dashes are displayed.

After resetting the computer, the indication of remaining range is only reliable after the vehicle has been used for a certain time.



### Average fuel consumption

The average fuel consumption is calculated from the last reset of the computer.



### Instantaneous fuel consumption

This is calculated from consumption over the previous 2 seconds. This function is only available when travelling at over 30 km/h (approx. 20 mph).



### Average speed

The average speed is obtained, from the last reset of the computer, by dividing the distance covered by the time taken (ignition on).



 
 
### Distance travelled

It indicates the distance travelled since the trip computer was last reset to zero.

### Distance remaining to be travelled (only on NaviDrive)

To enter this, see "Display C and NaviDrive".


## Version with Display C and NaviDrive





# MULTIFUNCTION DISPLAY

## Display C

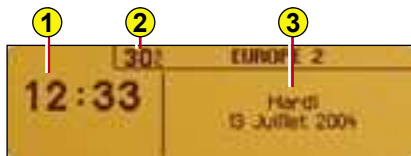

The driver is advised not to manipulate the controls described above while driving.

- 1 - Time.
- 2 - Ambient temperature
- 3 - Date and Display zone

If the outside temperature is between +3°C and -3°C, the temperature display flashes (risk of ice).

### Controls

- A** - Access to the "Main menu"
- B** - Scrolling in the display menus.
- C** - Validation and Selection in the menus, of the function chosen or value modified
- D** - Cancellation of the operation or return to the previous display.
- E** - Selection of the type of information you wish to see permanently displayed (date, radio-CD, trip computer) on the right of the screen



### Main menu

Press control **A** to display the "Main menu" for the multifunction screen. Using this menu, you have access to the following functions:




### Radio-CD

(See Chapter IV)



### Trip computer, giving you:

- Distance to your destination.
- Access to log of alerts (list of the alerts that have been previously signalled).
- Access to status of functions, for example activation/deactivation of automatic lighting of headlamps, ESP, windscreen wipers.

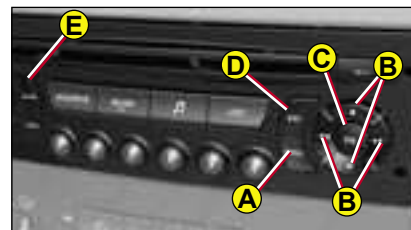

### Personalisation - Configuration, allowing you to activate or deactivate:

- Triggering of rear screen wipe
- Automatic guide-me-home lighting, with choice of duration
- Driving headlamps.

Also to choose:

- Brightness, the time, the date, units.
- The display language.



### Bluetooth hands-free kit (See Chapter IV)

**Note:** The outside temperature displayed may be higher than the actual temperature if the vehicle is standing in bright sunshine.

### TRIP COMPUTER

**To enter the distance to be travelled in the trip computer:**

- Press on **A**.
- Use **B** to select the trip computer icon, then confirm with a press on **C**.
- Select your entry of distance, using **B**. Confirm your choice with a press on **C**.
- To choose the distance, select the figure to be modified, using **B**, then confirm with a press on **C**.
- Use **B** to adjust the value then validate with a press on **C**.
- Validate on “OK” on the display.

**To access the log of alerts in the trip computer:**

- Press on **A**.
- Use **B** to select the trip computer icon, then confirm with a press on **C**.
- Select the log of alerts.
- When the list is displayed, scroll down by pressing **B**.
- Press on **D**, to return to the permanent display.

**To access the status of functions, proceed in a similar manner.**



### PERSONALISATION and CONFIGURATION

**To activate/deactivate rear screen wipe on engaging reverse gear:**

- Press on **A**.
- Use **B** to select the icon “Personalisation - Configuration” then confirm your choice with a press on **C**.
- Then select the sub-menu for vehicle parameters. Confirm with a press on **C**.
- Use **B** to select parking assistance. Confirm your choice with a press on **C**.
- Then with a press on **C**, select/deselect rear screen wipe to activate or deactivate it.
- Validate on “OK” on the display.

**To activate/deactivate the automatic guide-me-home lighting:**

- Press on **A**.

- Use **B** to select the icon “Personalisation - Configuration” then confirm your choice with a press on **C**.
- Then select the sub-menu for vehicle parameters. Confirm your choice with a press on **C**.
- Using **B**, select lighting and signalling. Confirm your choice with a press on **C**.
- Then with a press on **C**, select/deselect guide-me-home lighting to activate or deactivate it. After activation, choose the duration: press on **C** then use **B** to select the duration and press on **C**.
- Validate on “OK” on the display.

**To activate/deactivate driving headlamps:**

- Press on **A**.
- Use **B** to select the icon “Personalisation - Configuration” then confirm your choice with a press on **C**.
- Then select the sub-menu for vehicle parameters. Confirm with a press on **C**.
- Using **B**, select the driving assistance. Confirm your choice with a press on **C**.
- Then with a press on **C**, select/deselect driving headlamps to activate or deactivate them.
- Validate on “OK” on the display.


# MULTIFUNCTION DISPLAY

## Display C



### To adjust the display brightness:

- Press on **A**.
- Use **B** to select the icon “Personalisation - Configuration” then confirm your choice with a press on **C**.
- Select the display configuration using **B**. Confirm with a press on **C**.
- Select the adjustment of brightness. Confirm with a press on **C**.
- Use **B** to select normal or other display mode, then validate with a press on **C**. To adjust the brightness, select the symbols “+” or “-” and confirm your adjustment with a press on **C**.
- Validate on “**OK**” on the display.

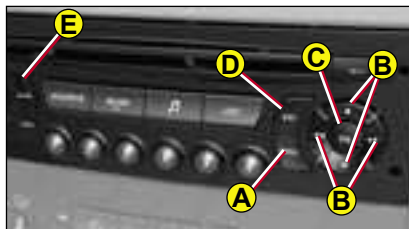

### To adjust the date and the time:

- Press on **A**.
- Use **B** to select the icon “Personalisation - Configuration” then confirm your choice with a press on **C**.
- Select the display configuration using **B**. Confirm with a press on **C**.
- Select the date and time adjustment, using **B**, then confirm with a press on **C**.
- Use **B** to select the values to be modified. Confirm with a press on **C**.
- Make your adjustments using **B**, validating each adjustment with a press on **C**.
- Validate on “**OK**” on the display.

### To choose units:

- Press on **A**.
- Use **B** to select the icon “Personalisation - Configuration” then confirm your choice with a press on **C**.
- Select the display configuration using **B**. Confirm with a press on **C**.
- Then select the sub-menu for Units. Confirm with a press on **C**.
- Using **B**, select the unit to be modified (Temperature or Consumption) then validate with a press on **C**.
- Validate on “**OK**” on the display.

**Note:** This choice concerns all the types of information (fuel consumption, speed, etc.) that appear on the displays.

### To choose the language:

- Press on **A**.
- Use **B** to select the icon “Personalisation - Configuration” then confirm your choice with a press on **C**.
- Select the choice of language, using **B**.
- Using **B**, select the desired language and validate your choice with a press on **C**.
- Validate on “**OK**” on the display.

# TRIP COMPUTER

## Display version A



### Range

This indicates the mileage that can still be travelled using the fuel remaining in the tank.

When the distance remaining to be travelled is less than about 25 km (approx. 15 miles), only three dashes are displayed.

After resetting the computer, the indication of remaining range is only reliable after the vehicle has been used for a certain time.



### Average fuel consumption

The average fuel consumption is calculated from the last reset of the computer.



### Instantaneous fuel consumption

This is calculated from consumption over the previous 2 seconds. This function is only available when travelling at over 30 km/h (approx. 20 mph).



### Average speed

The average speed is obtained, from the last reset of the computer, by dividing the distance covered by the time taken (ignition on).



 
 
### Distance travelled

It indicates the distance travelled since the trip computer was last reset to zero.

### Distance remaining to be travelled (only on NaviDrive)

To enter this, see "Display C and NaviDrive".


## Version with Display C and NaviDrive



# MULTIFUNCTION DISPLAY

## NAVIDRIVE MONOCHROME SCREEN

II

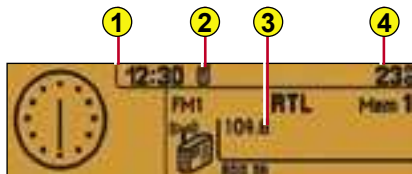

The driver is advised not to manipulate the controls described above while driving.

- 1 - Time.
- 2 - Telephone
- 3 - Display zone
- 4 - Ambient temperature

If the outside temperature is between +3°C and -3°C, the temperature display flashes (risk of ice).

**Note:** The outside temperature displayed may be higher than the actual temperature if the vehicle is standing in bright sunshine.



### Controls

- A** - Access to the "Main menu"
- B** - Scrolling in the display menus.
- C** - Validation and Selection in the menus, of the function chosen or value modified
- D** - Cancellation of the operation or return to the previous display
- E** - Selection of the type of information you wish to see permanently displayed (date, radio-CD, trip computer) on the right of the screen

### Main menu

Press control **A** to display the "Main menu" for the multifunction screen.

Using this menu, you have access to the following functions:



### Navigation/guidance

(See NaviDrive instructions)



### Audio

(See Chapter IV)



### Trip computer

(See NaviDrive instructions)



### Directory

(See Chapter IV and your NaviDrive instructions)



### Telematics

(See Chapter IV and your NaviDrive instructions)



**Configuration**, for adjusting various parameters (date, time, units)

See NaviDrive instructions

# TRIP COMPUTER

## Display version A



### Range

This indicates the mileage that can still be travelled using the fuel remaining in the tank.

When the distance remaining to be travelled is less than about 25 km (approx. 15 miles), only three dashes are displayed.

After resetting the computer, the indication of remaining range is only reliable after the vehicle has been used for a certain time.



### Average fuel consumption

The average fuel consumption is calculated from the last reset of the computer.



### Instantaneous fuel consumption

This is calculated from consumption over the previous 2 seconds. This function is only available when travelling at over 30 km/h (approx. 20 mph).



### Average speed

The average speed is obtained, from the last reset of the computer, by dividing the distance covered by the time taken (ignition on).



 
 
### Distance travelled

It indicates the distance travelled since the trip computer was last reset to zero.

### Distance remaining to be travelled (only on NaviDrive)

To enter this, see "Display C and NaviDrive".

## Version with Display C and NaviDrive



# MULTIFUNCTION DISPLAY

## NAVIDRIVE COLOUR SCREEN



The driver is advised not to manipulate the controls described above while driving.

- 1 - Ambient temperature
- 2 - Directory
- 3 - Date
- 4 - Telephone
- 5 - Time.

If the outside temperature is between +3°C and -3°C, the temperature display flashes (risk of ice).

**Note:** The outside temperature displayed may be higher than the actual temperature if the vehicle is standing in bright sunshine.

### Controls

- A** - Access to the “Main menu”
- B** - Scrolling in the display menus.
- C** - Validation and Selection in the menus, of the function chosen or value modified



**D** - Cancellation of the operation or return to the previous display

**E** - Selection of the type of information you wish to see permanently displayed (date, radio-CD, trip computer) on the right of the screen

### Main menu

Press control **A** to display the “Main menu” for the multifunction screen.

Using this menu, you have access to the following functions:



### Navigation/guidance

(See NaviDrive handbook)



### Audio

(See NaviDrive handbook)



### Trip computer

(See NaviDrive handbook)



### Directory

(See NaviDrive handbook)



### Telematics

(See NaviDrive handbook)



**Configuration**, for adjusting various parameters (date, time, units)

(See NaviDrive handbook)



### Map

(See NaviDrive handbook)



### Video

(See NaviDrive handbook)

# TRIP COMPUTER

## Display version A



### Range

This indicates the mileage that can still be travelled using the fuel remaining in the tank.

When the distance remaining to be travelled is less than about 25 km (approx. 15 miles), only three dashes are displayed.

After resetting the computer, the indication of remaining range is only reliable after the vehicle has been used for a certain time.



### Average fuel consumption

The average fuel consumption is calculated from the last reset of the computer.



### Instantaneous fuel consumption

This is calculated from consumption over the previous 2 seconds. This function is only available when travelling at over 30 km/h (approx. 20 mph).



### Average speed

The average speed is obtained, from the last reset of the computer, by dividing the distance covered by the time taken (ignition on).



 
 
### Distance travelled

It indicates the distance travelled since the trip computer was last reset to zero.

### Distance remaining to be travelled (only on NaviDrive)

To enter this, see "Display C and NaviDrive".

## Version with Display C and NaviDrive








To obtain display and selection of the different types of information, give short presses on the end of the windscreen wiper stalk.

For C-type screens and NaviDrive, one press on the "Mode" button gives you permanent display of the trip computer information.

**To reset trip computer information to zero**, press continuously for a few seconds on the end of the stalk when one of the information types is displayed.

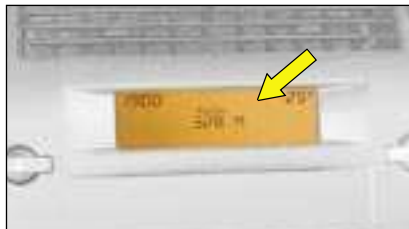

## Display A

The trip computer provides four types of information which can be accessed by successive presses on the control stalk.

- Instantaneous fuel consumption
- Distance travelled
- Average fuel consumption
- Average speed

To cancel the display of the trip computer information, press a fifth time.



## DISPLAYS C and NaviDrive

The trip computer gives access to 3 types of instantaneous information:

- Range
- Instantaneous consumption
- Distance remaining to be travelled.

It also gives you access to 3 types of information for two Journeys 1 and 2:

- Distance travelled
- Average consumption
- Average speed.

## The journeys

Journeys 1 and 2 are identical but independent of each other. For example, you can use Journey 1 for daily calculations and Journey 2 for monthly calculations.

## To reset a journey to zero

When the desired journey is displayed, give a long press on the end of the wiper stalk.

# TRIP COMPUTER

## Display version A



### Range

This indicates the mileage that can still be travelled using the fuel remaining in the tank.

When the distance remaining to be travelled is less than about 25 km (approx. 15 miles), only three dashes are displayed.

After resetting the computer, the indication of remaining range is only reliable after the vehicle has been used for a certain time.



### Average fuel consumption

The average fuel consumption is calculated from the last reset of the computer.



### Instantaneous fuel consumption

This is calculated from consumption over the previous 2 seconds. This function is only available when travelling at over 30 km/h (approx. 20 mph).



### Average speed

The average speed is obtained, from the last reset of the computer, by dividing the distance covered by the time taken (ignition on).



 
 
 
### Distance travelled

It indicates the distance travelled since the trip computer was last reset to zero.

### Distance remaining to be travelled (only on NaviDrive)

To enter this, see "Display C and NaviDrive".

## Version with Display C and NaviDrive



# MANUAL GEARBOX

II



**5 speed gearbox**

## **Reverse gear**

Do not select reverse gear until the vehicle is completely stationary.

Depress the clutch pedal and wait a few moments before gently engaging reverse gear.



**6 speed gearbox**

## **Reverse gear**

Lift the collar **A** to engage reverse gear.

Do not select reverse gear until the vehicle is completely stationary.

Depress the clutch pedal and wait a few moments before gently engaging reverse gear.

# 6 SPEED ELECTRONIC GEARBOX SYSTEM

## GENERAL INFORMATION



The (6 speed) Electronic Gearbox System gives you the choice of two driving modes:

- an automatic mode,
- a manual mode with two control possibilities: the controls at the steering wheel 1 and the selection lever 2 on the central console.

For each of these two modes, a Sport option (corresponding to a more dynamic style of driving) is also available.

**Selection lever for (6 speed) Electronic Gearbox System operating mode:**

- automatic operation with the gear lever 2 in position **A**.
- manual operation with the gear lever 2 in position **M**.

**Note:** if you are in automatic mode, an instant manual mode activates whenever you action one of the controls at the steering wheel 1.

**Display on the rev counter**

- The position selected by the driver using the gear lever (**N**, **R** or **A**) displays on the rev counter.
- In Auto mode (**A**) or Manual mode (**M**), the gear engaged is displayed.
- If the Sport option is activated, the warning lamp “**S**” is displayed.

# 6 SPEED ELECTRONIC GEARBOX SYSTEM

## GENERAL INFORMATION

II



### Starting the vehicle

- To start the engine, the gear lever has to be in position **N**.
- Fully depress the brake pedal.
- Action the starter.
- With the engine running, depending on your preference place the lever on **R**, **A** or **M**.
- Check the position engaged on the rev counter.
- Release the handbrake.
- Release the brake pedal and accelerate.

If the lever is not in position **N**, the warning lamp “**N**” flashes on the rev counter.

If the brake pedal is not pressed down, the warning lamp “**Foot on brake**” flashes in the instrument panel.

In both cases, the engine does not start ; recommence the above procedure.

**Note** : If the vehicle has been stationary for a long time, or if you have pressed the brake pedal a number of times while stationary, it will be necessary to press the brake pedal hard down in order to authorise the engine to start.

### Using the (6 speed) Electronic Gearbox System



#### Neutral

If the vehicle is moving, do not select this position, even momentarily.



#### Reverse gear

##### Engaging reverse gear :

Only engage reverse gear when the vehicle is stationary.

If the vehicle is moving at a very low speed, if reverse gear is requested (position **R**) this will be taken into account only when the vehicle comes to a halt.

The «foot on brake» warning lamp may flash in the instrument panel to remind you to brake.

If the vehicle is moving at a high speed, if reverse gear is requested the warning lamp “**N**” will flash and your vehicle will go automatically into neutral. To re-engage a gear, you have only to return the gear lever to position **A** or **M**.

A sound signal indicates when reverse gear is engaged.

If parking assistance is deactivated, the sound signal for reverse gear engaged is absent.

# 6 SPEED ELECTRONIC GEARBOX SYSTEM

## GENERAL INFORMATION



### Automatic mode



### Manual forward drive

#### Selector position for manual gear changing :

- Push the lever to change to a higher gear.
- Pull the lever to change to a lower gear.



### Sport option

#### To select the Sport option

Press on button **S**, situated on the lever grille.

The warning lamp “**S**” displays on the rev counter.

This option can be activated either in automatic mode or in manual mode.

#### To deactivate the Sport option

Press again again on button **S** on the lever grille.

The warning lamp “**S**” disappears on the rev counter.

**Note:** the Sport option is deactivated whenever you switch off the ignition.

### Stopping the engine

Before switching the engine off, you can choose :

- to leave the vehicle in neutral ; for that, place the lever in position **N**,
- to leave the vehicle with a gear engaged (**R**, **A** or **M**) ; for that, place the lever in the position chosen. In this case, the vehicle cannot be moved.

In all cases, it is essential to apply the handbrake.

Before undertaking any operation in the engine compartment, make absolutely sure that the gearbox is in neutral and that the handbrake is on.

### Acceleration

For performance in acceleration (for example to overtake another vehicle), you have only to press the pedal hard down to go beyond the end-of-travel switch.

### Starting on a gradient:

#### - Using the handbrake

If starting on a gradient, acceler-



**The engine can only be started if the brake pedal is pressed and the gear lever is in position N.**

**The warning lamp “foot on brake” flashes on the display.**

**With the engine running, before accelerating away check the position engaged by looking at the lever grille or the rev counter :**

**R, A or M.**

**If you are stationary with the engine running, take care to leave your gear selector in position N.**

# 6 SPEED ELECTRONIC GEARBOX SYSTEM

## AUTOMATIC MODE

II



### To select automatic mode

Place the selection lever in position **A**.

The “**AUTO**” warning lamp displays on the rev counter to confirm the selection.

The gearbox then operates in autoactive mode, without intervention on your part.

It constantly selects the gear best adapted to the following parameters:

- Style of driving.
- Road profile.



### Instant manual mode

Even in automatic mode, if you touch the controls under the steering wheel “+” or “-” you immediately change gear.

The “**AUTO**” warning lamp remains displayed on the rev counter.

In the absence of any further action, automatic mode reactivates to cope with the prevailing driving conditions.



### Cancellation of automatic mode

Move the gear lever from position **A** to select a different position.

The “**AUTO**” warning lamp disappears on the rev counter.

# 6 SPEED ELECTRONIC GEARBOX SYSTEM

## MANUAL MODE



### Control using the gear lever

Position the gear lever in position **M**, then :

- push the lever to engage a higher gear,
- pull the lever to change down.



### Controls at the steering wheel

Place the gear lever in position **M**, and then the controls at the steering wheel will give you access to the six gears in forward drive.

To change gear:

- Press behind the control “+” at the steering wheel to engage a higher gear.
- Press behind the control “-” at the steering wheel to change down.

**Note:** These controls at the steering do not permit you to select neutral or reverse gear.

### Observations:

When the vehicle is braking or reducing speed, the gearbox changes down automatically to a suitable gear.

In manual mode, it is not necessary to release the accelerator during changes of gear.

Changes of gear are accepted only if consistent with engine speed.




**Under heavy acceleration, a higher gear will only be engaged when the driver actions the gear lever or the controls at the steering wheel.**



# AUTOMATIC GEARBOX

II

## Automatic gear selector lever

- **Park** (Position **P**)
- **Reverse gear** (Position **R**)
- **Neutral** (Position **N**)
- The **automatic** gearbox offers you:
  - **Operation in auto-active mode**, with automatic adaptation to your style of driving. (Position **D**)
  - **Operation in sequential mode**, with manual gear changing, (pushing the selector towards + or -). (Position **M**)
  - **Operation in Sport or Snow automatic mode** (position **D** and press on control **S** or )



## Gear lever position

The position of the gear selector is displayed on the rev counter.

## For safety:

- The gear lever can only be disengaged from position **P** if you are **pressing the brake pedal**.
- When a door is opened, an audible signal sounds if the lever is not in position **P**.
- Before leaving the vehicle, make absolutely certain that the **PARK** or **P** position is selected.

# AUTOMATIC GEARBOX



**The engine can only be started when the lever is at position P or N.**

A safety device ensures that starting is impossible in the other positions.

After starting the engine, with selector on **P**, depress the brake pedal then shift the selector to **D**, **R** or **M**,

- **D** for automatic,
- **R** for reverse,
- **M** for manual operation.

A shift from **D** (automatic) to **M** (manual) is possible at any time.

## Using the automatic gearbox



**Park**

Do not engage until the vehicle is completely stationary.

To avoid any movement of the vehicle when parked, select position **P** and apply the handbrake firmly. Check that the selector is in the **P** position to ensure that the driving wheels are locked.



**Reverse gear**

Do not engage until the vehicle is stationary, foot on brake. To avoid engine hesitation, do not accelerate immediately after the selection.



**Neutral**

Do not select this position, even momentarily, when the vehicle is in motion.



- Never select position **N** if the vehicle is moving.
- Never select positions **P** or **R** if the vehicle is not completely stationary.

If, while the vehicle is moving, position **N** is engaged inadvertently, let the engine idle before engaging position **D** or **M**.



## **D** Drive

The gearbox always selects the gear best adapted to the following parameters:

- style of driving,
- route profile,
- vehicle load.

In this way the gearbox operates in **autoadaptive** mode, without the need for your intervention.

For certain manoeuvres (for example overtaking), it is possible to obtain maximum acceleration by pressing hard down on the accelerator pedal, which may trigger automatic changedown to a lower gear.

### **Note**

During braking, the gearbox may kick down automatically in order to offer an effective engine brake.

If you rapidly lift your foot off the accelerator, the gearbox will guard your safety by not changing up again.



## **M** Sequential forward drive


Selector position for manual gear changing.

- Selector at **M**.
- Push the selector towards the sign “+” to change up a gear.
- Pull the selector towards the sign “-” to change down a gear.

**Note:** Passage from one gear to another is only possible when vehicle speed and engine speed permit.





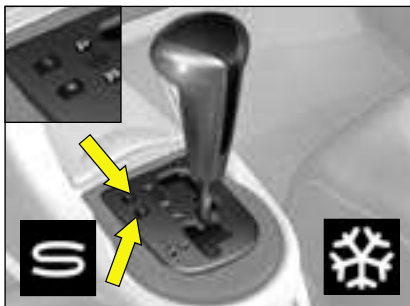



The **Sport** and **Snow** programmes are not operative in sequential mode.

The change from position **D** (drive in automatic mode) to position **M** (drive in sequential mode) or vice versa may be effected at any time.



## Operation in Sport or Snow automatic mode

### Select the driving mode:

- Normal, for regular use, the warning lamps  and  are not illuminated.
- Sport, for more responsive driving, to provide maximum performance and acceleration.
- Snow, for smooth driving in wintry conditions.
- With selector on **D**, press button :  the warning lamp  in the rev counter will light up, you are in «**SPORT**» mode.
- With selector on **D**, press button :  the warning lamp  in the rev counter will light up, you are in «**SNOW**» mode.
- Press button again, warning lamps  and  go out, the “**NORMAL**” mode is active.



- Flashing of the warning lamp for the position requested signals that this position has not yet been permitted.
- When the warning lamp is fixed, the position is confirmed.
- The display of a dash in the rev counter indicates a fault.  
Urgently consult a CITROËN Dealer

If there is a fault :

- A sharp hesitation may be felt when you select **R** for reverse gear.
- The gearbox is stuck in a gear.
- Do not exceed 100 km/h (approx. 60 mph).  
Urgently consult a CITROËN Dealer



## Handbrake

The parking brake is applied, with the vehicle stationary, by pulling on the lever with a force that is proportionate to the steepness of the slope.

To facilitate the action on the lever, you are recommended to press the brake pedal at the same time.

In all circumstances, as a precautionary measure, engage first gear. For vehicles equipped with an automatic gearbox, ensure that the parking position (**P**) is selected.

On steep slopes, turn the steering towards the kerb.

To release the handbrake, press on the end of the lever, pull the lever up then lower it fully.

The warning lamp will come on if the handbrake is on or not fully released.



If the parking brake is off, the lighting of this warning lamp, in conjunction with the STOP warning lamp, indicates that the brake fluid level is low or that the braking distributor is malfunctioning.

**It is essential to stop the vehicle.**

Urgently consult a CITROËN Dealer



## **ABS - Anti-lock Braking System**

This system improves vehicle safety by preventing the wheels from locking under emergency braking or when braking on surfaces offering poor adhesion. It thus allows control of the steering to be retained.

The operational capacity of the various electrical components of the ABS is continuously monitored, both before and during your journey. On switching on the ignition, the ABS warning lamp will light up and then should go out after a few seconds.

If the warning lamp stays on, this means that the ABS has been disconnected because a fault was detected. If the warning lamp lights up when you are driving, this means that the ABS system is not active. In either case, the normal braking system remains effective, as on a vehicle without ABS. Nevertheless, to restore the additional safety afforded by correct functioning of ABS, it is recommended that the vehicle be taken to a CITROËN dealer as soon as possible.

On slippery roads (loose stones, snow, ice, etc.), it remains essential to drive with caution.

## **Emergency braking assistance**

This system enables you in an emergency to achieve the optimum braking pressure, thus to reduce the stopping distance. It is triggered by your speed of action on the brake pedal, which reduces its resistance to that action. Keep the brake pedal pressed until the vehicle comes to a stop.

### Electronic Stability Programme (ESP) and Traction Control (ASR)

These systems are closely connected to the ABS and additional to it. In the event of a loss of control of the vehicle by the driver, the **ESP system** acts automatically on one or more brakes and also on the engine to bring the vehicle back on trajectory. The **ASR system** optimises traction and prevents wheel spin by acting on the brakes of the driving wheels. It also improves steering stability during acceleration.

#### Operation

When either the ESP or ASR system is brought into operation, the **ESP/ASR** warning lamp flashes.

#### Deactivation

In exceptional conditions (vehicle stuck in snow, soft ground, etc.) it may prove useful to deactivate the ESP/ASR system to allow the wheels to spin and thus regain traction.

- Press on control **A**, the **ESP/ASR** warning lamp and the control light up. **The ESP/ASR systems are no longer active.**

The ESP/ASR systems will activate again:

- **Automatically** after the ignition has been switched off.
- **Automatically** when you drive at above approx. 30 mph (except 2.0i 16V 180hp engine).
- **Manually** with another press on control **A**.

#### Operational anomaly

If there is a system malfunction, the **ESP/ASR** warning lamp comes on. Contact CITROËN to have the system checked.



#### SAFETY RECOMMENDATIONS

The ESP system offers increased driving safety but is not in place to encourage the driver to take additional risks or to drive at excessive speeds.

The functioning of this system is subject to compliance with the manufacturer's recommendations on wheels (tyres and rims), brake parts and electronic components, as well as with CITROËN's assembly and repair procedures.

After any collision, have this system checked by a CITROËN dealer.

Complementary to the catalytic converter, this filter makes an active contribution to the preservation of air quality by the retaining of the unburnt pollutant particles. Black exhaust fumes are thus no longer emitted.

## **Clogging of the particle filter**

This alert tells you that the particle filter is starting to fill up (in conditions of urban driving of exceptionally long duration: low speeds, traffic jams etc.)

In order to regenerate the filter, you are advised to drive as soon as possible, when the traffic conditions permit, at a speed of 60 km/h (around 40 mph) or more for at least 5 minutes.

If this alert persists, consult a CITROËN dealer.

**Observation:** After prolonged idling or driving at very low speeds, you may occasionally notice water vapour being emitted from the exhaust when accelerating. This is of no consequence to the running of the vehicle or to the environment.

## **Diesel fuel additive level**

If the additive level is low, it is necessary to top up the additive. Contact a CITROËN dealer as soon as possible.



# LANE DEPARTURE WARNING SYSTEM

II



This driving assistance device alerts you if you are wandering from your lane (continuous or dotted line marking on the road surface).

It is designed especially for use on motorways and dual carriageways, operating only at speeds above 80 km/h (approx. 50 mph).

## Activation / Deactivation

A press on control **A** activates the function, the warning lamp on the control lights up.

A second press on control **A** deactivates the function, the warning lamp on the control goes out.

Whenever you start the engine, the mode (activated/deactivated), selected when you last switched off the engine, is retained.

## Operation

Provided you are travelling at over 80 km/h (approx. 50 mph), if you cross a lane marking, you are alerted by a vibration within the cushion of your seat:

- oriented to the right for crossing a lane marking to the right,
- oriented to the left for crossing a lane marking to the left.

The system does not alert you while your direction indicator is operating, nor for about 20 seconds after your direction indicator has stopped.

**Note:** This device is designed to identify traffic lane markings.

In certain specific instances, it may trigger an unwanted alert, for example when you cross a direction arrow or some other random marking.

The effectiveness of the system may be temporarily affected by conditions external to the vehicle:

- Detection of lanes made difficult by:
  - Markings that are worn or erased.
  - Insufficient contrast with the surface of the road.
- Masking of the sensors due to:
  - Driving in snow or heavy rain.
  - Driving on roads covered with mud or surface water.

If the system is ineffective for a prolonged period, contact a CITROËN dealer.

**The driver must still remain attentive and in complete control of the vehicle.**

# DIRECTIONAL HEADLAMPS

This function is associated with headlamps that have Xenon bulbs.

Whether on dipped beam or main beam, your headlamps follow the direction of the road ahead.

Lighting quality when driving round bends is considerably improved.



Function activated



Function deactivated

## Activation / Deactivation

This can be activated / deactivated in the “Main menu”. See “Multifunction displays”.

When you start the engine, you retain the mode (activated or deactivated) that was selected when you last stopped the engine.

By default, this function is in activated mode.

**Note:** At zero or very low speed, or in reverse gear, this function is inactive.

On vehicles equipped with day-time-running lamps, the function is activated only if the lighting control is on main beam / dipped beam.

**If there is a malfunction, the «Dipped beams» warning lamp flashes.**

**Have the system checked by a CITROËN dealer.**

**You are recommended to have both Xenon bulbs changed if there has been a malfunction in either of them.**

# PARKING ASSISTANCE

II



Proximity sensors are located in the **front and rear bumpers** of your vehicle.

When manoeuvring, whether forwards or in reverse, at a speed below approx. 6 mph, they warn you of the presence of any obstacle situated within their detection zone, by means of:

- a sound signal emitted by the front or rear loudspeakers,
- the display of the outline of your vehicle with shading at the zones where obstacles are detected.

As the vehicle approaches an obstacle, the sound signal tells you its position according to whether the sound issues from the front LH or RH speaker or from the rear LH or RH speaker.



**Colour NaviDrive version**



**Screen C and Monochrome NaviDrive version**

- As the vehicle gets close to the obstacle, the sound signal becomes ever more rapid and the shading appears ever closer to your vehicle's outline.
- When the obstacle is less than around 25 centimetres from the vehicle, the signal becomes continuous and a **WARNING** panel appears on the display.

## Activation / Deactivation

You can activate/deactivate the parking assistance with a press on control **1**. If the parking assistance is inactive, the warning lamp is on.

Activation or deactivation of the parking assistance is memorised when you stop the vehicle.

**Note:** The system is deactivated automatically if a trailer is attached to the vehicle.

The fitting of the towbar should be carried out by the CITROËN network.

## Operation:

- **When you engage reverse gear**, a sound signal informs you that the system is active. The outline of your vehicle is displayed on the screen. Any obstacles situated at the rear or at the front of the vehicle can be detected.
- **Moving forward** at a speed lower than approx. 10 km/h (6 mph), either in neutral or in a gear, the outline of your vehicle is displayed on the screen immediately an obstacle is detected in front of the vehicle. Obstacles situated at the front of the vehicle can be detected.

## Note

- The proximity sensors cannot detect obstacles situated immediately below or above the bumpers.
- A thin object such as a spike or stake, or other similar object, may be detected only at the start of your manoeuvre but not when the vehicle has approached close to it.
- During the winter months or in bad weather, make sure that the sensors are not covered by dirt or by ice or snow.

## Locking from the inside

With the doors closed, press button **A** once to operate the electric central locking and unlocking.


The doors can still be opened from inside.

The central locking will not operate if a door is open, or not properly closed.

The lamp on the control **A** can signal any of 3 statuses:

- It flashes if the doors are open when the vehicle is stationary, engine stopped.
- It lights up if the doors are locked and the ignition is switched on.
- It goes out if the doors are not locked.

**Note:** Control **A** is inactive if the vehicle has been locked with the remote control or with the key.

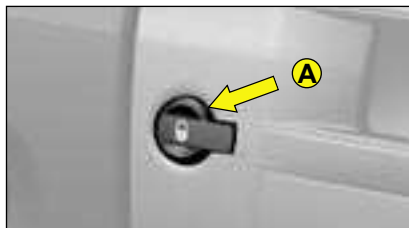


## Personal security

When the vehicle is started, the system automatically locks the doors and tailgate as soon as you reach a speed of approx. 10 km/h (6 mph).

**Note:** If a door is opened, this door will automatically relock as soon as the vehicle reaches approx. 6 mph.

## Activation / Deactivation of the function

After switching on the ignition, give a long press on the central unlocking button until a message is displayed.

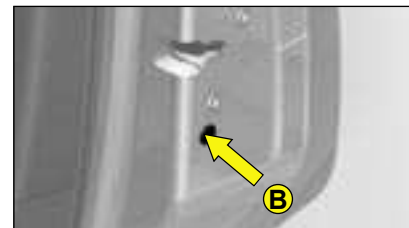

## Manual operation (emergency mode)

In the event of an electrical fault, it is possible to lock the vehicle's doors by actioning control **B** on each door.


With the door open, insert the end of a key or similar item into the aperture and turn.

Close the door.

After a repair, normal functioning resumes using either the unlocking control **A**, the remote control, or the key used in the driver's door.



**If you decide to drive with the doors locked, remember that in the event of an accident this renders access more difficult for the emergency services.**

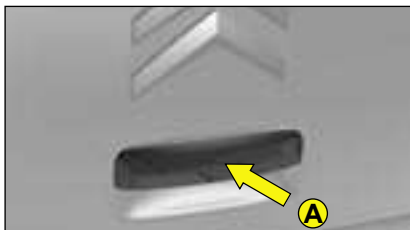

## Tailgate

### Opening from the outside

Press upwards on lever **A** which is located between the number plate lamps.

### Anti-theft security

In all cases, as soon as the vehicle is moving (at above approx. 10 km/h or 6 mph) the tailgate locks automatically. The tailgate unlocks when a door is opened or if the interior locking/unlocking button is pressed.



## Closing the tailgate

Lower the tailgate, using the 2 handhold zones located on the tailgate interior trim.

Removing your fingers, press down to close.



## Emergency unlocking

If there is a problem with unlocking the tailgate, it can be unlocked from inside the boot:

- insert a screwdriver or similar tool into hole **B** of the lock,
- turn it in order to unlock the tailgate.

# VENTILATION - HEATING AIR CONDITIONING

III



# VENTILATION - HEATING AIR CONDITIONING

## Air intake

Make sure that the exterior air inlet grille at the base of the windscreen is clean (free of dead leaves, snow etc.).

If washing the vehicle with a high pressure jet, take care to avoid targeting close to the air inlet.

## Air vents

The air vents have grilles for directing the flow of air (up/down, right/ left) with controls for adjusting the volume of air.

## Air circulation

Optimal comfort is obtained by a good distribution of air in the front and the rear of the passenger compartment.

To ensure efficient operation, take care not to obstruct the air outlets located under the front seats.

## Pollen filter / odour filter (active carbon)

Your installation has a filter for excluding dust and restricting disagreeable odours.

This filter needs to be changed according to the maintenance requirements. (See: Maintenance Guide).

## Air conditioning

At any time of year, the air conditioning is useful for removing air humidity and misting.

To keep the air conditioning compressor well sealed, it is essential to operate the air conditioning at least once in every month.


To be effective, the air conditioning should only be used with the windows closed.

If you are towing a heavy trailer or if outside temperatures are very high, the air conditioning may be temporarily interrupted in favour of engine cooling.

Water arising from condensation in the air conditioning is allowed to drain out through an aperture provided for this purpose ; a pool of water may thus form beneath the vehicle when stationary.

You are recommended to have the air conditioning system checked on a regular basis (see Maintenance Guide).

The air conditioning uses energy from the engine to operate. This results in extra fuel consumption

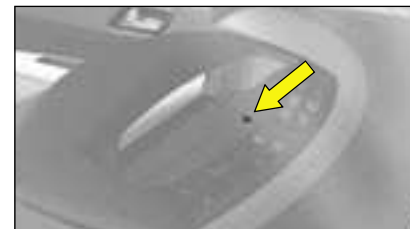

## Sensor

The automatic air conditioning inside the passenger compartment makes use of the sunlight sensor, which is located on the dashboard behind the instrument panel.

Take care not to obstruct it.



## Control panel



### 1 - Adjustment of the air distribution



#### Demisting - Defrosting.

Flow to the windscreen and front side windows.



Distribution to the windscreen, side windows and footwells.



Flow to front and rear passenger footwells.



Air flow to the face level vents.

Distribution from the air blower can be altered at will by placing the distributor 1 in an intermediate position.

### Demisting - deicing of the windscreen and front side windows

- Place the controls for temperature 4 and air flow 3 on maximum.
- Close the central air vents.
- Operate the air conditioning by pressing the control 6, the warning lamp comes on.

**Note:** you should not be in air recirculation.

### 2 - Air recirculation



This position is for excluding disagreeable odours or emissions coming from outside the cabin. With a press on control 2, the entry of air from outside is closed off, the lamp comes on. This should be cancelled as soon as possible to prevent misting and to allow fresh air into the cabin.

To deactivate the air recirculation, press again on control 2.

### 3 - Heater blower control

The air blower operates only when the engine is running. For optimum comfort in the passenger compartment, the control should not remain in position 0 (position 1 minimum).

### 4 - Temperature control

## 5 - Rear screen demisting



Can only be operated with the engine running.

One press on control **5** activates the electric demisting of the rear screen and, according to version, the exterior rear view mirrors. The warning lamp comes on. It switches off automatically to avoid excessive consumption of power.

One press stops the demisting.

A further press starts it again.

**Note:** If the engine is stopped before the end of demisting, the latter will resume the next time the engine is started.

## 6 - Air conditioning



The air conditioning will only operate when the engine is running.

Press on control **6**. The warning lamp comes on.

For air conditioning, the air blower control **3** must not be on position “**0**”.

Air conditioning is obtained by mixing the warm air with refrigerated air. The control for the blown air temperature **4** adjusts the air conditioning provided the control **6** is operational.



# AUTOMATIC DUAL ZONE AIR CONDITIONING

## Control panel



## 1 - Display



## 2 - Automatic operation

This is the normal operating mode.

A press on this control, confirmed by the display of “A/C” and “AUTO”, automatically manages all the 5 following functions according to the temperature chosen:

- Flow of air.
- Cabin temperature.
- Distribution of air.
- Air conditioning.
- Recycling of air.

To enable the system to operate, all the air vents should be kept open.

**Note:** in order to prevent misting inside the vehicle, regardless whether the weather is fresh or humid, **AUTO** mode is recommended.

## 3 - Adjustment of temperature on left hand side

## 4 - Adjustment of temperature on right hand side

To display the desired temperature, rotate control 3 or 4:

- To the left to lower the temperature
- To the right to raise the temperature

The difference between the temperatures on the right and on the left cannot be greater than 3.

An adjustment around 21 will provide a temperature that is comfortable. Depending on your requirements, an adjustment between 18 and 24 is normal.

# AUTOMATIC DUAL ZONE AIR CONDITIONING



The display **HI** (high) corresponds to a demand for maximum heating (above 27).



The display **LO** (low) corresponds to a demand for maximum air conditioning (below 15).

## Notes:

- When you enter the vehicle, the temperature inside the vehicle may be much colder (or warmer) than a comfortable temperature. It is no use modifying the displayed temperature to try to attain the desired level of comfort. The system automatically strives to compensate this temperature discrepancy as rapidly as possible.
- When starting the engine from cold, in order to avoid distributing too much cold air, the blower will attain its optimum level gradually.

## Manual recalling of one or more functions

All the functions **5**, **7** and **8** can be adjusted manually. Display of the function **"AUTO"** then disappears.

## 5 - Air conditioning



To stop the air conditioning, press on the control **5**. The symbol **"A/C"** disappears.

Use the **AUTO** mode to avoid misting of the windows in damp or cold weather.

To restart it, press again on the control **5**. The symbol **"A/C"** displays.

## 6 - Air recirculation



When you press on control **6**, the entry of air from outside is blocked off and the associated symbol is displayed. This function can also be accessed by pressing the appropriate button on the steering wheel.

While retaining the other settings, this position excludes disagreeable odours or emissions coming from outside. It should be cancelled as soon as possible to prevent misting and to allow fresh air into the cabin.

To deactivate the air recirculation, press again on control **6**.

## 7 - Adjustment of the air distribution



Press the button successively so that the display shows, in turn, the air flow to:



 
The windscreen and front side windows.



The windscreen, front side windows and passenger footwells.



Passenger footwells.



Central and lateral air vents and passenger footwells.



Central and lateral air vents.



# AUTOMATIC DUAL ZONE AIR CONDITIONING

## 8 - Air flow

Heater blower speed: press button:



To increase it



To decrease it.

The level of air flow is represented on the display by the progressive filling of the fan blades.

A press on the control **8** deactivates the function “**AUTO**”. To restart it, press again on the control **AUTO**.

**Note:** to avoid condensation and poor air quality in the passenger compartment, it is recommended always to maintain a sufficient flow of air.

## 9 - Demisting - deicing of the windscreen and front side windows



While it is operating, the warning lamp lights and the symbol appears on the display.

This control is for rapid deicing or demisting of the windscreen, acting automatically on the air blower flow, air distribution, air conditioning and air entry. To stop it, press again on control **9** or on the control **AUTO**.

## 10 - Demisting - deicing of the rear screen



When this function is working, the warning lamp comes on and the symbol appears on the display. This control is for rapid deicing or demisting of the rear screen. It switches off automatically to avoid excessive consumption of power.

To stop it, press again on the control **10**.

**Press AUTO to return the system to its automatic function.**


# REAR SEATS



## Rear armrest

Lower it to gain access to the shelf located on the backrest.

Lift the cover. It comprises a tray with two cup-holders and two pen-holders.

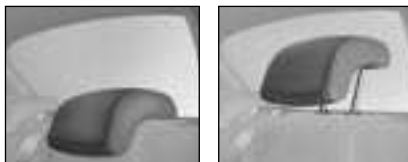

## Rear head restraints

The rear head restraints have two positions:

- A stowed position for when the seat is not occupied.
- A fully raised position aimed at maximising the safety of passengers, **including when using a forward-facing child seat.**

To lower the head restraints, press on the unlocking controls.

To remove them, pull upwards as far as permitted, then press on the unlocking controls.

**Note:** Never drive the vehicle without the head restraints fitted.



## Before folding the seat

Before tipping the rear seat, make sure that the seat belts will not be snagged or trapped by the seat and its catches.

Position them carefully to the sides of the backrests.

# REAR SEATS


III



## Backrest

Stow the head restraints. Press on control **A** located on the extremity of the backrest and tilt fully forwards.

The benchseat backrest can be folded in two. When repositioning the backrest, make sure that it is correctly locked in place.

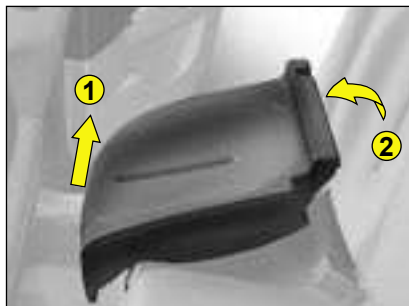


## Folding rear seat

Raise the front of the seat base (arrow 1), then tilt the base against the backrests of the front seats (arrow 2). When repositioning the seat base, make sure that the seat belt buckles are back in place.

Press on control **A** and tilt the backrest.

**Note:** If you fold the benchseat partially, you must also fold the corresponding backrest.

When you are handling the rear seats, avoid trapping the seat belts and make sure that the belt buckles are positioned correctly.

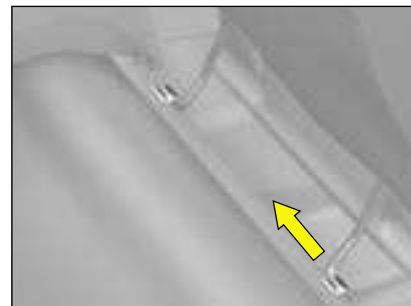

## Removing the seat base

To improve seating versatility, the rear seats are removable.

Detach one of the linkages from its securing point, then disengage the other linkage to remove the seat assembly.



# AIRBAGS



The front passenger's airbag can be deactivated

## Passenger's airbag deactivation

In order to be able to use a "rear-facing" child seat in the front passenger position, it is essential to deactivate the passenger airbag.

- With the ignition off, insert the key into the switch **A**, located in the glovebox.
- Turn the key to position "OFF". The passenger's airbag is deactivated.

The front passenger airbag deactivation warning lamp in the instrument panel lights up (ignition on).



## To reactivate the front passenger's airbag

Do not forget to reactivate the airbag function; to do that, with ignition switched off:

- Insert and turn the key to the "ON" position, the airbag is activated.

The warning lamp in the instrument panel comes on for a few seconds when you switch the ignition on.



**If there is a malfunction, the «airbag fault» warning lamp comes on.**

**In the front passenger's seat position, it is essential to deactivate the front passenger's airbag whenever a "rear-facing" child seat is installed there. Otherwise the child risks being killed or seriously injured should the airbag deploy.**





## Manual operation

The rear doors are locked by operating the lever.

When the manual safety is in use, the aperture is horizontal.



**Note:** with the ignition on, if the child safety is activated for the two rear doors, the warning lamp lights up on the control on the dashboard.



## Electric operation

The electrical safety is activated by pressing the control located to the rear of the electric windows panel. This prohibits movement of the rear electric windows and rear passenger doors.

It is still possible to open the doors from the outside, provided the vehicle is not locked.

**Note:** Activation of the function is confirmed by the lighting of the warning lamp accompanied by a message.



When the ignition is switched on, the warning lamp comes on then goes out again approx. 10 seconds after the engine is started.

# CHILD RESTRAINTS

## CHILD SEATS secured by means of the vehicle seat belt

In conformity with Directive 2000/3, the table below tells you to what extent each of the seat positions in your vehicle may take a child seat that is secured by means of the vehicle seat belt and approved as “Universal” as a function of the weight of the child.

**Consult “User Precautions”: the chapter on “Child Safety” at the end of this handbook, in order to ensure that you are installing your child in conditions of maximum safety.**

Seat(s)		Weight of child			
		Up to 10 kg Up to 13 kg (groups 0 and 0+)	9 - 18 kg (group 1)	15 - 25 kg (group 2)	22 - 36 kg (group 3)
Front passenger (a)	Fixed seat	U	U	U	U
	Height-adjustable seat	U(R)	U(R)	U(R)	U(R)
Lateral rear		U	U	U	U
Central rear		L2	X	L4	L4

U: Seat suitable for the installation of a universal rear-facing child seat and a universal forward-facing child seat

U(R): Seat position suitable for installation of a universal rear-facing child seat and of a forward-facing seat. The vehicle seat should be adjusted to the highest position.

(a) It is essential to deactivate the front passenger’s airbag when a “rear facing” child seat is installed in the front passenger’s seat position.


Before placing your child in the front passenger’s seat position, consult the legislation currently in force in your country on the carrying of children in this position.

L-: Only the child seats indicated may be installed in the seat position concerned (depending on country).

X: Position not suitable for installation of a child seat of the weight group indicated.

**Take care to comply with the fitting instructions given in the child seat manufacturer’s user guide.**



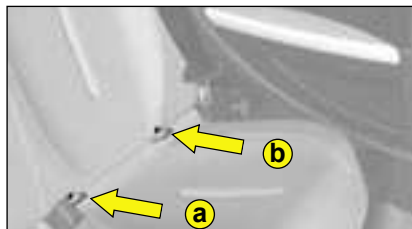


## ISOFIX anchoring points and the ISOFIX fastening system

The lateral rear seat positions are equipped with the ISOFIX regulation anchorages.

There are 3 rings for each seat position:

- Two “bottom” rings **a** and **b** located between the backrest and the vehicle seat. These are about 28 cm apart.
- One “top” ring **c** located in the boot between the wheelarch and the seat backrest.

ISOFIX child seats have two latches which are easy to secure on the two “bottom” rings **a** and **b**.

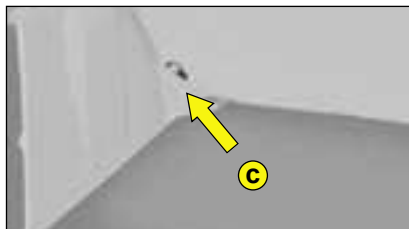


Some ISOFIX child seats also have a top belt, which is for attaching on the ISOFIX “top” ring **c**.

To attach the top belt, raise the head restraint of the vehicle seat, then pass the buckle between the two supports. Next fix the buckle on the “top” ring **c** and tension the top belt.

In all cases, the head restraint has to be raised to the maximum.

This fixing system is intended for children weighing up to 18 kg.

# CHILD RESTRAINTS

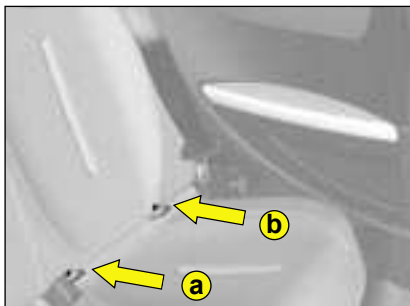

Incorrect installation of a child seat in a vehicle compromises protection of the child in the event of a collision. The ISOFIX fastening system enables you to reduce those risks posed by incorrect fitting, offering you a convenient, strong and reliable fitting for a child seat in your vehicle.

## The ISOFIX child seat recommended for your vehicle is: ISOFIX RÖMER Duo:

It is marketed in the CITROËN network. It is equipped with a top belt and so it is approved as an “ISOFIX universal” child seat.

If it is installed in a rear seat position, the vehicle’s corresponding front seat should be adjusted so that the child’s feet do not touch the backrest of this front seat.

This ISOFIX child seat can also be installed in seat positions that are not equipped with ISOFIX anchoring points. In this case, it is compulsory to secure it to the vehicle seat by means of the vehicle seat belt.

III



**In the front passenger’s seat, it is essential to deactivate the front passenger’s airbag as soon as a “rear-facing” child seat is installed in this position. Otherwise the child risks being killed or seriously injured should the airbag deploy.**

**Take care to comply with the fitting instructions given in the child seat manufacturer’s user guide.**

# INTERIOR LIGHTING

## 1 - Spotlamps

A press on one of the buttons will switch the corresponding spotlamp on or off.

They will not come on if the ignition is switched off or the vehicle is in economy mode.



## III

## 2 - Front and rear interior lamps



In this position, the interior lamp comes on when you open a door or the boot.



In this position, it is deactivated and switched off permanently. In the front, the spotlamps are deactivated.



In this position, lighting is permanent.

### Automatic lighting of interior lamps

- When you enter the vehicle:

They come on immediately you unlock the vehicle or open a door.

They go out 30 seconds after doors have been closed, or after the ignition has been switched on.

- When you leave the vehicle:

They come on when you remove the ignition key (for about 30 seconds), or when a door is opened.

They go out after 30 seconds with the doors closed, or immediately the vehicle is locked.

# INTERIOR LIGHTING



## **Glovebox lighting**

Comes on automatically when the cover is opened. Do not forget to close it again. Does not work with the ignition off.



## **Boot lighting**

Operates automatically on opening the tailgate.



## **Sill lighting**

These light up automatically with the interior lamps.





## Glovebox

To open, pull the handle and lower the lid.

The glovebox has:

- Storage locations for pens, spectacles, telephone cards, etc.
- Three sockets for connecting audio/video equipment.
- A ventilation duct **A** can be adjusted manually. It uses the same conditioned air as the air vents.



**WARNING: As a safety measure, the glovebox must remain shut when the vehicle is in motion.**



## Storage drawer


To open: press at the centre of the drawer.

To retrieve an object, lift the drawer up using the aperture provided.



## Storage flap

To open: press at the centre.

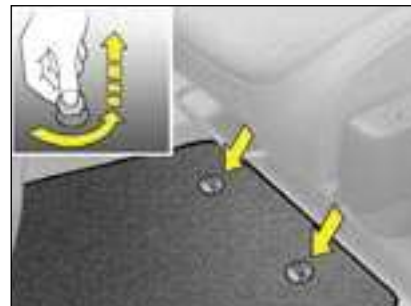

## Floor mats

Use only the fixings provided in the wallet that is attached.

If removing the mat on the driver's side :

- slide the seat as far as possible rearwards,
- completely undo the fixings,
- remove the fixings, then the floor mat.

When refitting, position the floor mat correctly and press the fixings firmly home.

Check that the floor mat is securely in position.


**To prevent any hindrance under the pedals :**

- use only the floor mats that are compatible with the fixings already present in the vehicle. It is essential to use these fixings.
- never fit any further floor mats on top.

# INTERIOR COMFORT



**Storage pockets in the front doors and rear panels**

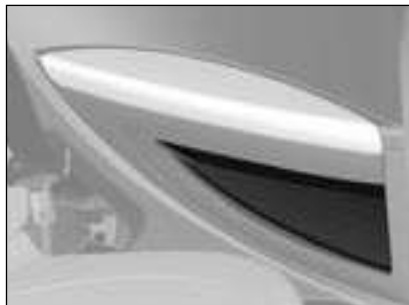

**Oddments tray on front central console**



**Storage pockets**







## Sun visors

Fold visors down to avoid dazzle from ahead.

They can be disengaged from their central fixing and pivoted over to the side windows if required.


The passenger's and driver's sun visors each have a mirror that can be covered.

## Sun visor with illuminated mirror

Illuminates automatically on opening the mirror cover flap (ignition on).



## Glasses-holder

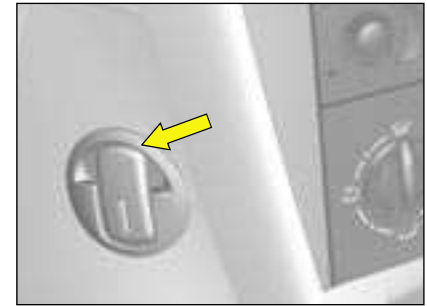

## Carrier bag hook

- Press at the bottom to deploy the hook.
- Press at the top to stow the hook.

## Grab handles/ Coat hooks



# INTERIOR COMFORT



## Cigar lighter

Operates when the ignition is on.  
Push in and wait a few moments.  
The cigar lighter will release automatically. The cigar lighter will gradually emerge for easy removal.

## 12V accessories socket

(Maximum power : 150 Watts)

Operates when the ignition is on.  
It is located on the central console.




## Ashtray

To open it, lift the flap.  
To empty the ashtray, lift at the rear and pull towards you.

## To refit

Reposition the front part of the ashtray, then press on the rear part.

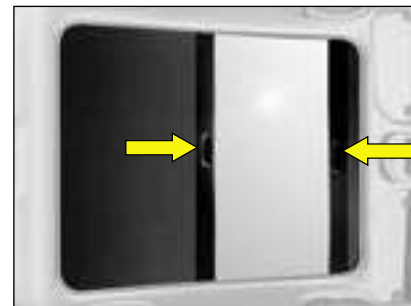


## Panoramic roof

The roof has two opaque blinds positioned at the front and rear.

To close the front blind, pull the handle rearwards.

To close the rear blind, pull the handle forwards.

The blinds have a retard mechanism which stows them automatically when you release them.

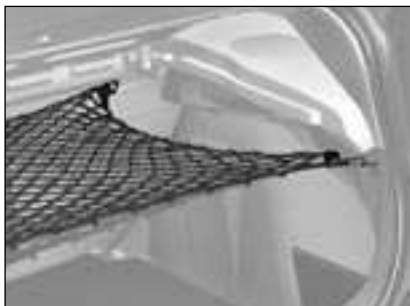


## Luggage securing rings

Use the 2 side fixings at the rear, as well as the 6 anchoring rings on the boot floor and the rear seat backrest, to secure your loads.

For safety reasons, in case of hard braking, heavy objects should be placed as far forward as possible.

## Protective net

This helps to secure objects stowed in the boot.

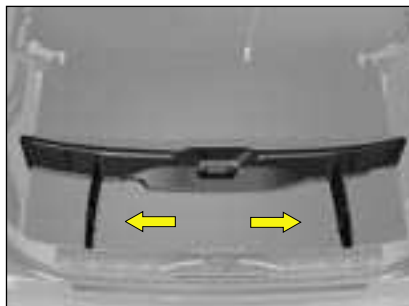


## Boot separation

To keep objects separated in the boot, you can use the separators to create 3 compartments on the boot floor.

## Positioning

- Pull the handle.
- Fold the separators in an appropriate manner to make a firm structure.

**Note:** Before any manoeuvre, make sure that the boot carpet is correctly positioned.

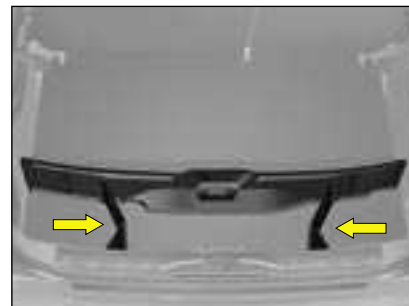

## Storage

- Push the sides towards the centre.
- Push towards the rear.

# BOOT



**Boot hook**



**Removal (3- door model)**

- Detach the cords.
- Carefully lift then pull, tilting it slightly on one side.



**Removal (5- door model)**


- Detach the cords.
- Carefully lift then pull.

III

**Avoid using the rear shelf for heavy or hard items. These could be dangerous if thrown around during harsh braking or, if they touch the rear screen, could damage the heating elements.**

# SCENTED AIR FRESHENER

III

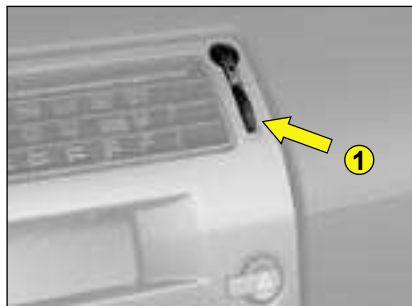

The scented air freshener is located to the right of the central air vent.

You can stop or adjust the flow of scented air, via control 1.

**Note:** The central air vents should be open.



To deploy a cartridge, remove the cap **A** located on the cartridge head and insert the latter into the system.



To remove the cartridge, take the cap **A** off the new cartridge that you will fit and put it on the cartridge you are removing. Pull.

The cartridges need replacing from time to time.

They are available, according to country, on the Citroën internet site.

**As a matter of safety, use the scented air freshener and cartridges only for the purpose intended, in conformity with the user instructions.**

**Keep the cartridge packaging together with the user instructions and precautions.**

**Do not dismantle the cartridges.**

**Do not touch the scent mesh.**

**Never try to refill the scented air freshener or the cartridges with a freshener other than those approved by CITROËN.**

**Keep these items away from children and animals.**

**Avoid them coming into contact with the skin or eyes.**

**In the event of ingestion, consult a doctor and show him the packaging or the label.**

**Do not install, remove or adjust a cartridge while driving.**

# RADIO PRE-EQUIPMENT FITTING LOUDSPEAKERS



## **CITROËN radio option**

See the separate instruction booklet in the vehicle document pack.

## **Radio connections**

Consult your CITROËN dealer



## **Fitting of front and rear loudspeakers**

Consult your CITROËN dealer





## **On the dashboard**





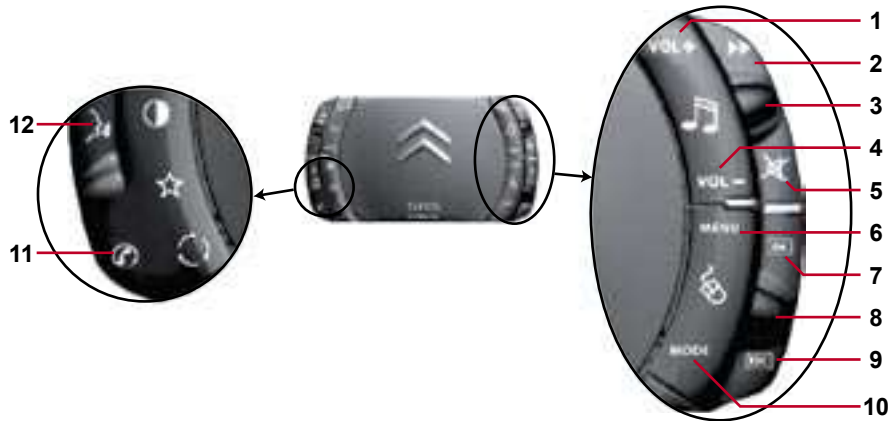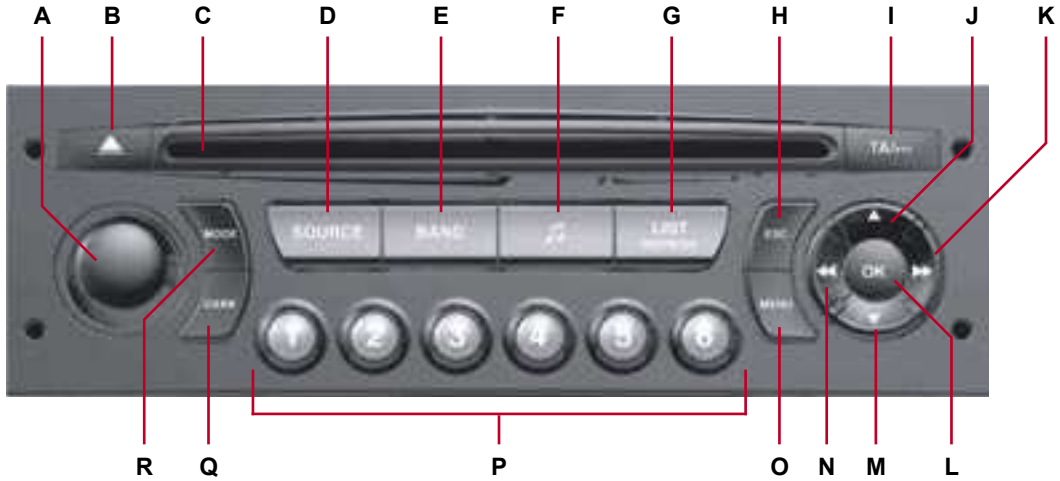

Two tweeters located at each end of the dashboard. Detach and pull the grille, connect the tweeters, fit them on the grille, rotating them a quarter turn, reposition the grilles.

# RDS AUDIO COMPACT DISC SYSTEM WITH CD CHANGER

IV





# BUTTON CONTROLS



A		On / Off. Volume adjust.	L	OK	Button for validation and activation/deactivation of certain functions. <b>If your vehicle has the Bluetooth® system :</b> Answer call, end call.
B		CD eject.	M		<b>Radio source :</b> Manual search of lower frequencies. <b>CD/MP3 changer source :</b> Selection of the next CD/CD-cover. <b>Other sources :</b> Scrolling in the Main Menu.
C		CD aperture.	N		<b>Radio source :</b> Automatic search of lower frequencies. <b>CD source, CD changer source and MP3 source :</b> Reverse search for tracks. - <b>Long press :</b> Rapid reverse with accelerated sound. <b>Other sources :</b> In the menus, choice of your adjustments. <b>If your vehicle has the Bluetooth® system :</b> Selection of characters.
D	SOURCE	<b>One press :</b> Selection of sound source (Radio, CD, CD changer).	O	MENU	Display of the Main Menu. In certain countries, this control is deactivated while the vehicle is moving.
E	BAND/ AST	<b>Short press :</b> Selection of frequency bands and memory banks. <b>Long press :</b> Automatic pre-set function (Autostore).	P	1-6 1-5	<b>Radio source :</b> - <b>Short press :</b> Recall of pre-set stations. - <b>Long press :</b> Memorisation. <b>CD changer source :</b> Selecting a CD.
F		<b>Call-up of audio adjustments :</b> Sound ambiances, bass, treble, loudness, fade, balance, speed-sensitive volume.	Q	DARK	<b>Short successive presses :</b> - <b>One press :</b> Display of radio, time and temperature only. - <b>Two presses :</b> Display off (blank display). - <b>Three presses :</b> Return to the standard display.
G	LIST	<b>Radio source :</b> - <b>Short press :</b> Display of the list of radio stations available (30 maximum). - <b>Long press :</b> Update of list of stations. <b>CD source :</b> Display of list of tracks of the CD.	R	MODE	Selection of the type of information displayed.
H	ESC	<b>Short press :</b> Cancel the current operation or delete a superimposed display. <b>Long press :</b> Return to the permanent display.	S		CD changer.
I	TA/PTY	<b>Short press :</b> TA function (road information). <b>Long press :</b> PTY function (selection of programme type).			
J		<b>Radio source :</b> Manual search of higher frequencies. <b>CD/MP3 changer source :</b> Selection of the previous CD/CD-cover. <b>Other sources :</b> Scrolling in the Main Menu.			
K		<b>Radio source :</b> Automatic search of higher frequencies. <b>CD source, CD changer source and MP3 source :</b> Forward search for tracks. - <b>Long press :</b> Fast forward with accelerated sound. <b>Other sources :</b> In the menus, choice of your adjustments. <b>If your vehicle has the Bluetooth® system :</b> Selection of characters.			



# CONTROLS AT THE STEERING WHEEL

The controls at the steering wheel give you access to certain functions, without you needing to use the radio-CD control panel.

1	VOL +	Volume increase
2		<b>Radio source :</b> <b>Short press :</b> Automatic search of higher frequencies. <b>CD and CD changer source :</b> <b>Short press :</b> Forward search for tracks. <b>Long press :</b> Fast forward with accelerated sound.
3		<b>Radio source :</b> Scrolling of pre-set stations. <b>CD and MP3 source :</b> Search of the track. <b>CD changer source :</b> Selection of next or previous CD.
4	VOL -	Volume decrease.
5		<b>Mute</b> <b>First press :</b> Temporary sound pause. <b>Second press :</b> Restoration of sound.
6	MENU	Access to the main menu to activate/deactivate or choose the adjustments for your vehicle. In certain countries, this control is deactivated while the vehicle is moving.
7	OK	<b>In a menu, a list, an alphabet :</b> Validation of the function, the element or the value chosen. <b>If your vehicle has the Bluetooth® system :</b> Answer call, end call
8		Selection of the next or previous elements of a menu in a screen, a list, an alphabet.
9	ESC	<b>Short press :</b> Cancellation of the current operation. <b>Long press :</b> Return to the permanent display.

10	MODE	Selection of type of information displayed on the right of the screen and, for screen A, choice of activation/deactivation of functions and adjustments.
11		<b>If your vehicle has the Bluetooth® system :</b> <b>Press :</b> Display of the “Directory” menu.
12		<b>If your vehicle has the Bluetooth® system :</b> <b>Press :</b> Activation of voice recognition.

**Display A**



**Display C**



## Technical specifications

Your Bluetooth® compatible radio possesses :

- 3 wavebands (MW/LW/FM).
- Dual tuner with RDS EON PTY, display of the PS name, RDS programme search, TA traffic information, 24 pre-selections (18 FM - 6 MW/LW), automatic memorisation of the AST strongest stations.
- An MP3- compatible CD reader.
- Audio power of 4x35 W.

## On / Off

With the key in Drive position **M**, press on control **A** to switch the radio on or off.

### Note :

- If the radio was on the last time you switched off the ignition, it will resume automatically when you switch on the ignition again. You will not have to press on control **A**.
- After switching off the ignition, you can still operate the audio system even without the ignition key being present. Simply press on button **A**. The system will turn itself off **after approx. 30 minutes**.

## Anti-theft system

This radio is coded in such a way as to function only on your particular vehicle. It would be unusable if installed on any other vehicle.

### Note :

The anti-theft system is automatic and requires no action on your part.

## Selection of source

To select either Radio, CD (CD already inserted and Radio source activated), or CD changer source, press on control **D**.

When you insert a CD it automatically starts being read.

### Note :

When the radio is switched off, the source selected is memorised.

### Volume adjustment

Rotate control **A** to increase or decrease the sound volume.

You can also increase or decrease the volume using buttons **1** and **4** at the steering wheel.

### Note :

- The sound volume when you switch off the radio will be the same when you switch it on again.
- The radio sound volume automatically adjusts to the vehicle speed, provided the "**volume adjustment**" function is activated.

## Temporary sound pause

Press on control **5** at the steering wheel to activate this function.

The sound will be paused, regardless of the source selected.

To restore the audio output, press one of the controls at the steering wheel.

## Sound adjustments

Each press on button **F** brings up the parameter to be adjusted : choice of predefined sound ambiances, bass, treble, loudness, fade (front/rear sound distribution), balance (left/right sound distribution) and volume adjusted to vehicle speed.

Press buttons **K** or **N** to modify the values for the function displayed.

### Note :

- The selection of a sound ambiance automatically adjusts bass and treble. These can be modified.

To restore the original adjustments for the musical ambiances, reset bass and treble to zero.

- Adjustment of loudness, as well as bass and treble when they are available, are specific to each sound source and to each musical ambiance.
- If you leave the audio system unactioned for a few seconds, it will revert to the normal display.

### Notes on radio reception

Your radio will be subject to certain phenomena that are not encountered by domestic systems.

The reception of AM and FM signals may suffer from interference, which is caused by the nature and propagation of the signals and does not reflect on the quality of your radio installation.

In AM, the reception may be affected when passing under power lines or bridges, or when travelling through tunnels.

In FM mode, the reception may be affected by the distance from the station transmitter, the reflecting of signals off obstacles (mountains, hills, tower blocks) and radio blackspots (no coverage from the station transmitter).

### Selection of radio source

Press button **D** to select the source.

### Selection of frequencies and memory banks

Press button **E** successively to go through the memory banks FM1, FM2 and FM3, for the FM waveband, and the memory banks MW/LW, for the AM waveband.

### Manual search

Manual search is via buttons **J** or **M**.

By keeping button **J** or **M** pressed, you will be able to scroll through the waveband. Scrolling will stop as soon as you release the button. The radio will remain tuned to the frequency that is displayed.

### Tuning sensitivity

Automatic searches can be carried out according to two levels of sensitivity :

- To capture the most powerful transmitters, choose the local search mode "LO" (default option).
- To capture the weakest or most distant transmitters, choose the sensitive search mode "DX".

Search for a station is done first in "LO" (local) sensitivity, then in "DX" (distant) sensitivity.

To commence a search in sensitivity "DX" (distant) immediately, press twice in succession on one of the buttons **K** or **N**.

### Automatic search

A short press on one of the buttons **K** or **N** will tune into higher or lower radio stations respectively, within the chosen waveband.

By keeping button **K** or **N** pressed, you will be able to scroll through the waveband. The scrolling will stop at the first station it finds once the button is released.

You can also do this by means of control **2** at the steering wheel.

If the automatic search is unable to tune into a known frequency (perhaps owing to very weak reception), it is possible to search manually to find this station.

### Display and selection of a station available in the area in which you are travelling

Briefly press on button **G** to bring up a list of stations, this is updated every **10** minutes.

You can also update this list at any time by giving a long press on button **G**.

To listen to one of these stations, select by pressing buttons **J** or **M** and validate using button **L**.

## Manual pre-setting

Select the waveband and memory bank required using button **E**.

Select a station using either automatic or manual search.

Keep pressing for more than two seconds on one of the pre-selection buttons **1** to **6** on the keypad **P**.

The sound momentarily cuts off, then returns to its previous level to confirm that it has memorised the station.

## Automatic memorisation of transmitters (Autostore function)

In FM, if you hold down button **E** for more than two seconds, your radio will automatically memorise the 6 strongest stations on the FM3 memory bank.

The display shows "FM AST".

The radio memorises the 6 strongest transmitters, deleting the 6 previously memorised.

After the memorisation, the radio goes directly to memory 1 of memory bank FM3.

### Note :

- If the traffic information function has been activated (see RDS SYSTEM), the stations offering this facility will be memorised as priority.

If it is unable to memorise any new stations, the system will retain the previously memorised stations.

- If the system is unable to find 6 stations, the unfilled memory slots will remain free.

## Recall of pre-set stations

Press button **E** briefly to select the required waveband and memory bank.

A short press on one of the pre-selection buttons **1** to **6** on the keypad **P** recalls the corresponding memorised station. You can also do this using the control **3** at the steering wheel.

If it is a RDS station, the frequency appears some seconds before the name appears.

For RDS stations, recall of a station may prompt a search for a frequency corresponding to the region where you happen to be (see RDS system).

### Using the RDS (radio data system) function on FM

The majority of FM radio stations use the RDS system. The radio in your vehicle has this system,.

The RDS system enables these stations to transmit non-audible data in addition to the broadcasting of their programmes. The data provides access to various functions described in this chapter, such as: display of the station name, intermittent traffic information flashes or automatic scanning of stations. This enables you to continue listening to your chosen radio station, regardless of the different frequencies it uses in the regions through which you are travelling.

### Scanning of rds stations

Your radio keeps the best possible reception by continuously looks for any other frequencies on which the selected radio station is broadcast, automatically choosing the frequency offering the best reception (if the station broadcasts on more than one transmitter or frequency.

### Activation/deactivation of the rds functions

The RDS functions can be accessed via the following two menus :

- **Main menu** (press button **O**).
- **AUDIO menu** (press button **L**).

### To activate/deactivate the RDS functions on the display C :

1. Press button **O**.
2. Select the AUDIO icon using buttons **J** or **M**.
3. Confirm your choice with a press on button **L**.
4. Select the sub-menu for the FM waveband, via buttons **J** or **M**. Confirm your choice with a press on button **L**.
5. Select scanning for RDS stations, via buttons **J** or **M**.
6. Validate your choice with a press on button **L**.
7. Using control **L**, select/deselect to activate/deactivate the function.
8. Validate your choice by selecting "**OK**" on the display.

To activate/deactivate the RDS functions on the display A :

1. Press button **O**.
2. Select the AUDIO-CD icon via buttons **J** or **M**.
3. Select scanning for RDS stations, via buttons **J** or **M**. The system tells you the status (active or inactive) of the function.
4. Modify this status via buttons **K** or **N**.
5. Then please wait for the display to disappear.

### Note :

If the RDS function is active :

- The "**RDS**" on the display will light up provided the station being received uses the RDS system with scanning of frequencies.
- The "**RDS**" on the display is barred if the station received uses the RDS system without frequency search.

If your RDS function is deactivated, the "**RDS**" on the display will be absent in all cases.

The display will indicate the "NAME" for the stations that use the RDS system and the frequency for stations that do not use it.

## Regional search mode

Some stations, when they are organised in networks, broadcast regional programmes at certain times of day, and national programmes at other times.

It is possible to search :

- Either for a regional station only.
- Or across the whole network in order to find a different programme.

To activate/deactivate this function, proceed as for Scanning of RDS stations.

Note :

When this mode is activated, the system will remain tuned to one specific regional station.

## TA traffic information (traffic announcements)

Some stations allow broadcasting, only in FM, of these messages thanks to the "TA" function.

You can activate the "TA" function by pressing on button **I**. This allows you, even though you are listening to another audio source or to a radio programme not itself providing traffic messages, to receive traffic information flashes from an FM station which broadcasts them.

While the messages are being broadcast the original source is paused and when the messages have ended your radio will automatically revert to the music programme you were listening to.

## Note :

- You have to be in FM wave band.
- The station being listened to should indicate via the RDS system that it broadcasts traffic information.
- Stations organised in a network (EON) have regional transmitters that send their own programmes: while you are listening to one of these stations the system will switch automatically to a station on the network that is broadcasting traffic information.
- You can stop listening to a message by pressing button **I**.

## Sound volume adjustment for traffic information

The sound volume for traffic information operates separately from that for the rest of the system, and can be adjusted independently.

Rotate button **A** while a traffic information message is being broadcast.

This volume adjustment is memorised.

## Selecting a programme type

Certain stations offer the possibility of listening to a particular programme type, selected from a list (PTY).

press for more than two seconds on button **I**.

Press on buttons **J** or **M** to scroll through and select the programme type you prefer, then press on button **L** to validate your choice.

## Searching for a station broadcasting this programme type

When you have chosen a programme type, the list of corresponding stations appears on the display, press on buttons **J** or **M** to scroll down and select the station you want, then press on button **L** to validate your choice.

## Quitting pty mode

To quit "PTY" mode, select the function to deactivate "PTY" in the list of the different programme types.

## Radio text via contextual menu

This function allows to view the information broadcast by the station, concerning the programme you are currently listening to.

To activate/deactivate this function, proceed as for Scanning of RDS stations.

### Selecting CD source

After inserting a CD, with the printed side facing upwards, the player will start playing the CD automatically. To change manually to CD source (CD already inserted), press button **D** until you obtain the source you require.

### Ejecting a CD

Press button **B** to eject the CD, the audio system will automatically switch to radio source.

If the CD is not removed within 10 to 15 seconds of being ejected, it will automatically be taken back into the CD player, although it will not be played.

### Selecting a track

Press button **K** once to play the next track.

Press button **N** once to return to the beginning of the track currently being played, press a second time to go back to the start of the previous track.

Press the buttons successively to skip several tracks at a time.

This can also be done via the control **G**. As the list of tracks is displayed on the screen, select the desired track using buttons **J** or **M**, then validate using button **L**.

You can also do this by means of control **2** at the steering wheel.

### Fast forward and rapid reverse with accelerated sound

To move swiftly through the CD, press and keep pressed button **K** or **N**, respectively for fast forward or rapid reverse with accelerated sound.

Play resumes as normal when the button is released.

### Menu

This menu allows activation/deactivation of two options :

- Playback of the first 7 seconds (approx.) of each track of the CD.
- Random playback of the CD tracks.

This can be accessed in two ways :

- Either by pressing button **O** and proceeding as for Search of Stations RDS – for screen C, the sub-menu corresponds to the Audio Preferences.
- Or, provided you are in CD source, by pressing on button **L**. You can then access the Audio menu (for screen C only).

### Note :

If one of these options is active, it remains active for CD changer source.

### Safety precautions

For safety, do not use a CD player if the cabin temperature is higher than +60 °C or lower than -10° C.

If the temperature becomes too high, an automatic safety device will prevent the CD player from working until an acceptable temperature is restored.

### Handling compact discs

Do not drop them. Store the CDs so that they are kept of dust. Avoid touching the disc surface as any scratches may adversely affect the sound quality. Do not attach any stickers to the discs. Do not use damaged or deformed discs. Do not expose them to heat or direct sunlight.

If the surface of the compact disc is dirty, it can be wiped with a soft, clean cloth. Always wipe from the centre of the disc outwards.

## MP3 CD player

Your Audio CD system may be MP3 compatible.

As you insert a CD recorded in MP3 format, playback starts of the first song of the first CD-cover.

You can select a particular track by using buttons **N** or **K** and CD-covers using buttons **J** or **M**.

## To select a track

To display the list of CD-covers, press on button **G**.

Use buttons **J** or **M** to select the CD-cover you wish to listen to.

To open a CD-cover, press **L**.

Use buttons **N** or **K** to select the track you wish to listen to.

Validate by pressing button **L** or control **7** at the steering wheel.

## Menu

This menu is for activation/deactivation of three options :

- Playback of the first 7 seconds (approx.) of each track of the CD.
- Repetition of the current CD-cover.
- Random playback of CD-cover tracks by CD-cover.

This can be accessed in two ways :

- Either by pressing button **O** and proceeding as for Search of Stations RDS – for screen C, the sub-menu corresponds to the Audio Preferences.
- Or, provided you are in CD source, by pressing on button **L**. You can then access the Audio menu (for screen C only).



## CD Changer

This equipment **S** (if present) is located under the front central armrest and can accommodate 5 discs.

## INSERTING CDs INTO THE MAGAZINE

Insert the CDs printed surface to the left.

### Note :

- Each compartment takes one disc only.
- The CD changer will not operate if discs are inserted the wrong way up.

## Removing discs

To remove a CD, give a long press on the corresponding button.

### Note :

The CD changer (if there is one) is not MP3 compatible.

## Selecting CD changer source

Press on button **D** until you reach CD changer.

After the magazine engages, playback of the first track of the first CD will begin.

## Selecting a CD

To select a CD, either press one of the pre-selection buttons **1** to **5** on the keypad **P**, or scroll using buttons **J** or **M**.

The CD will start to play automatically.

You can also do this by means of control **3** at the steering wheel.

After each change of source, on return to CD changer source, playback will resume at the same point where it had been interrupted.

## Selecting a track

Press button **K** once to play the next track.

Press button **N** once to return to the beginning of the track currently being played, press a second time to go back to the start of the previous track.

Press the buttons successively to skip several tracks at a time.

You can also do this by means of the controls **2** and **3** at the steering wheel.

## Fast forward and rapid reverse with accelerated sound

Press and keep pressed one of the buttons **K** or **N** respectively for fast forward or rapid reverse with accelerated sound. Play resumes as normal when the button is released.

## Menu

This menu is for activation/deactivation of three options :

- Playback of the first 7 seconds (approx.) of each track of the CD.
- Repetition of the current CD.
- Random playback of tracks, CD by CD.

This can be accessed in two ways :

- Either by pressing button **O** and proceeding as for Search of Stations RDS – for screen C, the sub-menu corresponds to the Audio Preferences.
- Or if you are in CD changer source by pressing button **L**. You then have access to the AUDIO menu (for screen C only).

### Note :

If one of these options is active, it remains active for CD source.

Your audio system may be Bluetooth® compatible. It allows you to connect a mobile telephone for use “hands free” and even to use its directory.

It permits you to twin up to four telephones, to be able then to connect whichever one you choose.

The Bluetooth® functions available and the content of the display are dependent on the type of mobile telephone, its settings and the type of contract you have. For this reason it is advisable to make enquiries with your telephone provider.

#### **Prior to any operation :**

- Your display should be lit up (key in position **M**).
- Your telephone's Bluetooth® system must be activated.

#### **Twinning a telephone**

Twinning a telephone consists of having it recognised by the Bluetooth® system on your vehicle. This then permits an instantaneous connection.

Twinning can only be performed with ignition switched on, display illuminated, engine stopped. No other telephone should be connected.

- The twinning must be performed with the telephone and its Bluetooth® system activated.

#### **Note :**

Refer to the user instructions to familiarise yourself with the features of twinning.

- The telephone detects the Bluetooth® system on your vehicle. “**C4**” displays on your telephone.

You should then select “**C4**” on your telephone controls. Next you must choose whether or not to accept this twinning then select, on screen **C** using **J**, **M** or **8**, one of the **4** memories. Validate with a press on button **L** or **7**.

#### **Note :**

You can select a memory already attributed, although the telephone twinned to this location will no longer be.

- Next the telephone asks you to enter an identification code : **1234**.

- Validate.

#### **Note :**

This entry may be demanded earlier in the twinning sequence.

The telephone is now twinned to your Bluetooth® system. For immediate access to the Bluetooth® functions, it may be necessary to make a connection (see following page Configuration : Connecting a twinned mobile telephone).

Once the twinning is finished, you will be able to connect your telephone via the “Main menu”.

#### **Connecting a twinned telephone**

Each time you enter the vehicle, after switching on the audio system, your telephone is detected automatically. If more than one telephone is present, the last telephone to have been connected is the first to be recognised.

#### **Note :**

Disconnections may occur. You may have to make a new connection (see following page, **Configuration : Connecting a twinned mobile telephone**).

Remarks :

- In the event of a problem, it is recommended to switch your telephone off and then on again.
- If you switch off your telephone within the field of reception of the Bluetooth® system on your vehicle, the next connection will not be automatic. To restore automatic connection, you will have to connect your telephone manually (see following page, **Configuration : Connecting a twinned mobile telephone**).
- If you are already in telephone communication when the audio system is turned on, the latter detects the telephone.
- To avoid interference, you are advised not to place your mobile telephone close to your radio.

#### **To accept an incoming call**

Using button **L** or control **7** at the steering wheel.

### Main Menu

Press on the Menu control **O** to access the Main Menu, then select the “**Telephone**” icon via buttons **J**, **M** or **8** and then validate the selection via button **L** or **7**.

You have access :

- To the Directory.
- To Configuration.
- To Communication Management.

You access your choices using **J**, **M** or **8** then you validate them with a press on **L** or **7**.

This main menu can also be accessed by pressing button **E** then button **L**.

### Directory

This menu lets you open :

- The telephone Directory of the telephone that is connected.
- The Calls List.

This menu can also be accessed with a press on control **11**.

### Telephone directory

The starting of a telephone call can be done independently of the telephone or of the audio system, thanks to the directory.

The directory is displayed. Select the number via **J**, **M** or **8**, then validate with a press on **L** or **7**.

### Remarks :

- The directory displayed updates itself automatically.
- If the person to be called does not figure in the directory, the call can only be made starting from the telephone.
- If you have information recorded in the Vcard format, you must select the person you wish to call, then validate. A list of 4 numbers maximum can be displayed with the following labels : “Home”, “Office”, “Mobile” and “Car”.

### Calls list

After selecting this component and then validating, the calls list is displayed with a maximum of : **10** calls made (arrow pointing upward), **10** calls received (arrow pointing downward) and **10** calls not connected.

It is possible to make a call starting from this list : Select the number via **J**, **M** or **8**, then validate with a press on **L** or **7**.

### Configuration

This menu allows you to :

- **Deleting a twinning.**

Using **J**, **M** or **8**, select this choice then validate via **L** or **7**. Select in the list the telephone that you no longer wish to have twinned. Validate.

- **Consulting the list of twin-nings.**

The list of telephones twinned is displayed.

- **Connecting a mobile telephone that is twinned.**

Select the telephone that you wish to connect. This access allows you to make a connection manually.

### Call management

This menu is accessible during your calls, permitting you to :

- Swap a call if there is another call incoming.
- End a call.
- Be in Secret mode.

Remark :

If you are in telephone conversation, you have access to this “Configuration” menu by means of a press on **L** or **7**.

## Swapping a call

During a telephone conversation, the system is able to tell you of a second call incoming. To accept it, validate. To change from one call to the other, select this choice.

## End a call

This choice enables you to end a telephone conversation, for example if there is another call incoming.

## Secret mode

Select this choice. This allows you not to be heard by the other person. To restore sound to the other person, select deactivation of Secret mode in the menu "Call Management".

## Note :

If you wish to transfer a call from the audio system to the mobile telephone (for example when leaving your vehicle), refer to the user instructions for the latter.

## Voice recognition

A short press on button **12** starts voice recognition for the telephone. Voice recognition allows you to make a call to a number for which you have recorded a label on the mobile telephone that is twinned and connected.

## Remark :

It is possible to stop the call as long as the dialling has not commenced, by means of a short press on button **12**.

## Remarks :

- While you are on a call, the audio source currently being listened to is paused.
- Some ring tones on your mobile telephone may not be recognised by the Bluetooth® system on your vehicle. A different ring tone will be chosen by the system.

## Displays

A press on the "TEL" button displays the telephone information on the right on your screen.

A "Telephone" symbol appears on your display when you connect a mobile telephone.

A "Battery" symbol appears at the bottom of the display to indicate the range of the mobile telephone connected.

An "Envelope" symbol appears at the bottom of the display to indicate the presence of an unread SMS on the mobile telephone connected.

A "Sound track" symbol appears at the bottom of the display to indicate the presence of a message on the mobile telephone connected.

Your vehicle may be equipped with a JBL Hi-Fi system, specially designed to fit in with your cabin interior.

## **Adjustment in CD or radio mode**

The basic functions remain the same as those for the radio.

No extra adjustment is necessary.

However, to profit fully from your JBL audio system, you are recommended to adjust the audio functions: bass (Bass), treble (Treb), front/rear balance (Fad), left/right balance (Bal) to position **O**, Loudness (Loud) to position **ON** for listening to a CD and position **OFF** for listening to the radio.

# FREQUENTLY-ASKED QUESTIONS


The table below provides answers to the questions that are asked the most frequently.

QUESTION	ANSWER	SOLUTION
There is a discrepancy in sound quality between the different audio sources (radio, CD, CD changer etc.).	To achieve an optimum listening quality, the audio adjustments (Volume, Bass, Treble, Ambiance, Loudness) can be adapted to each of the different sound sources, which can produce audible shifts when you change the source (radio, CD, CD changer etc.).	Check that the audio adjustments (Volume, Bass, Treble, Ambiance, Loudness) are adapted to the sources being listened to. It is recommended that you should adjust the AUDIO functions (Bass, Treble, Front-Rear balance, Left-Right balance) to the mid position, select the musical ambiance «None», adjust the loudness correction to the position «Active» in CD mode and to the position «Inactive» in radio mode.
The CD immediately ejects or does not play back.	The CD is the wrong way up, is unplayable, does not contain audio data or contains an audio format that the radio cannot play back. The CD is protected by an anti-pirating protection system unrecognised by the radio.	<ul style="list-style-type: none"> <li>- Check that you have inserted the CD the right way up in the CD player.</li> <li>- Check the condition of the CD : the CD cannot be played back if it is too damaged.</li> <li>- Check the contents if it is a burnt CD : refer to the advice given in the chapter on Audio System.</li> <li>- The radio's CD player cannot play back DVDs.</li> <li>- For reasons of poor quality, some burnt CDs will not be played back by the audio system.</li> <li>- The CD changer does not play back MP3 CDs.</li> </ul>
The CD player sound is downgraded.	The CD being used is scratched or of poor quality. The radio adjustments (bass, treble, ambiances) are unsuitable.	<p>Insert only CDs of good quality and keep them in good condition.</p> <p>Return the treble and bass levels to 0, without selecting any ambiance.</p>

# FREQUENTLY-ASKED QUESTIONS

QUESTION	ANSWER	SOLUTION
The pre-set stations do not work (no sound, 87.5 Mhz is displayed, etc.).	The waveband selected is not the correct one.	Press on the button BAND AST to retrieve the wave band (AM, FM1, FM2, FMAST) where the stations have been memorised.
Traffic Announcements (TA) is displayed, but I do not receive any road information.	The particular radio station is not in the regional traffic information network.	Change to a radio station which does broadcast traffic information.
The reception quality of the radio station being listened to gradually deteriorates or the pre-set stations do not work (no sound, 87.5 Mhz displayed, etc.).	The vehicle is too distant from the transmitter of the station being listened to, or no transmitter is present in the geographical area you are passing through.	Activate the RDS function to allow the system to check whether a more powerful transmitter is to be found in the geographical area.
	The environment (hills, high buildings, tunnels, underground car parks, etc.) is blocking reception, even in RDS mode.	This phenomenon is normal and does not imply anything wrong with the radio.
	The aerial is absent or has been damaged (for example after going through a car wash or in an underground car park).	Have the aerial checked by a CITROËN dealer.
Cutting of sound for 1 or 2 seconds in radio mode.	The RDS system during this brief sound cut-off is searching for a better frequency that might offer improved reception of the station.	Deactivate the RDS function if the phenomenon occurs too frequently and always on the same journey.
When the engine is not running, the radio stops after a few minutes.	When the engine is switched off, the working time for the radio depends on the vehicle battery charge.	You have to start the engine so as to increase the battery charge.
	The interruption is normal : the radio goes into economy mode, cutting off in order to save the vehicle's battery.	
The message «the audio system is overheating» appears on the screen.	In order to protect the audio equipment in excessive ambient temperatures, the radio goes into an automatic thermic protection mode which results in a reduction in sound volume or stopping of the CD player.	Switch off the audio system for a few minutes in order to allow the system to cool down.

# BONNET RELEASE

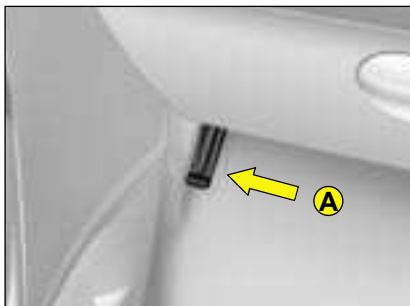


**This should only be operated if the vehicle is stationary.**

To release the bonnet, pull control **A** located under the dashboard to the right.



Move the lever **A**, located above the grille, to the right of the chevrons, then lift.

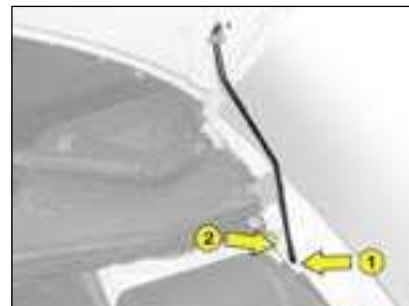

**Bonnet stay:** detach the stay and pivot to introduce it into the notch 1, then into the notch 2 (see the arrow reference).

## Closing

Return the stay to its initial position, lower the bonnet and let it slam shut.


V

**Make sure that the bonnet is securely locked  
Avoid operating the bonnet when there are high winds.**






# ENGINE 1.6i 16V

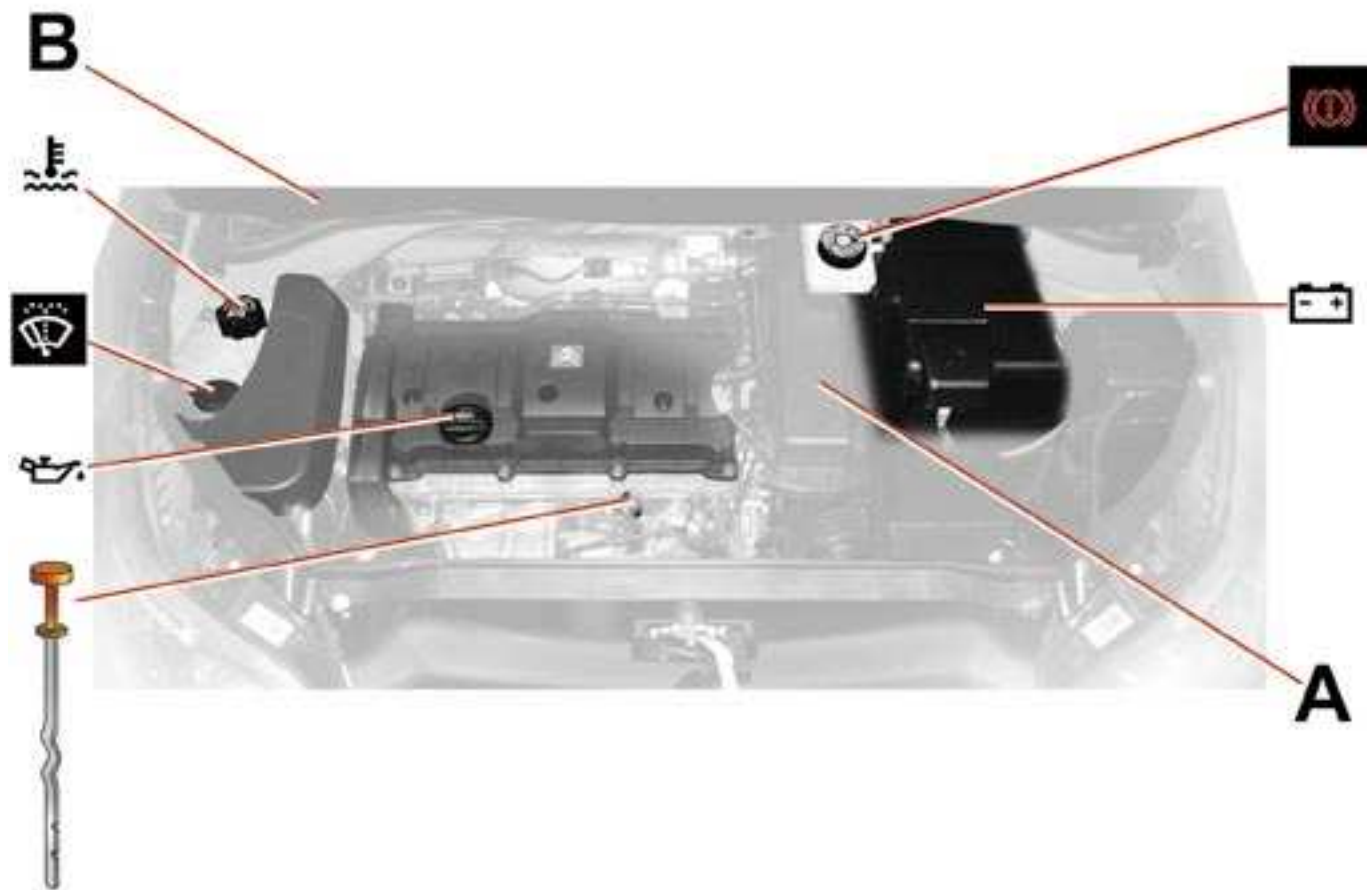


v


# ENGINE 2.0i 16V (143 hp)

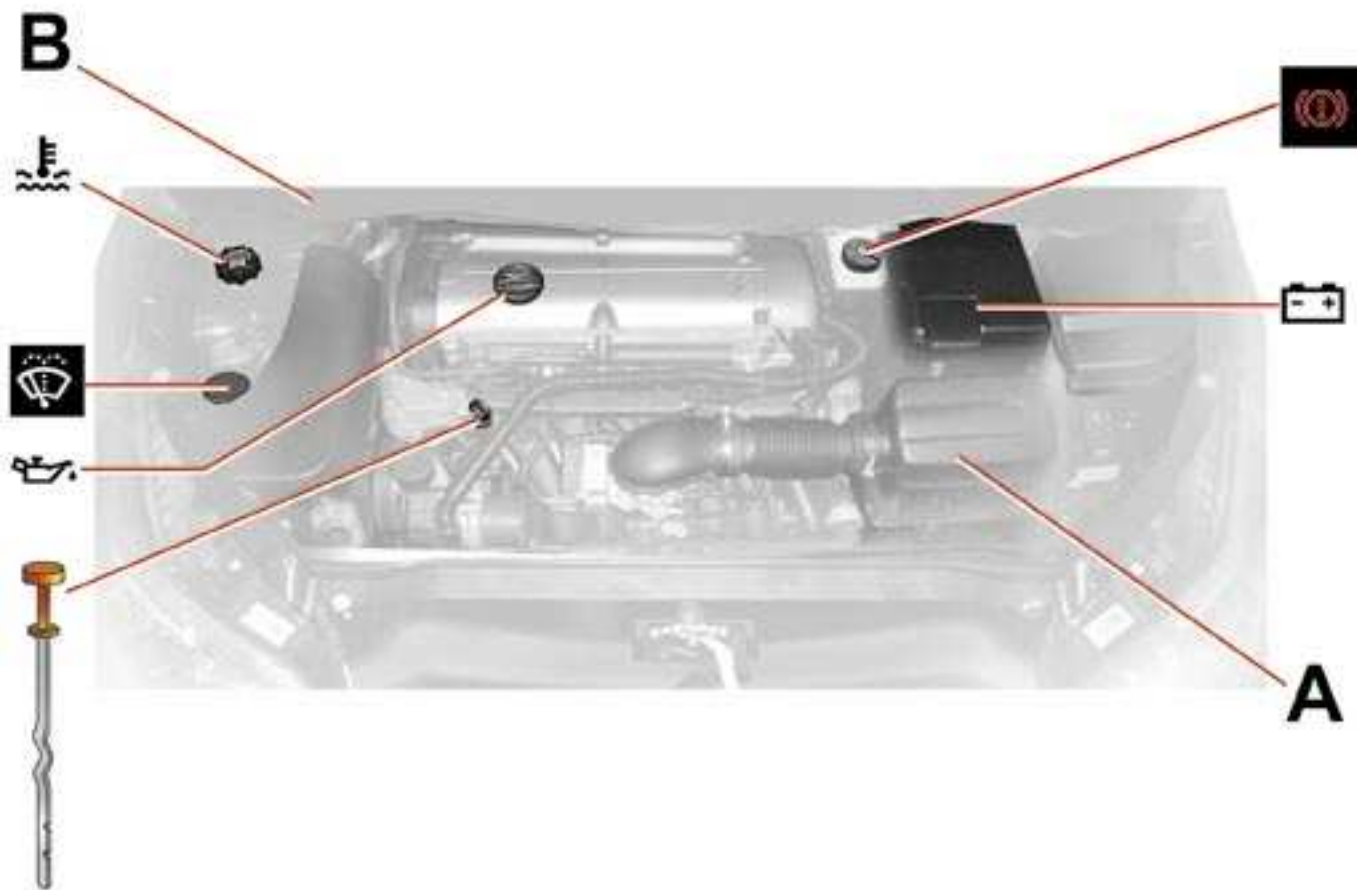

# ENGINE 2.0i 16V (180 hp)

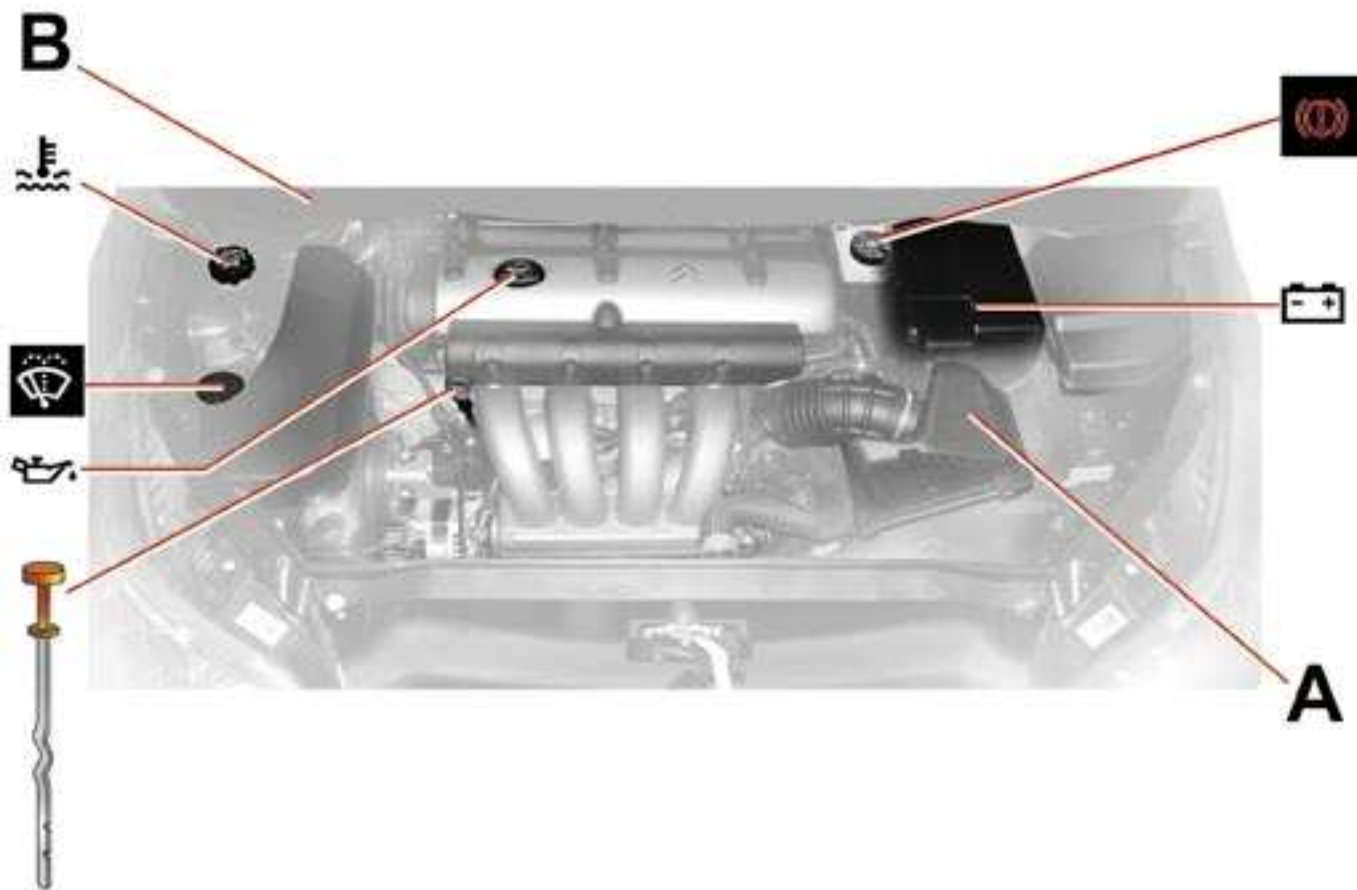

# ENGINE HDi 92 - HDi 110 ENGINE HDi 110 FAP

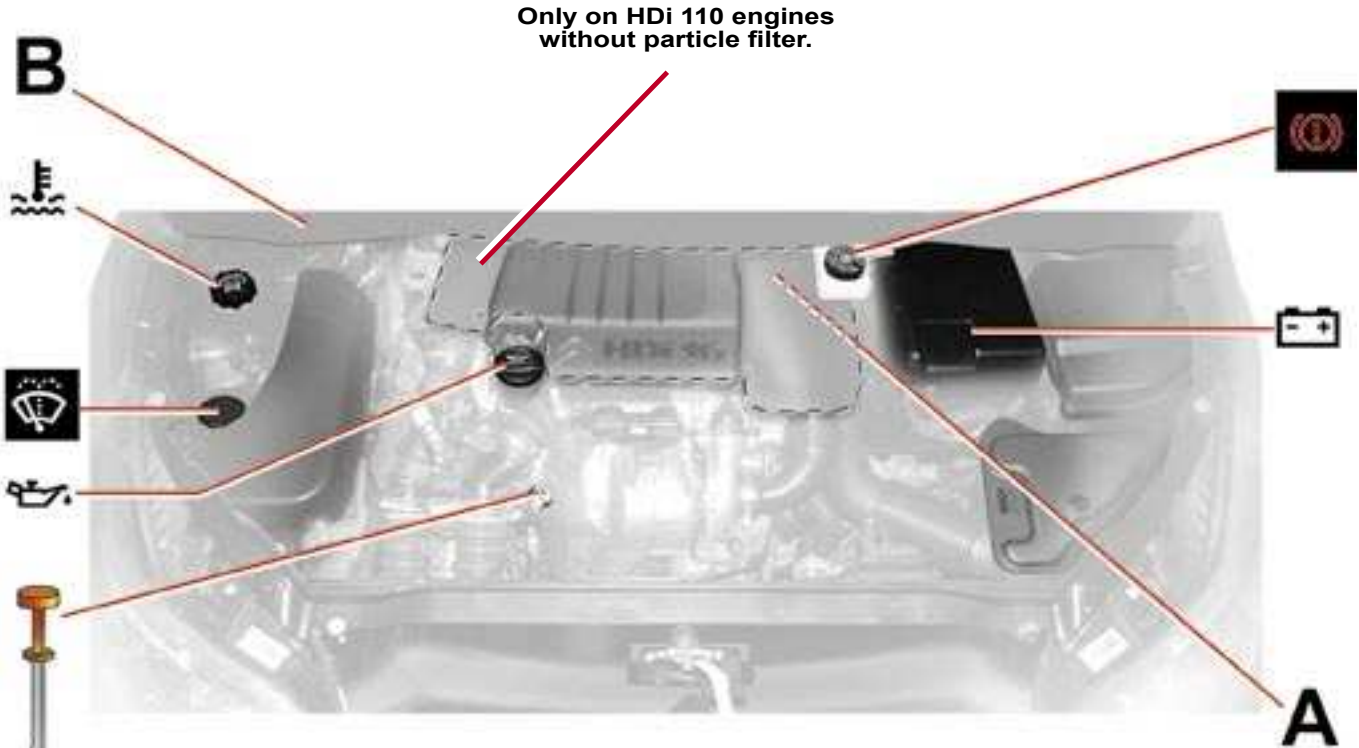


Only on HDi 110 engines  
without particle filter.

V

Due to the fact that the diesel system is a high pressure system:

**IT IS FORBIDDEN TO CARRY OUT ANY REPAIRS TO THE SYSTEM.**

**HDi engines are of a highly technical nature. All maintenance and repairs require specific qualifications which only your CITROËN Dealer can guarantee.**

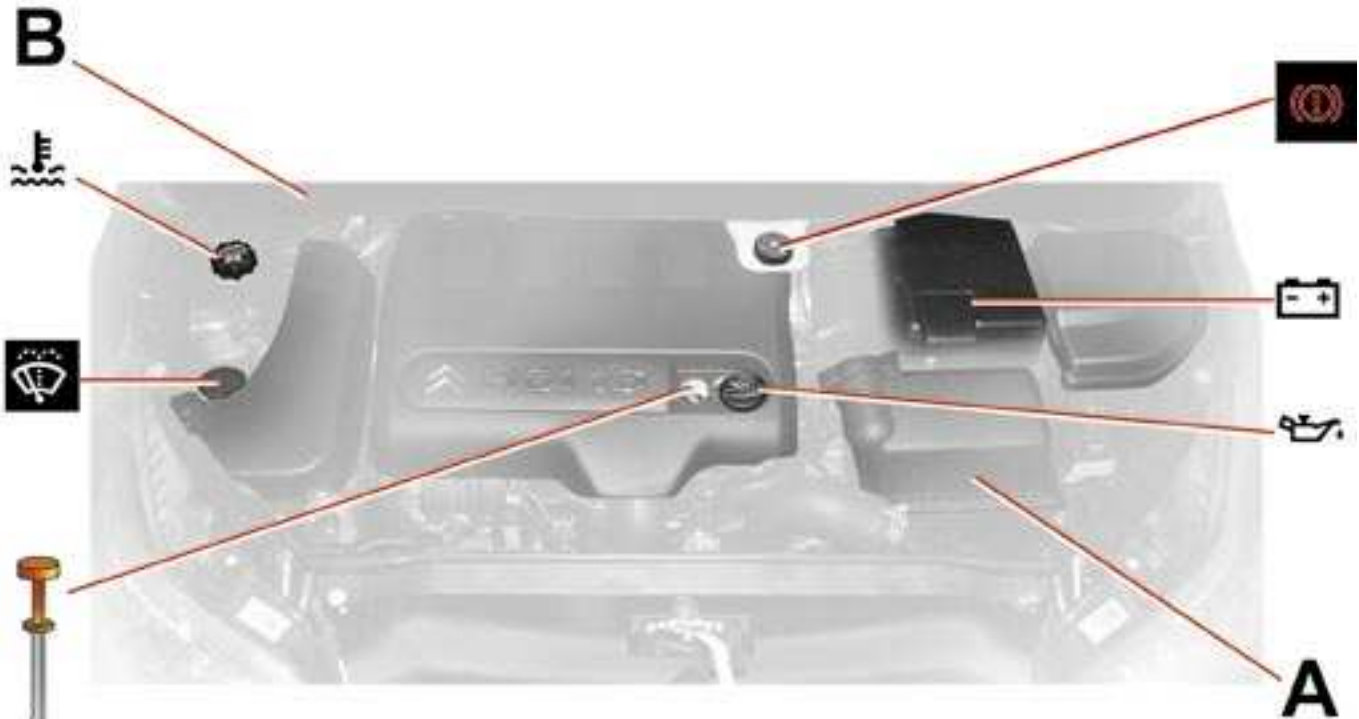

Due to the fact that the diesel system is a high pressure system:

**IT IS FORBIDDEN TO CARRY OUT ANY REPAIRS TO THE SYSTEM.**

**HDi engines are of a highly technical nature. All maintenance and repairs require specific qualifications which only your CITROËN Dealer can guarantee.**

V

# LEVELS

Refer to the chapter User Precaution

## A Air filter

Follow the recommendations in the Maintenance Guide.



## Windscreen, rear screen and headlamp washer fluid

It is recommended that you use products approved by CITROËN.

**Capacity:** See “Capacities”

V



## Engine coolant

The coolant level should be between the **MAX** and **MIN** marks on the header tank.

If the engine is hot, wait 15 minutes.

**Quality:** See “Maintenance Guide”

**Never work on the cooling system if the engine is hot.** (See “Levels”).



## 12 volt battery

See “Emergency starting with a slave battery”.

## Engine oil



Check the oil level with the vehicle parked on level ground, after the engine has been switched off for at least fifteen minutes.

**Quality:** See “Maintenance Guide”



Take out the oil dipstick.

The level must be between the **MAX** and **MIN** marks on the dipstick

**It should never exceed the maximum mark.**

MAX  
MIN



## Brake fluid

The fluid level must be situated within the **MAX** and **MIN** marks visible on the reservoir.

**Quality:** See “Maintenance Guide”

If the warning lamp comes on while you are driving, stop immediately and contact the CITROËN network.

## B Dust filter / odour filter (active carbon)

See “Maintenance Guide”



**When working under the bonnet, when the engine is hot (even stopped and the ignition switched off), the cooling fan could operate at any time.**

Check the engine oil level frequently between routine service visits, as well as prior to long journeys.

# LEVELS



## Radiator - coolant

The coolant must only be checked or topped up if the power unit is cold.

## Engine hot

Release the protection cover.

Wait 15 minutes or until the temperature is below 100 degrees C.

Using a cloth to protect your hands, slowly slacken the filler cap as far as the safety catch. Allow the pressure to reduce before removing filler cap.



## Topping up the cooling system

The coolant level should be between the **MAX** and **MIN** marks on the header tank.

Top up the level. If you have to add more than 1 litre, you should have the cooling system checked by CITROËN.

**Make sure that the cap is on correctly**

**Note:** The necessity to top up frequently would indicate a malfunction that should be checked at the earliest opportunity.

**Note:** on vehicles equipped with a particle filter, the cooling fan may operate for some ten minutes after the engine has stopped.



## Adding engine oil

Remove the dipstick before topping up.

Check the level after filling.

**It should never exceed the maximum mark.**

Screw on the cap before closing the bonnet.


**Quality:** See "Maintenance Guide".



**When working under the bonnet, when the engine is hot (even stopped and the ignition switched off), the cooling fan could operate at any time.**



# LEVELS

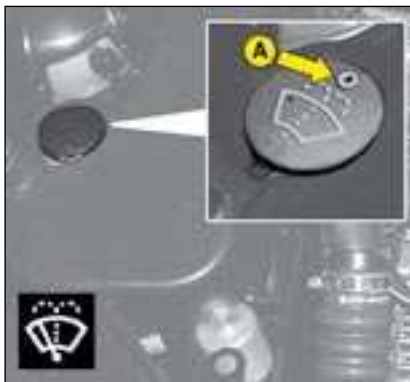

## Windscreen and rear screen washer fluid

V

For best results as well as for your safety, use only CITROËN approved products which protect at temperatures as low as -25°C to -30°C.

It is essential to have sufficient screen wash fluid if your vehicle is equipped with Xenon headlamps.

To check the level, place a finger on aperture **A** before removing the cap.


**Capacity:** See “Capacities”.

## Brake fluid reservoir

Check and top up at regular intervals.

The fluid level must be situated within the **MAX** and **MIN** marks visible on the reservoir.

If the warning lamp lights, stop immediately and contact the nearest CITROËN dealer.

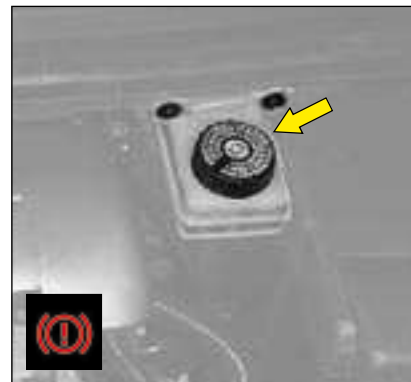

## Brake fluid

The synthetic fluid not only gives protection against corrosion but also ensures correct functioning of the braking system in all environmental conditions, therefore you should only use the synthetic product recommended by the CITROËN network. (this fluid must be replaced every two years).

These important requirements are detailed in your vehicle’s Maintenance Guide.

**Quality:** See “Maintenance Guide”.



**When working under the bonnet, when the engine is hot (even stopped and the ignition switched off), the cooling fan could operate at any time.**



# DIESEL INJECTION EQUIPMENT

## Bleeding of water from the diesel fuel filter

To be bled on a regular basis (at every oil change).

To evacuate the water, slacken the bleed screw or the water in diesel fuel sensor, which is located at the base of the filter, until water ceases to flow out.

Then retighten the bleed screw or the water in diesel fuel sensor.

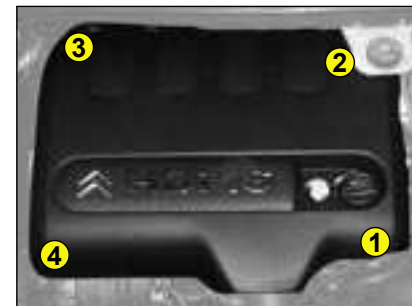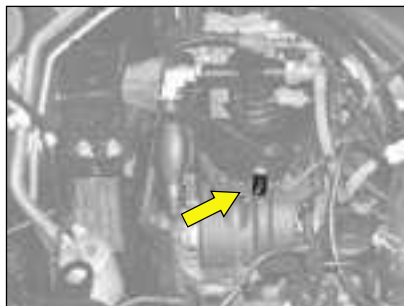

## Protection cover

Engine HDi 138


Remove the protection cover by first unclipping point **1**, then **3** and **4**. Detach point **2** by pulling towards you, then lift.

To reposition the protection cover, attach point **2** first. Lower the cover, keeping it centred. Clip points **1** and **4**, pushing vertically and slightly rearwards. Clip point **3** pushing down vertically.

V

**HDi engines are of a highly technical nature.  
All maintenance and repairs require specific qualifications which  
only your CITROËN Dealer can guarantee.**

# DIESEL INJECTION EQUIPMENT

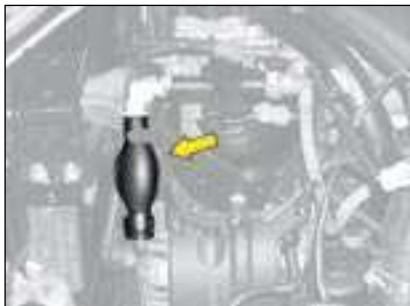

## Engine HDi 138

Detach the protection cover to access the priming pump.



## Engine HDi 92 and 110

Detach the protection cover to access the priming pump.

## Priming the fuel system

In the event of running out of fuel:

- After filling (5 litres minimum), operate the manual priming pump until some resistance is felt.
- Operate the starter motor while depressing the accelerator pedal slightly until the engine starts.

If the engine fails to start at the first attempt, wait 15 seconds before trying again.

If the engine fails to start after several attempts, repeat the procedure from the beginning.

When the engine is idling, accelerate slightly to complete the bleeding of the circuit.

V

**HDi engines are of a highly technical nature.  
All maintenance and repairs require specific qualifications which  
only your CITROËN Dealer can guarantee.**

# CAPACITIES

<b>Screenwash fluid</b>	3.5 litres
<b>Screen wash and headlamp wash fluid</b>	7.5 litres

<b>Engine type</b>	<b>Engine oil capacity in litres <sup>(1)</sup></b>
<b>1.4i 16V - 65kW</b>	3.15
<b>1.6i 16V - 80kW</b>	3.35
<b>2.0i 16V 103kW (143hp)</b>	4.35
<b>2.0i 16V 130kW (180hp)</b>	5.55
<b>HDi 66kW (92hp)</b>	3.85
<b>HDi 80kW (110hp)</b>	3.85
<b>HDi 100kW (138hp)</b>	5.3

(1) After an oil change with filter change

V

# BATTERY

## Access to the battery

The battery is located on the left hand side in the engine compartment (see “ Engines “).

## Emergency starting with a slave battery

A vehicle with a discharged battery can be started with either a slave battery or the battery of another vehicle.

**A** Discharged battery

**B** Slave battery


**C** Earth point on broken down vehicle.

It is essential to proceed strictly following the sequence indicated.

Check that the emergency battery is correctly charged up (12 volts). If you are using the battery on another vehicle, stop the engine of the assisting vehicle. The two vehicles must not come into direct contact with each other.

Connect the cables in the **order** indicated in the diagram. Make sure that the clamps are properly secured (risk of sparks).

Start the engine of the assisting vehicle. Let the engine run for about a minute at a slightly accelerated speed.

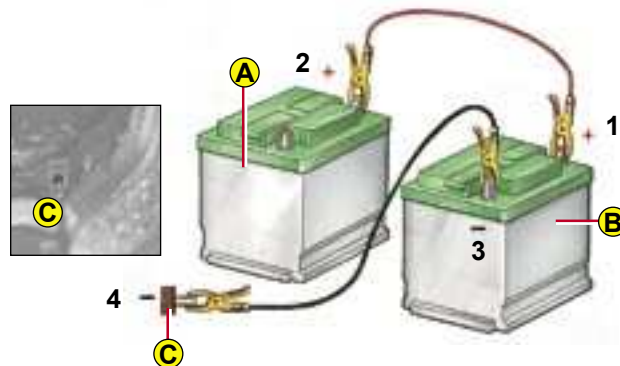

Start the engine of the assisted vehicle.

**Note:** For any repair necessitating a disconnection of the battery, it is essential to wait three minutes after switching off the ignition and to avoid any action that could prevent the vehicle's electrical circuit from changing to standby mode (such as opening and closing doors, using the remote control etc.).



## Advice

Replace it with a battery of the same type (voltage, amp rating).

Do not touch the cable clamps during the procedure.

Do not lean over the batteries.


Disconnect the cables in the reverse order to connection, ensuring that they do not touch each other.



**Never apply a flame or create sparks close to the battery (explosive gas). The battery contains diluted sulphuric acid which is highly corrosive.**

**If ever you are handling the battery, protect your eyes and face. In the event of any contact with the skin, rinse immediately with copious amounts of fresh water.**

# BATTERY

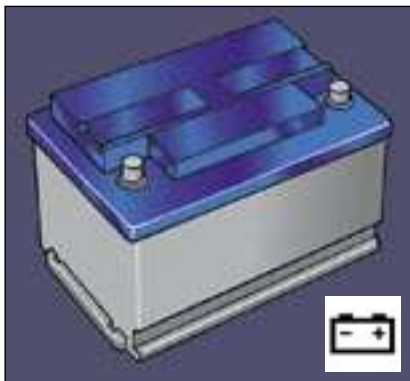

## **Starting the engine for the first time after disconnecting and connecting the battery:**

- Turn the ignition key.
- Wait approx. one minute before actioning the starter, so as to allow the electronic systems to reinitialise.

After the battery has been disconnected for a long period, it may be necessary to re-initialise the following functions:

- Anti-pinch and sequential operation on the electric windows.
- Parameters of the multifunction display (date, time, language, units of distance and temperature).
- Radio stations.
- Navigation reception.
- Synchronisation of remote control.
- Central locking.

Certain adjustments will be cancelled: it is necessary to make them again.

**WARNING:** If disconnecting the battery, check that the colour navigation reader located in the glovebox has finished its recording of information on switching off ignition: the warning lamp should have gone out.

V

# FUSES

## Fuse box

There are two fuse boxes, one below the dashboard and one under the bonnet.

## Fuses under the dashboard

To access the fuses below the dashboard, pull back the access cover, undo the screws a quarter turn and tilt the whole unit.



## Replacing a fuse

Before replacing a fuse, it is essential to find the cause of the incident and to rectify it. The fuse identification numbers are indicated inside the fuse box.

V


## Replace a blown fuse with one of the same rating (the same colour)

Use the special pliers **A** stowed on the cover close to the fuse-boxes, this includes a compartment for replacement fuses.


Good



Faulty

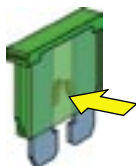

Tool A

 

# FUSES



## Fuses under the dashboard

Number	Rating	Functions
F1	15 A	Central locking
F2	30 A	Central locking - Deadlocking
F3	5 A	Airbags and pretensioners
F4	10 A	Diagnostic socket - Brake switch - Photochromic rear view mirror - ESP - Coolant level sensor - Diesel fuel additive system - Power steering Clutch pedal switch (ESP, cruise control and speed limiter)
F5	30 A	Electric front windows - Heated exterior rear view mirrors
F6	30 A	Electric rear windows
F7	5 A	Interior lighting
F8	20 A	Audio system - NaviDrive - Display - Alarm - Front 12V socket - Trailer relay unit - Driving school module
F9	30 A	Cigar lighter - Rear 12V socket
F10	15 A	Tyre pressure sensor - Auto. - STOPLAMP switch
F11	15 A	Ignition - Diagnostic socket - Particle filter
F12	15 A	Electric seat - Lane wandering alert - Parking assistance
F13	5 A	Rain sensor - Sunlight sensor - (6 speed) Electronic Gearbox System – Engine relay unit
F14	15 A	Air conditioning - Instrument panel - Tachometer - Airbags and pretensioners - Trailer relay unit - Bluetooth telephone
F15	30 A	Central locking - Deadlocking
F16	SHUNT	
F17	40 A	Heated rear screen

V



# FUSES

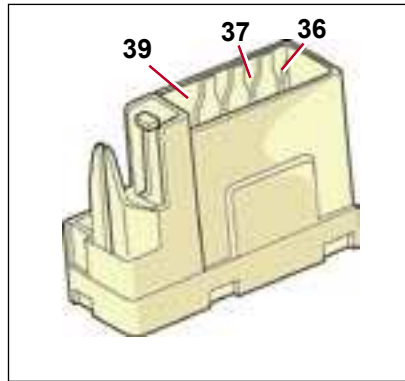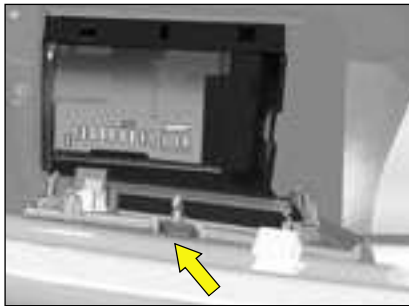

Fuse box

V

Number	Rating	Functions
F36	20 A	Hi Fi amplifier
F37	30 A	Front left hand electric seat
F39	20 A	Heated seats

# FUSES




**Fuses under the bonnet**

## **Fuse box**

To access the engine compartment fusebox, detach and remove the cover.

After any repair, reclose the cover very carefully. If the cover is not correctly positioned or not properly closed, your vehicle could be subject to serious malfunctions. For the same reason, take the utmost care not to spill any liquids.

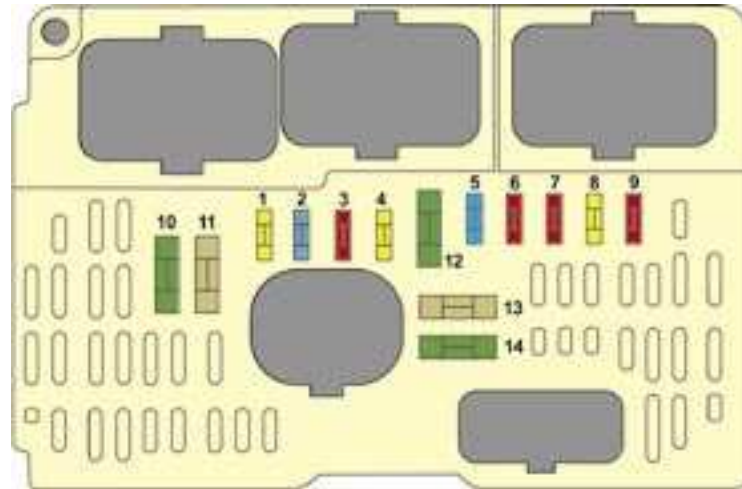

**Only authorised personnel from the CITROËN network are allowed to carry out any work on the additional protection MAXI fuses located in the fuse boxes.**

V

# FUSES

## Fuses under the bonnet

Number	Rating	Functions
F1	20 A	ECU engine management - Cooling fan
F2	15 A	Warning
F3	10 A	Windscreen and rear screen wash
F4	20 A	Headlamp washer
F5	15 A	Fuel pump
F6	10 A	Auto. - Xenon lamps - Directional headlamps - Canister purge electrovalve (2.0 16V engine)
F7	10 A	ABS ECU/ESP ECU - Power steering
F8	20 A	Starter
F9	10 A	Additional heating control unit (Diesel) - Engine coolant level switch
F10	30 A	Engine electrovalve - Water-in-diesel-fuel sensor - ECU engine management - Injectors - Ignition coil - Oxygen sensor - Canister purge electrovalve (1.4 16V and 1.6 16V engines)
F11	40 A	Air blower - Air conditioning
F12	30 A	Windscreen wiper
F13	40 A	Built-in Systems Interface
F14	30 A	Air pump (engine 2.0i 16V)

V



To open the fuel flap, pull at its notched edge. A label showing the correct fuel quality will be found on the inside of the flap (See "Fuel quality").

### Locking filler cap

Turn the key a quarter turn to lock and unlock the filler cap.

When refuelling, place the cap in the support provided on the inside of the filler flap.

 
**For petrol engines with catalytic converter, use of unleaded fuel is obligatory**

The filler neck has a narrower aperture to permit unleaded petrol only.

**When you are filling your fuel tank, do not persist after the third cut-off; this could cause your vehicle to malfunction.**

### Fuel quality

A label on the inside of the fuel filler flap indicates the approved fuel quality type.



**UNLEADED PETROL**




**DIESEL FUEL**

Petrol engines are designed to run on RON 95 fuel; however, for better vehicle performance (petrol engines), we recommend RON 98.



**If you have put in fuel that is wrong for your vehicle, it is essential to have the tank drained before you start the engine.**

# REPLACING BULBS

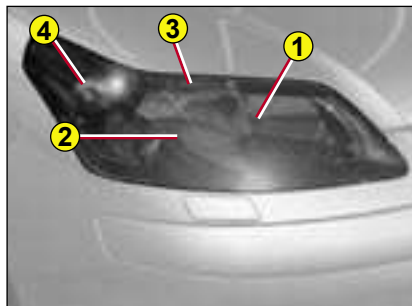


## Headlamp

- ① Headlamp dipped beam
- ② Main beam
- ③ Sidelamp
- ④ Direction indicator

**Note:** A light mist of condensation may appear on the surface of the headlamp glass under certain conditions of use.


**Note:** If it should be necessary to access the front RH headlamp, remove the cover by pressing the 2 clips.

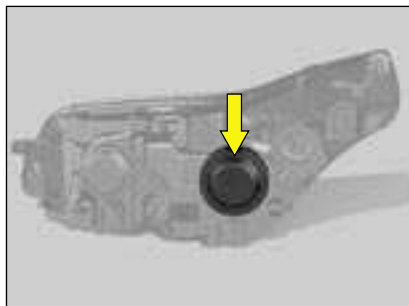

## Main beam

Pull the rubber stops.  
Disconnect the bulb.  
Disengage the ends of the retaining spring to release it.  
Remove the bulb.

**Bulb:** H1 For vehicles not equipped with Xenon headlamp bulbs.

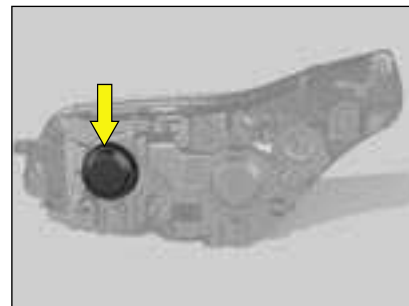

## Headlamp dipped beam

Pull the rubber stops.  
Disconnect the bulb.  
Disengage the ends of the retaining spring to release it.  
Remove the bulb.

**Bulb:** H7

**Note:** On HDi 92hp and 110hp engines, you have to detach the cover to access the front LH headlamp.




The halogen bulbs should not be changed until they have been off for a few minutes (risk of serious burns).

Do not touch the new bulb directly with your fingers; use a lint-free cloth.

**It is essential that only anti U.V. type bulbs are used in order not to damage the headlamp.**

# REPLACING BULBS

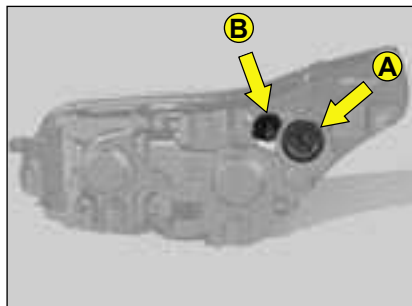

## Front direction indicator

Rotate the bulb-holder **A** by a quarter turn and pull.

Press to disengage the bulb.


**Bulb:** PY 21 W yellow.

## Sidelamp

Disconnect the connector by pressing on the metallic part.


Rotate the bulb-holder **B** by a quarter turn and pull on the bulb.


**Bulb:** W 5.

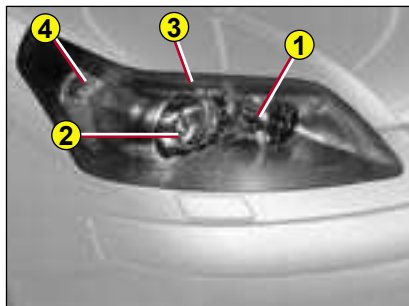

## FRONT HEADLAMP UNIT FOR DRIVING LAMPS

- ① Additional headlamp (main beam)
- ② Headlamp dipped beam / Main beam
- ③ Sidelamp
- ④ Direction indicator

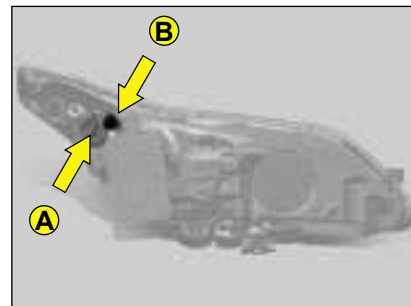

 If the headlamp has this symbol, any operation involving changing a Xenon D1S bulb must be carried out by the CITROËN network (risk of electrocution). It is recommended to change both bulbs at the same time if one is faulty.

# REPLACING BULBS



## **Direction indicator side repeaters in the rear view mirrors**

To change the side repeater bulb, press firmly in the area indicated by the arrow, then pull on the side repeater.



## **Front foglamps**

Consult your CITROËN dealer.

# REPLACING BULBS



## Interior lamp

Unclip the transparent cover of the interior lamp to reach the bulb.

**Bulb:** W 5 W

## Spotlamps

Unclip the cover of the interior lamp, then if necessary the partition for the spotlamp concerned, to access the bulb.

**Bulb:** W 5 W



## Boot lighting

Unclip the lens unit to access the bulb.

**Bulb:** W 5 W



## Glovebox lighting

Unclip the lens unit to access the bulb.

**Bulb:** W 5 W

## Sill lighting

Unclip the headlamp to access the bulb.

**Bulb:** W 5 W





# REPLACING BULBS



## Rear lamp unit (5-door model)

Identify the failed bulb.

### Bulbs:

- ❶ Sidelamp: W 5
- ❷ Stop lamps and sidelamps: P 21/5.
- ❸ Direction indicator: PY 21 W.



## Rear lamp unit


Open the boot:

- First remove the top part of the rear lamp unit by undoing the screw **A**.
- To have access to the nut **B**, detach the boot rear trim by removing the pins. Undo **B**.
- Remove the bottom part of the lamp unit.
- To change a bulb, simply rotate it a quarter turn.



## Third stop lamp

Consult your CITROËN dealer.

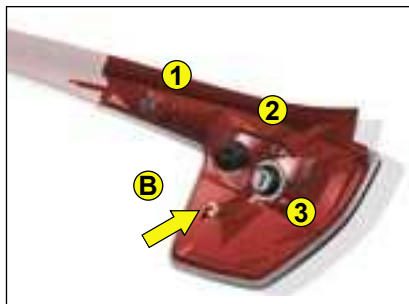

# REPLACING BULBS




## Rear lamp unit (3-door model)

Identify the failed bulb.

### Bulbs:

- ❶ **Direction indicator** P 21 W.
- ❷ **Reversing lamp** P 21 W.
- ❸ **Stop lamps and sidelamps:**  
P 21/5.

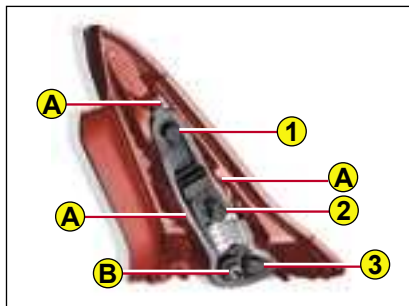

## Removal

To have access to the nut **B**, detach the boot rear trim by removing the pins. Undo **B**.

Remove the bulb-holder by detaching the points **A**.

Disengage the lamp unit.


To change a bulb, rotate it a quarter turn.



## Third stop lamp

Consult your CITROËN dealer.


# REPLACING BULBS

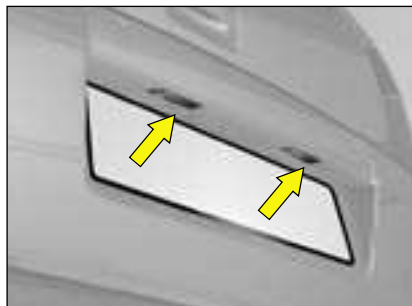

## Rear number plate lamp

- Insert a thin screwdriver into one of the holes on the outside of the plastic cover.
- Push outwards.
- Remove the plastic cover.
- Replace the faulty bulb by simply pulling it out.


**Bulb:** W 5 W.

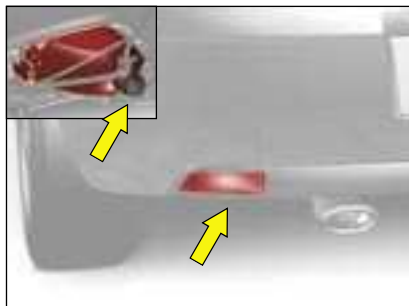

## Foglamp

Rotate the bulb-holder a quarter turn.

**Bulb:** P 21

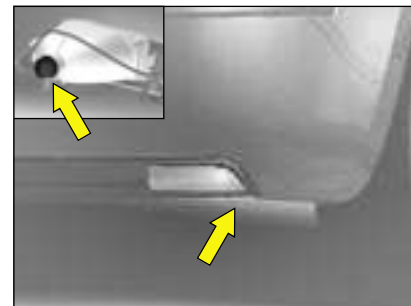

## Reversing lamp

Rotate the bulb-holder a quarter turn.

**Bulb:** P 21 (5-door model)

**After replacing a bulb, check the correct operation of the lighting and signalling.**

# SAFETY RECOMMENDATIONS

## Towbar

We recommend you to have this device fitted by a CITROËN Dealer, who will be acquainted with your vehicle's towing capability and with the procedures necessary for installing a safety item of this kind.

It is essential to install a CITROËN approved electronic unit when having a towbar fitted, in order to prevent any risk of malfunction or damage (risk of fire).

The fitting of a caravan mirror on the wing is prohibited.



## DIMENSIONS (in metres)

A: 0.841

## Roof bars and roof boxes

The design of your vehicle, for your safety and to avoid damage to the roof and tailgate, requires the use of roof bars and roof boxes that are tested and approved by AUTOMOBILES CITROËN.

## Recommendations

- Distribute your load evenly, avoiding overloading on one side.
- Arrange the heaviest part of the load as close as possible to the roof.
- Anchor the load securely and signal if any part of it is overhanging.
- Drive gently, as the vehicle will be more liable to the effects of side winds (vehicle stability may be altered).
- Remove the roof bars as soon as they are no longer needed.

## Bicycle-carrier

It is strictly prohibited to install a bicycle carrier on the tailgate of a 3-door model.

## Cold weather screen «Snow guard»

The screen supplied with the vehicle (depending on destination) should be fitted during the winter period. It is essential to remove it when temperatures are above 10 degrees Celsius.

**Respect the authorised load capacities.  
For maximum loads that can be distributed on the roof bars:  
See Chapter:  
"General information".**

# CHANGING A WHEEL



## Access to the spare wheel

Lift the boot floor.

## Dimension of the spare wheel

If your spare wheel is of a different dimension to those on the vehicle (identified by a label), it is essential to use it only on a temporary basis, to drive not above 80 km/h (50 mph) and to have the original wheel refitted as soon as possible.

## Tyre pressures

These are indicated on the label to be found inside the front door pillar, see "Vehicle Identification" and "User Precautions".

**Note :** Diagrams on the support unit indicate the locations of the tools.



## Removing the wheel

- Undo the yellow central screw by a quarter turn.
- Raise the spare wheel towards you rearwards.
- Remove the wheel from the bootspace.



## Repositioning the wheel

- Refit the wheel in place.
- Undo the yellow central screw by a few turns, then position it at the centre of the wheel.
- Do up the central screw until tight so that the wheel is securely retained in place.

**The wheel should be correctly positioned flat in the centre of its well.**

# CHANGING A WHEEL



## Tools

The tools are located in a protective holder in the spare wheel, remove the strap to gain access.

- 1 - Wheelbrace
- 2 - Centring guide
- 3 - Tool for removing/refitting wheel bolts
- 4 - Jack with handle
- 5 - Removable towing ring
- 6 - Tool for bolt protectors on aluminium wheels



## Light alloy wheels

If your vehicle is equipped with light alloy wheels and a steel spare wheel, then if fitting the latter it is normal to note that the heads of the wheel bolts do not come to bear on the wheel rim.

The steel spare wheel is secured by the conical tapering of the wheel bolts' shafts, see diagram.

When refitting the light alloy wheel, ensure that the wheel bolt heads are in undamaged condition.

**Never get underneath the vehicle if it is supported only by the jack.**  
**The jack is designed specifically for your vehicle, do not use it for other applications.**  
**Refit the repaired original wheel as soon as possible.**  
**With a spare wheel fitted, drive with caution.**

# CHANGING A WHEEL



## Removal

- 1 - Park the vehicle on stable, firm ground. Apply the handbrake. Switch off the ignition and engage first gear or reverse gear, depending on any slope (for vehicles with automatic gearbox, select position P).
- 2 - Detach the embellisher using the wheelbrace 1 by pulling close to the valve.  
For vehicles with aluminium wheel rims, slide the removal tool 6 into the slot in the central embellisher and apply firm leverage to detach.



- 3 - Slacken the wheel bolts. For vehicles with aluminium wheels, slacken the anti-theft nut using the tool provided.
- 4 - Position the jack under the bodyshell, exactly as in the illustration, at the mark **A** (in the recess in the sill member) closest to the wheel that is to be replaced.
- 5 - Deploy the jack 4 until its base is in contact with the ground. Make sure that the base of the jack is vertically below the jacking point used.
- 6 - Raise the vehicle.
- 7 - Remove the bolts and disengage the wheel.



## Refitting

- 1 - Position the wheel with the aid of the centring guide.
- 2 - Do up the 3 bolts by hand and remove the centring guide. Position the 4th bolt.
- 3 - Do pre-tightening with the wheel-brace 1.
- 4 - Retract the jack 4 and disengage it.
- 5 - Tighten the wheel bolts using the wheelbrace 1.
- 6 - Reposition the embellisher, commencing by placing the slot at the valve, pressing it home with the palm of your hand. For vehicles with aluminium wheels, refit the bolt protector.
- 7 - Stow the tools and the wheel in the boot.
- 8 - Check the tyre pressure (see "Vehicle identification") and also have its balancing checked.

# TYRE PRESSURE SENSORS

This function alerts you in the event of a tyre being deflated or punctured. For this purpose, sensors continuously monitor the condition of the vehicle's wheels.

This system does not absolve the driver of the need to check the tyre pressures regularly.

## Under-inflation warning



The **SERVICE** warning lamp lights up and a vehicle outline is displayed.

The wheel(s) concerned will be shown flashing on the vehicle outline. Check the tyre pressures as soon as possible.

## Puncture



The **STOP** warning lamp lights up and a vehicle outline is displayed.

The wheel(s) concerned will be shown flashing on the vehicle outline. Stop the vehicle immediately, avoiding any violent actions on the steering wheel or brakes.

Change the damaged wheel (whether punctured or substantially deflated), have the tyre repaired as soon as possible, then check the tyre pressure as soon as you can after that.

The wheel affected will no longer be detectable by the alert system if it is in the boot or undergoing repair (information given by the vehicle outline). The spare wheel will not be monitored by the alert system.

## Wheel without sensor



The **SERVICE** warning lamp lights up and a vehicle outline is displayed. The wheel(s) concerned will be shown as absent on the vehicle outline. If you have not changed a wheel, this information indicates a malfunctioning of the system.

Consult the CITROËN network to have the defective sensor(s) replaced.

The deflation detection system is a driving assistance function which does not absolve the driver from the responsibility to be vigilant, or from the need to check the tyre pressures regularly (see "Vehicle identification").

This system does not absolve the driver of the need to check the tyre pressures on a regular basis (see «Identification»), to ensure that the vehicle behaves as it should and to avoid premature wear on the tyres, especially when the vehicle is being subjected to heavy loads or driven at high speeds.

**Do not forget to check the tyre pressure on the spare wheel.**



**Any repair or any change of tyre, on a wheel fitted with a sensor, should be carried out by a CITROËN Dealer.**

**The system may be affected from time to time by interference from radio transmissions on similar frequencies.**



# TOWING - LIFTING

## Removable towing ring

The towing ring is detachable and can be fitted either at the front or at the rear of the vehicle. It is stowed in the jack's protective holder in the spare wheel.





### Advice

In exceptional circumstances, it is permitted to tow the vehicle **at low speed over a short distance** (in accordance with the local legislation in force).

**In all other cases, the vehicle must be transported by a transporter.**

### CAUTION - TOWING A VEHICLE WITH AUTOMATIC TRANSMISSION

**Put the selector lever in position N (neutral).**

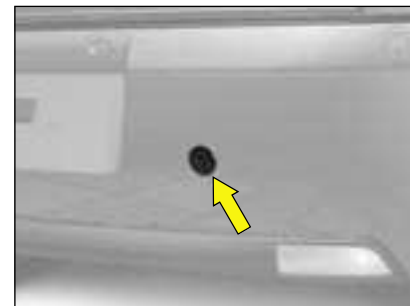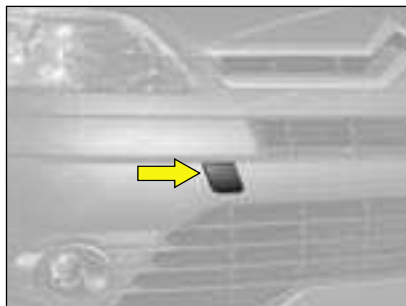

### Towing with all wheels on the ground

Towing ring fixings are placed at the front and at the rear of the vehicle.

To access them:

- at the front: push at top left, then pull on right.
- at the rear: push at bottom, then pull on top.

The cover remains attached to the bumper by means of a tab, so that it cannot become lost.

**The ignition key should be in position "M" so as to retain steering.**

Use a bar with hooks to attach on the towing rings.



**If the engine is not running, the steering and braking systems will not be power-assisted.  
If towing another vehicle, the latter should be free-wheeling (that is, gearbox in neutral).**

# GENERAL INFORMATION

	5-door model				
Engine type	1.4i 16V BVM	1.6i 16V BVM	1.6i 16V BVA	2.0i 16V 143hp BVM	2.0i 16V 143hp BVA
Fuel tank capacity	Approximately 60 litres				
Recommended fuel	Unleaded petrol RON 95 - RON 98				
Turning circle between walls (in metres)	11.3	11.3	11.3	11.3	11.3
French fiscal rating	6	7	7	9	9
Power (kW)	65	80	80	103	103
Calculated maximum speed in km/h (mph) (in the highest gear)	182 (113)	194 (120)	188 (117)	207 (129)	206 (128)
<b>Weights (kg)</b>					
Unladen weight	1 182	1 200	1 274	1 276	1 292
Gross vehicle weight	1 702	1 732	1 794	1 772	1 812
Maximum weight on rear axle	850	850	850	850	850
Gross train weight	2 902	2 932	2 994	3 072	3 112
Gross trailer weight (with brakes) (within the Gross Train Weight limit)					
10 to 12% incline	1 200	1 200	1 200	1 300	1 300
8 to 10% incline	1 200	1 200	1 200	1 300	1 300
Incline of up to 8%	1 500	1 400	1 400	1 500	1 500
Gross trailer weight (without brakes)	628	637	674	675	683
Trailer nose weight	63	61	62	62	66
Max. roof rack load	75				

# GENERAL INFORMATION

5-door model						
HDi 92 BVM	HDi 110 BVM	HDi 110 FAP BVM	HDi 110 FAP BVMP	HDi 138 BVM	HDi 138 FAP BVM	HDi 138 FAP BVA
Approximately 60 litres						
Diesel fuel						
11.3	11.3	11.3	11.3	12	12	12
5	6	6	6	7	7	7
66	80	80	80	100	100	100
180 (112)	192 (119)	192 (119)	192 (119)	207 (129)	207 (129)	206 (128)
1 257	1 270	1 280	1 293	1 375	1 381	1 416
1 777	1 800	1 800	1 800	1 849	1 849	1 880
850	850	850	850	850	850	850
3 077	3 100	3 100	3 100	3 349	3 349	3 450
1 300	1 300	1 300	1 300	1 500	1 500	1 570
1 300	1 300	1 300	1 300	1 500	1 500	1 570
1 300	1 300	1 300	1 300	1 800	1 800	1 570
666	672	677	675	725	728	740
66	66	66	65	70	73	70
75						

**Weights:** refer to the vehicle identification plate.

**BVM:** Manual gearbox.

**BVMP:** (6 speed) Electronic Gearbox System.

**BVA:** Automatic gearbox.

**FAP:** Diesel particulate filter system (DPFS).

Observe your vehicle's towing limits.

It is essential to comply with the max. Gross Trailer Weights and speed limits as specified by legislation in each country. For further information about the towing capacity of your vehicle and its max. authorised Gross Train Weight, contact your CITROËN dealer.

# GENERAL INFORMATION

	3-door model				
Engine type	1.4i 16V BVM	1.6i 16V BVM	1.6i 16V BVA	2.0i 16V 143hp BVM	2.0i 16V 180hp BVM
Fuel tank capacity	Approximately 60 litres				
Recommended fuel	Unleaded petrol RON 95 - RON 98				
Turning circle between walls (in metres)	11.3	11.3	11.3	11.3	11.3
French fiscal rating	6	7	7	9	11
Power (kW)	65	80	80	103	130
Calculated maximum speed in km/h (mph) (in the highest gear)	182 (113)	194 (120)	188 (117)	207 (129)	227 (141)
<b>Weights (kg)</b>					
Unladen weight	1 181	1 200	1 278	1 288	1 337
Gross vehicle weight	1 701	1 720	1 798	1 770	1 768
Maximum weight on rear axle	850	850	850	850	850
Gross train weight	2 901	2 920	2 998	3 070	2 868
Gross trailer weight (with brakes) (within the Gross Train Weight limit)					
10 to 12% incline	1 200	1 200	1 200	1 300	1 200
8 to 10% incline	1 200	1 200	1 200	1 300	1 500
Incline of up to 8%	1 500	1 400	1 400	1 500	1 800
Gross trailer weight (without brakes)	628	637	676	680	686
Trailer nose weight	63	61	63	62	57
Max. roof rack load	75				

# GENERAL INFORMATION

3-door model						
HDi 92 BVM	HDi 110 BVM	HDi 110 FAP BVM	HDi 110 FAP BVMP	HDi 138 BVM	HDi 138 FAP BVM	HDi 138 FAP BVA
Approximately 60 litres						
Diesel fuel						
11.3	11.3	11.3	11.3	12	12	12
5	6	6	6	7	7	7
66	80	80	80	100	100	100
180 (112)	192 (119)	192 (119)	192 (119)	207 (129)	207 (129)	206 (128)
1 255	1 269	1 279	1 293	1 375	1 379	1 410
1 775	1 790	1 799	1 790	1 835	1 835	1 880
850	850	850	850	850	650	850
3 075	3 090	3 099	3 090	3 335	3 335	3 450
1 300	1 300	1 300	1 300	1 500	1 500	1 570
1 300	1 300	1 300	1 300	1 500	1 500	1 570
1 300	1 300	1 300	1 300	1 800	1 800	1 570
665	672	677	675	725	727	740
66	66	66	65	70	73	70
75						

**Weights:** refer to the vehicle identification plate.

**BVM:** Manual gearbox.

**BVMP:** (6 speed) Electronic Gearbox System.

**BVA:** Automatic gearbox.

**FAP:** Diesel particulate filter system (DPFS).

Observe your vehicle's towing limits.

It is essential to comply with the max. Gross Trailer Weights and speed limits as specified by legislation in each country. For further information about the towing capacity of your vehicle and its max. authorised Gross Train Weight, contact your CITROËN dealer.

# FUEL CONSUMPTION

Litres per 100 km (miles per gallon)

Engine type	1.4i 16V	1.6i 16V			2.0i 16V 143 hp		2.0i 16V 180 hp		HDi 92	HDi 110	HDi 110 FAP		HDi 138	HDi 138 FAP	
Saloon	BVM	BVM	BVA	BVM	BVA	BVM	BVM	BVM	BVM	BVM	BVMP	BVM	BVM	BVA	
<b>Urban</b>	8.7 (32.5)	9.5 (29.7)	10.6 (26.6)	10.7 (26.4)	11.7 (24.1)	11.7 (24.1)	5.9 (47.9)	6.1 (46.3)	6.0 (47.1)	5.8 (48.7)	7.2 (39.2)	7.1 (39.8)	9.1 (31.0)		
<b>CO<sub>2</sub> emissions</b>	209	224	252	254	281	281	158	164	161	154	190	188	242		
<b>Extra urban</b>	5.2 (54.3)	5.7 (49.6)	5.8 (48.7)	5.8 (48.7)	6.1 (46.3)	6.5 (43.5)	4.1 (69.8)	4.0 (70.6)	4.0 (70.6)	3.8 (74.3)	4.6 (61.4)	4.5 (62.8)	5.1 (54.4)		
<b>CO<sub>2</sub> emissions</b>	124	135	138	140	146	156	109	108	108	101	121	119	136		
<b>Combined</b>	6.4 (44.1)	7.1 (39.8)	7.6 (37.2)	7.6 (37.2)	8.1 (34.9)	8.4 (33.6)	4.7 (60.1)	4.8 (58.9)	4.7 (60.1)	4.5 (62.8)	5.5 (51.4)	5.4 (52.3)	6.6 (42.8)		
<b>CO<sub>2</sub> emissions</b>	153	169	180	182	193	200	125	128	125	120	145	142	175		

These consumption values are established in compliance with European directive 80/1268/CEE. They can vary depending on how the vehicle is driven, on the prevailing traffic conditions, on weather conditions, on vehicle load, on how the vehicle has been maintained and also on how many accessories are in use.

**BVM:** Manual gearbox.

**BVMP:** (6 speed) Electronic Gearbox System.

**BVA:** Automatic gearbox.




**FAP:** Diesel particulate filter system (DPFS).

**The fuel consumption figures quoted are correct at time of going to press.**

# DIMENSIONS


(in metres)

	3-door model	5-door model
A	2.608	
B	4.273	4.260
C	0.935	
D	0.730	0.717
E	1.502 / 1.510	
F	1.505	1.497
G	1.769	1.773
H	1.456 / 1.471	
I	1.964	

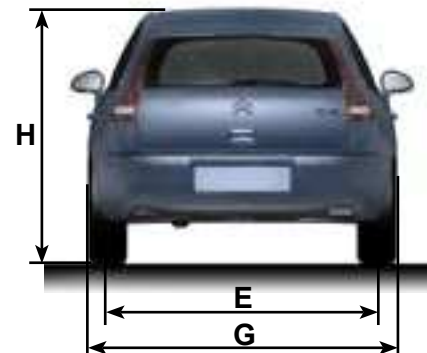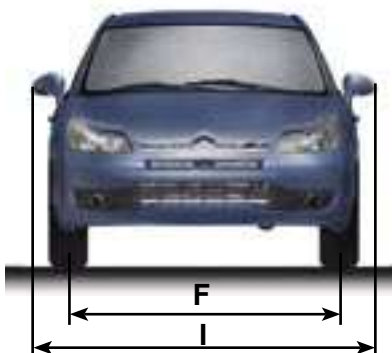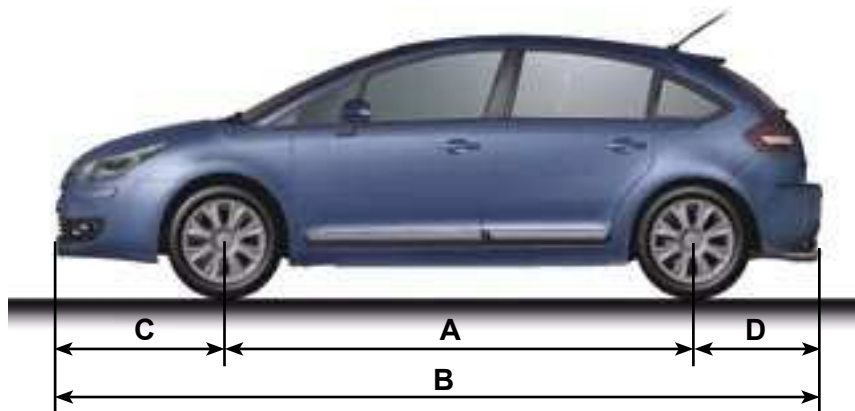

# DIMENSIONS

(in metres)

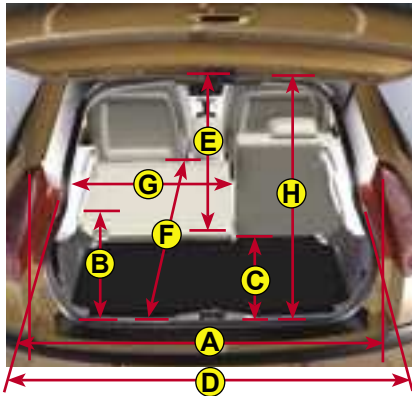

**3-door model**

<b>A</b>	0.903/1.067
<b>B</b>	0.513/0.518
<b>C</b>	0.794
<b>D</b>	1.034
<b>E</b>	0.791
<b>F</b>	1.385
<b>G</b>	0.725
<b>H</b>	0.791




**5-door model**

<b>A</b>	0.862/1.044
<b>B</b>	0.492/0.515
<b>C</b>	0.794
<b>D</b>	1.034
<b>E</b>	0.791
<b>F</b>	1.385
<b>G</b>	0.725
<b>H</b>	0.791



# VEHICLE IDENTIFICATION

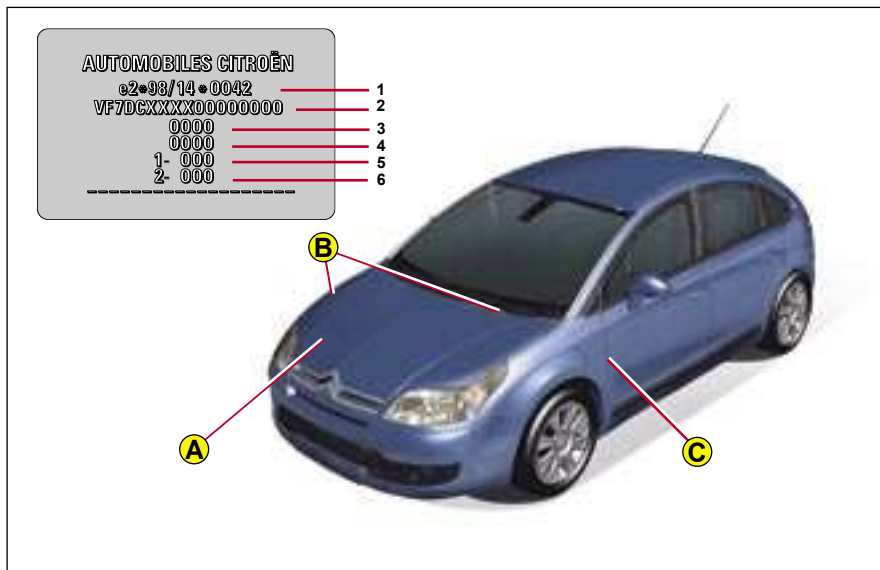

## A Chassis number plate

In the engine under-bonnet

- 1: EU type approval number.
- 2: Vehicle Identification N°. (VIN).
- 3: Gross vehicle weight.
- 4: Gross train weight.
- 5: Maximum weight on front axle.
- 6: Maximum weight on rear axle.

## B Vehicle identification number

On the bodywork and behind the windscreen.



The number on the bodywork can be found below the plastic trim which should be detached after pressing on the pins with the aid of the ignition key.


## C Colour code.

**Tyre reference**  
**Tyre pressures**

All original CITROËN replacement parts are available from CITROËN. It is in the user's interest, for his safety and for the sake of the warranty, to reject all other parts. Fitting parts or units not supplied by CITROËN may even result in violation of the law, if it involves non-compliance with regulations concerning safety, pollution control, interference suppression and the noise level of the vehicle. Fitting such parts or units could also deprive the user of any recourse against the maker.

This applies in particular to:

- braking equipment components,
- lighting and signalling equipment,
- engine equipment,
- the exhaust system,
- steering system, structural and suspension parts.

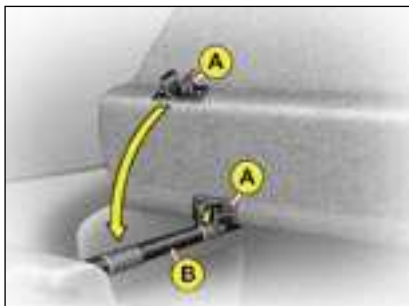

## Luggage cover

This conceals the interior of the vehicle in combination with your rear shelf (see “Comfort – Boot”).

## Installation

Take care to insert the fixings **A** on the frame **B**.



## Stowage

To access the load area roll up the luggage cover.

## Removal

It is possible to remove the luggage cover entirely.

**Do not place hard or heavy objects on the luggage cover.  
They could become dangerous projectiles in the event of sudden braking or a collision.**

# GENERAL: C4 ENTREPRISE \*

Engine type	3-door model		5-door model	
	HDi 92 BVM	HDi 110 BVM	HDi 92 BVM	HDi 110 BVM
French fiscal rating	6	6	6	6
<b>Weights (kg)</b>				
Unladen	1 244	1 276	1 247	1 265
Gross Vehicle Weight	1 770	1 800	1 780	1 790
Payload (including driver)	526	524	533	525
Gross Train Weight	3 070	3 100	3 080	3 090
Trailer weight with brakes (within Gross Train Weight)	1 300	1 300	1 300	1 300
Trailer weight without brakes	655	675	660	670
Trailer nose weight	52	52	52	52
Maximum weight on roof bars	75			

\* Applicable to all countries, except France and Overseas France. For France and Overseas France, refer to the table on the page "General : 3-door model".

## CONTENTS

What is NaviDrive ? .....	1
Description of the controls .....	2
Voice commands.....	6
Main Menu.....	8
Navigation - Guidance .....	9
Map .....	18
Traffic information .....	22
Audio system (Radio, CD player, CD changer, MP3) .....	25
Telephone.....	42
Telematic services .....	48
Configuration.....	50
Vehicle diagnosis .....	52
Video .....	53
Frequently-asked questions.....	54
Index NaviDrive.....	56



## NAVIDRIVE IS A SYSTEM WHICH ENABLES YOU:

- To navigate to the destination of your choice (European map on hard disc) including journeys to your Centres of interest (cinema, hotel, restaurant..) and taking account of traffic conditions.
- To listen to the radio.
- To listen to CDs / MP3 CDs.
- To copy CDs into your Jukebox source (10 Go's available on the hard disc).
- To telephone hands-free.
- To enjoy access to **CITROËN** services according to the country you are in (Citroën Emergency, Citroën Assistance, Citroën On line and NaviDrive services).
- To access a vehicle diagnosis menu.
- To connect a nomad audio/video device.


**Your NaviDrive is coded so as to function only on your particular vehicle.**

**It cannot be used on any other vehicle.**

**The anti-theft system is automatic and requires no action on your part.**

**Your NaviDrive can operate without the ignition on for a maximum of 30 minutes depending on the level of charge of the vehicle battery.**

# DESCRIPTION OF THE CONTROLS

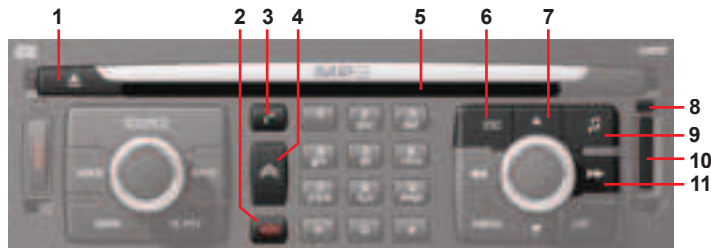

1	CD eject.
2	Call in progress: <b>Short press:</b> End a call.
3	<b>Short press:</b> Answer call. Display of telephone menu.
4	<b>Short press:</b> Access to the CITROËN services menu. <b>Long press:</b> Direct call to the CITROËN assistance service.
5	CD aperture.
6	<b>Short press:</b> <ul style="list-style-type: none"> <li>• Cancellation of the current operation.</li> <li>• Deletion of a superimposed display.</li> </ul> <b>Long press:</b> <ul style="list-style-type: none"> <li>• Close main menu and return to the welcome screen.</li> </ul>
7	<b>Short press:</b> Manual search of higher frequencies.  <b>Jukebox/CD/CD changer source MP3:</b> Selection of the previous CD/previous directory.  <b>Other sources:</b> Moving in the menus. In " <b>Select - Move on map</b> " mode, move upwards.

8	SIM card eject button.
9	<b>Audio adjustments:</b> Sound ambiances, bass, treble, loudness, fade, balance, speed-sensitive volume.
10	SIM card slot.
11	<b>Radio sources:</b> <ul style="list-style-type: none"> <li>• <b>Short press:</b> Automatic search of higher frequencies.</li> </ul> <b>CD or CD changer source:</b> <ul style="list-style-type: none"> <li>• <b>Short press:</b> Search of the next track.</li> <li>• <b>Long press:</b> Fast forward with accelerated sound.</li> </ul> <b>Jukebox/MP3 CD source:</b> <ul style="list-style-type: none"> <li>• <b>Short press:</b> Search of the next track.</li> </ul> <b>Exploration:</b> Movement in the menus and movement of the cursor in an entry zone. In " <b>Select - Move on Map</b> ": move to the right.



It is recommended that you do not use the NaviDrive controls while your vehicle is moving. In some countries, certain commands may be deactivated to comply with national regulations.

# DESCRIPTION OF THE CONTROLS



12	<p><b>Rotate:</b></p> <ul style="list-style-type: none"> <li>• <b>Movement</b> in the screen for choosing a function, a parameter or a value.</li> <li>• <b>Decrease or increase</b> of data in the case of an adjustment.</li> <li>• <b>Scrolling</b> of the elements to select from a list.</li> <li>• <b>Modification</b> of the scale of the map on the screen.</li> </ul>
13	<p><b>Short press:</b></p> <ul style="list-style-type: none"> <li>• Access to the contextual menu (shortcuts).</li> <li>• Validation of the function chosen or of the value modified.</li> <li>• Selection of an “<b>adjustment</b>” or “<b>list</b>” type parameter for modification.</li> <li>• Activation/Deactivation of a function.</li> </ul> <p><b>Long press:</b> Update of the list of radio stations available.</p>

14	<p><b>Radio source:</b> Manual search of lower frequencies.</p> <p><b>Jukebox/CD/CD changer source MP3:</b> Selection of the next CD/next directory.</p> <p><b>Other sources:</b> Moving in the menus. In “<b>Selection - Move on map</b>” mode: move downwards.</p>
15	<p><b>Short press:</b> Access to the Main Menu.</p> <p><b>Long press:</b> Access to the Voice Commands menu, to the description of your equipment, to the démonstration of Navigation, to the status of services and to the level of charge of the reserve battery. In certain countries, this control is deactivated while the vehicle is moving.</p>
16	<p><b>Radio source:</b></p> <ul style="list-style-type: none"> <li>• <b>Short press:</b> Automatic search of lower frequencies.</li> </ul> <p><b>CD or CD changer source:</b></p> <ul style="list-style-type: none"> <li>• <b>Short press:</b> Search of previous track.</li> <li>• <b>Long press:</b> Rapid reverse with accelerated sound.</li> </ul> <p><b>Jukebox/MP3 CD source:</b></p> <ul style="list-style-type: none"> <li>• <b>Short press:</b> Search of previous track.</li> </ul> <p><b>Exploration:</b> Movement in the menus and movement of the cursor in an entry zone.</p> <ul style="list-style-type: none"> <li>• In “<b>Select - Move on Map</b>” : move to the left.</li> </ul>


# DESCRIPTION OF THE CONTROLS



17	<p><b>Other functions of the alphanumeric keypad:</b></p> <ul style="list-style-type: none"> <li>• <b>Radio source:</b> <ul style="list-style-type: none"> <li>- <b>Short press:</b> Recall of pre-set stations.</li> <li>- <b>Long press:</b> Pre-setting of stations.</li> </ul> </li> <li>• <b>CD changer source:</b> Selecting a CD.</li> </ul>
	<p>Any alphanumeric entry (telephone, address, adjustment of date/time, etc.). Rapid selection of a name commencing with the letter chosen, in the directory and in the SIM card.</p>
18	<p><b>Short press:</b> Selection of frequency bands and memory banks.  <b>Long press:</b> Automatic memorisation of FM stations available (Autostore).</p>

19	<p><b>Short press:</b> On/Off for TA traffic information (Traffic Announcements).  <b>Long press:</b> On/Off for PTY programme type (Program Type).</p>
20	<p><b>Press:</b> On / Off.  <b>Rotate:</b> Volume adjust.</p>
21	<p><b>Short successive presses:</b></p> <ul style="list-style-type: none"> <li>• <b>One press:</b> Only the top part of the display remains lit.</li> <li>• <b>Two presses:</b> Display off (blank display).</li> <li>• <b>Three presses:</b> Return to the standard display.</li> </ul> <p><b>Long press (more than 10 seconds):</b> Re-initialisation of the system.</p>
22	<p><b>Short successive presses will display all the information relating to the following sources:</b></p> <ul style="list-style-type: none"> <li>• Audio.</li> <li>• Telephone.</li> <li>• Trip computer.</li> <li>• Navigator.</li> </ul>
23	<p><b>Long press (between 2 and 8 seconds):</b> Emergency call.</p>
24	<p><b>Short press:</b> Selection of the audio source (Radio, CD, CD changer, Jukebox).  <b>Long press:</b> Copy of a CD on Jukebox source.</p>

# DESCRIPTION OF THE CONTROLS ON THE STEERING WHEEL

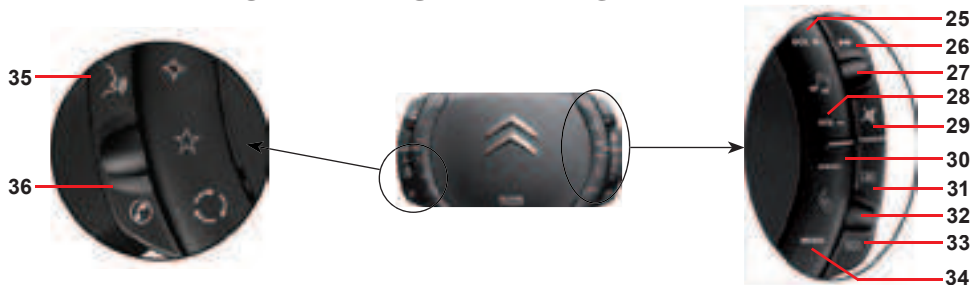


25	Volume increase.	28	Volume decrease.
26	<p><b>Radio source:</b>  <b>Short press:</b> Automatic search of higher frequencies.</p> <p><b>CD or CD changer source:</b></p> <ul style="list-style-type: none"> <li>• <b>Short press:</b> Search of the next track.</li> <li>• <b>Long press:</b> Fast forward with accelerated sound.</li> </ul> <p><b>Jukebox source:</b></p> <ul style="list-style-type: none"> <li>• <b>Short press:</b> Search of the next track.</li> </ul>	29	Temporary sound pause / Restoration of sound: Mute.
27	<p><b>Radio source:</b></p> <ul style="list-style-type: none"> <li>• Scrolling of pre-set stations.</li> </ul> <p><b>CD source:</b> Search of the track.</p> <p><b>CD changer source:</b></p> <ul style="list-style-type: none"> <li>• Selection of next or previous CD.</li> </ul> <p><b>MP3 CD / Jukebox source:</b></p> <ul style="list-style-type: none"> <li>• Selection of the next or previous album.</li> </ul> <p><b>Other sources:</b></p> <ul style="list-style-type: none"> <li>• Selection of the next or previous elements of a menu in a screen, a list, an alphabet.</li> </ul>	30	<p><b>Main menu access button:</b>            To comply with legislation in certain countries, the “Menu” button is deactivated while the vehicle is moving.</p>
27		31	<p><b>Validation button:</b>            Validation of the function chosen or of the value modified.</p>
		32	Scrolling of the elements to select from a list.
		33	<p><b>Cancel or delete button:</b></p> <ul style="list-style-type: none"> <li>• <b>Short press:</b> Cancellation of the current operation.</li> <li>• <b>Long press:</b> Deletion of a superimposed display.</li> </ul>
		34	Selection of the type of information displayed on the right of the screen.
		35	Activation/Deactivation of the voice recognition control.
		36	<p><b>Not in communication</b></p> <ul style="list-style-type: none"> <li>• <b>Press:</b> Access to the telephone contextual menu.</li> </ul> <p><b>If there is an incoming call</b></p> <ul style="list-style-type: none"> <li>• <b>Short press:</b> Answer call.</li> <li>• <b>Long press:</b> Refuse the call.</li> </ul> <p><b>During a call</b></p> <ul style="list-style-type: none"> <li>• <b>Short press:</b> End a call.</li> <li>• <b>Long press:</b> Access to the telephone contextual menu.</li> </ul>



# DESCRIPTION OF THE CONTROLS

## VOICE

### WHAT IS A VOICE COMMAND ?

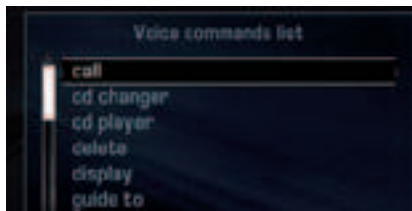

You can operate Navidrive using your voice.

Navidrive lets you access certain functions by pronouncing the corresponding voice label:

- Using pre-recorded words and expressions, for example: **“Radio”**, **“Help”**.
- Using a label recorded by the user.

To associate a voice label to a directory file, select this file.

Record a voice label for this file (e.g. **“Office”** or **“Home”**).



To enhance the efficiency of recognition of the labels in your directory files, it is recommended to record them with different intonations.

The voice commands function in a logical sequence. A word voiced at one level must be recognised before another word at the next level can be recognised.

### HOW TO ACTIVATE VOICE RECOGNITION ?



press on the voice recognition button.

Activation of the function is confirmed by a beep and by the opening of a window on the display.

The system is then listening:

- If the word pronounced is understood by the system, it is displayed in the window and you hear a beep.
- If the word pronounced has not been understood, the system displays and announces **“Sorry”**.

You must then repeat the words.

#### Example


To call a number in your telephone directory:

- press on the voice recognition button.
- Pronounce the word **“Telephone”**.
- Wait for the system to answer with a beep.
- Pronounce the word **“Directory”**.
- Wait for the system to answer with a beep.
- Finally pronounce for example the label **“Home”**.

After the double beep, the desired action is performed.

Say the key words that correspond to the action that you wish carried out.

### HOW TO DEACTIVATE VOICE RECOGNITION ?

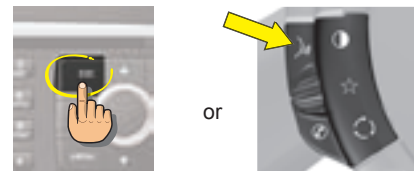

- Press on the control ESC or on the voice recognition button to deactivate voice recognition.

**Note:** Voice recognition deactivates automatically:

- following an action using voice commands (emission of a double beep),
- after a few seconds with no voice commands (the system says **“End of recognition”**).



If you say the word **“Help”** and **“What can I say”**, you will see displayed all the commands that are available at the moment of this request.

If you should lose your way in the different levels of the voice command structure, say the word **“Cancel”** to bring you back to the voice commands at the previous level of the structure.

However careful the user may be, the pre-recorded words or expressions will always be more easily recognised than words recorded by the user.

# LIST AND STRUCTURE OF VOICE COMMANDS

## HOW TO ACCESS THE LIST OF PRE-RECORDED VOICE COMMANDS?



Press on the end of the lighting control stalk to start voice recognition and say “Help” or “What can I say” to display the list of voice commands that are available.

Display	Audio		Detail page 27	
	Navigator		Detail page 11	
	Trip computer			
Telephone	Telephone		Detail page 44	
	Voice mail		Detail page 44	
	Redial			
Call	Adress book	<i>“Pre-recorded label”</i>	Detail page 44	
	<i>“Pre-recorded label”</i>		Detail page 46	
Message	Display		Detail page 47	
	Read		Detail page 47	
Navigator	Stop		Detail page 11	
	Adress book	<i>“Pre-recorded label”</i>	Detail page 12	
	Restart		Detail page 11	
	Show	Destination		Detail page 24
		Vehicle		Detail page 24
	Zoom out		Detail page 18	
Zoom in		Detail page 18		
Guide to	<i>“Pre-recorded label”</i>			
Traffic Info	Display		Detail page 24	
	Read		Detail page 24	
Radio			Detail page 33	
Radio	Autostore		Detail page 31	
	List		Detail page 31	
	Memory	1-6	Detail page 30	
	Previous		Detail page 30	
	Next		Detail page 30	


CD player			Detail page 35	
	Random		Detail page 28	
CD player	List			
	Track number	1-20		
	Previous track			
	Next track			
	Scan		Detail page 28	
	Folder	Repeat		
		Next		
		Previous		
Jukebox			Detail page 37	
Jukebox	Random		Detail page 28	
	List			
	Track number	1-20		
	Previous track			
	Next track			
	Scan		Detail page 28	
	Folder	Repeat		
		Next		
Previous				
CD changer			Detail page 41	
CD changer	Disc number	1-5	Detail page 41	
	Previous disc			
	Next disc			
	Random		Detail page 28	
	List			
	Track number	1-20	Detail page 41	
	Previous track		Detail page 41	
	Next track		Detail page 41	
	Repeat			
	Scan		Detail page 28	

# MAIN MENU

## HOW TO ACCESS THE MAIN MENU ?



Press on the MENU button.

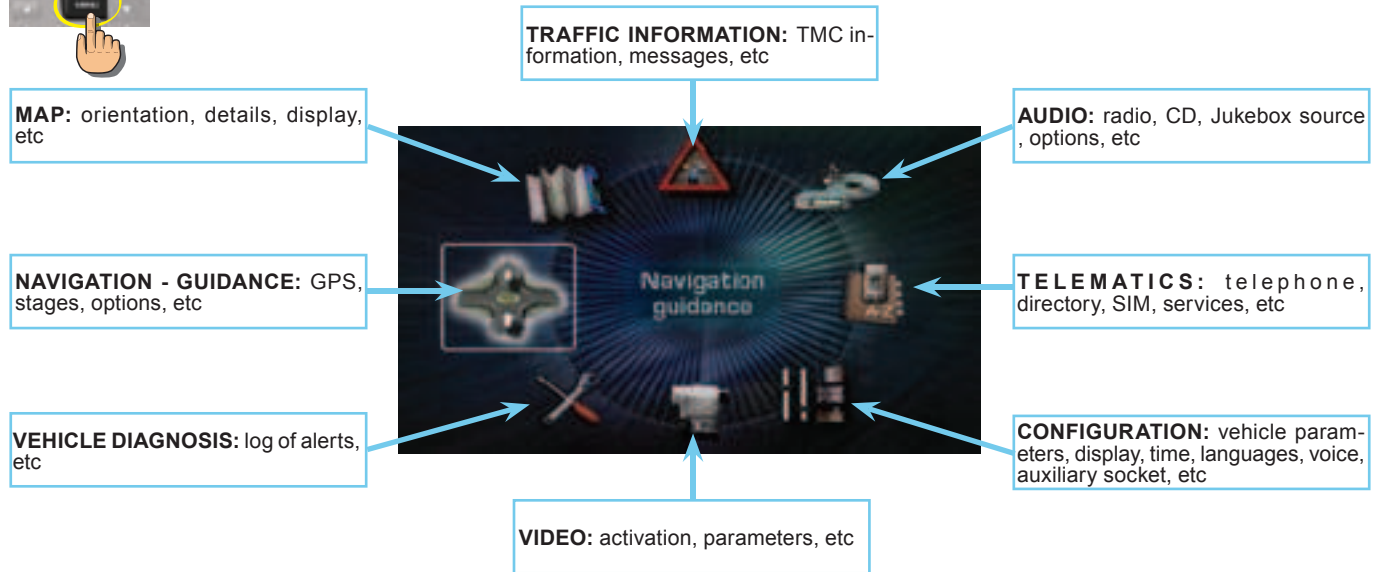

To keep the display clean, it is recommended to wipe with a soft, non-abrasive cloth (e.g. for spectacles) without any cleaning product added.

# NAVIGATION/GUIDANCE

## GENERAL

### WHAT IS THE NAVIGATION SYSTEM ?

The on-board navigation system uses audible and visual instructions to guide you towards the destination of your choice.

The system uses GPS and a mapping database stored on a hard disc.

The GPS system enables your position to be plotted via contact with a number of satellites.

The navigation system is composed of the following elements:

- A synthesised voice for enunciating the guidance instructions during navigation.
- A multifunction display.
- A GPS aerial.
- Controls on your NaviDrive as well as on the steering wheel.

### WHAT YOU NEED TO DO IN ORDER TO USE THE NAVIGATION SYSTEM ?

You have to initialise the navigation system:

- when you first use the navigation
- following a battery disconnection.

Park the vehicle in the open air so that it can make contact with a satellite.

Place the ignition key in the "Ignition" position for 15 minutes.

**If the navigation system has difficulty in receiving its GPS positioning from satellites, this may be caused by the presence of bridges, underground car parks, etc., which may temporarily interfere with vehicle location or guidance calculation.**

### HOW TO ACTIVATE A NAVIGATION SYSTEM DEMONSTRATION ?



The demonstration gives you a simulation of the Navigation function.

**The demonstration only operates if the Navigation function is displaying (successive presses on button MODE).**

- Keep the MENU button pressed.
- Enter a destination (see "How to enter an address?").
- Launch Navigation to start the demonstration.

The departure point will be either the current location of the vehicle or the last location known.




You can use the demonstration menu to enter a different point of departure to where you are now. This lets you plan a trip that you are wishing to make.



If your NaviDrive should malfunction, press for at least 10 seconds on the DARK button to re-initialise the system.

### DESCRIPTION OF THE TYPES OF INFORMATION DISPLAYED DURING NAVIGATION

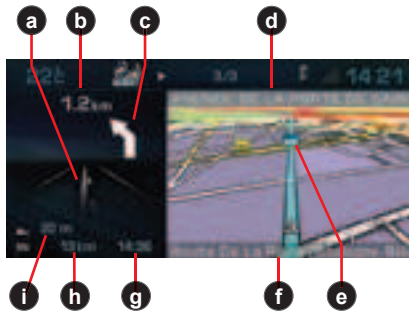

#### The Multifunction screen

During a guidance, you have access to the following types of information:

- a Manoeuvre to be made, or direction to be taken.
- b Distance to the next manoeuvre.
- c Next manoeuvre to be made.
- d Next road to be taken and name of town.
- e Symbol concerning Traffic information or the services that are in proximity.
- f Road you are currently on, name of the town.
- g Estimated time of arrival at destination (based on flowing traffic).
- h Distance to final destination.
- i Altitude.

### THE VOICE SYNTHESIS



Apart from on the screen, the manoeuvres to be made are announced by a voice synthesiser.

#### Repeating the last piece of voice information

A few seconds after enunciation of a guidance voice instruction, you have the possibility of hearing it again.

Keep the end of the lighting control stalk pressed.

#### How to adjust the volume for the voice instructions ?




While a voice instruction is being spoken, press on the volume adjustment button controls either on the system or on the steering wheel.

Adjustment is also possible in the "Configuration" menu.

# NAVIGATION/GUIDANCE


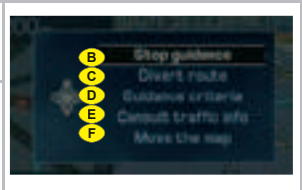
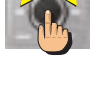
## ACCESSING THE MENU

### HOW TO ACCESS THE NAVIGATION/GUIDANCE MENU ?

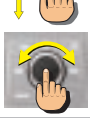	<ul style="list-style-type: none"><li>• Press button MENU.</li></ul>	
	<ul style="list-style-type: none"><li>• Rotate the control to select the Navigation/Guidance icon <b>A</b>.</li><li>• Press on the control to validate.</li></ul>	

### HOW TO ACCESS THE NAVIGATION MENU SHORTCUTS ?

When the Navigation function is displayed (successive presses on the MODE button), the Navigation menu shortcuts give you access to the main Navigation functions.



	<ul style="list-style-type: none"><li>• Press on the control. A window opens.</li></ul>	
	<ul style="list-style-type: none"><li>• Rotate the control to select the option of your choice.</li><li>• Press on the control to validate.</li></ul>	

The shortcut options available allow you:

- **B** to resume or stop the guidance towards the last destination entered
- **C** to divert an itinerary according to the number of kilometres (or miles) that you will have indicated
- **D** to define or modify the calculation criteria for the itinerary (shortest way, quickest way. etc.),
- **E** to access the list of Traffic information messages,
- **F** to move the pointer on the Map.

# NAVIGATION/GUIDANCE MENU STRUCTURE

## WHAT ARE THE FUNCTIONS OF THE NAVIGATION/GUIDANCE MENU ?

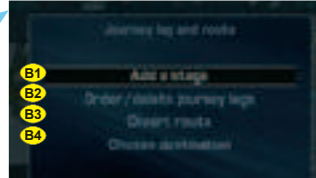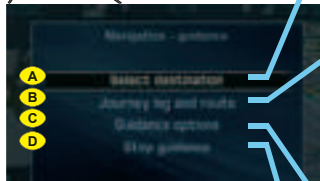

### A CHOOSE A DESTINATION

- A1 Enter a city name, a street name, a street no. or intersection.
- A2 Enter the GPS coordinates for a location.
- A3 Select a location that is stored in the directory.
- A4 Select a location from among the last twenty destinations requested.

### B ENTER STAGES AND ITINERARY

- B1 Add a stage to an itinerary after starting a guidance.
- B2 Order or delete stages when creating an itinerary.
- B3 Divert an itinerary according to the number of kilometres (or miles) you will have indicated (for example to avoid a traffic hold-up).
- B4 Alter the destination initially chosen.

### C SET PARAMETERS FOR THE GUIDANCE OPTIONS


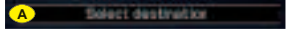





- C1 Defining the route calculation criteria.
- C2 Adjust the volume of the voice synthesis.
- C3 Activate/Deactivate the pronunciation of a street name in the voice instructions.
- C4 View the types of navigation information available on the hard disc.
- C5 Delete the last destinations automatically memorised.

### D STOP/RESUME THE CURRENT GUIDANCE

# NAVIGATION/GUIDANCE

## ENTER AN ADDRESS (1/2)

### HOW TO ENTER AN ADDRESS ?

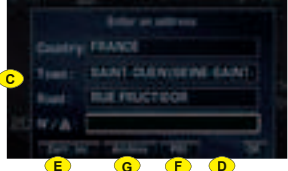	<p>In the Navigation/Guidance menu:</p> <ul style="list-style-type: none"><li>• Rotate the control to select the menu <b>A</b>.</li><li>• Press on the control to validate.</li></ul>	
	<ul style="list-style-type: none"><li>• Rotate the control to select the menu <b>B</b>.</li><li>• Press on the control to validate.</li></ul> <p> <b>The last guidance address is displayed.</b></p>	
	<ul style="list-style-type: none"><li>• Rotate the control to select the field <b>C</b>.</li><li>• Press on the control to validate.</li><li>• Rotate the control or use the alphanumeric keypad to select the letters composing the name of the town.</li><li>• Press on the control to validate each letter.</li></ul>	
<p><b>After the first letter has been validated, only those letters that can complete an existing name in the database will be displayed.</b></p> <p><b>At the time of the entry you can select the following functions:</b></p> <ul style="list-style-type: none"><li>- <b>D</b> to see list of the towns commencing with or comprising the same letters (when the list contains only 6 names of towns, these display automatically),</li><li>- <b>E</b> to display the address corresponding to the vehicle's current position,</li><li>- <b>F</b> to select a Centre of interest (POI): the address displays automatically,</li><li>- <b>G</b> to store the displayed address in a directory file.</li></ul> <ul style="list-style-type: none"><li>• Rotate the control to select the option desired.</li><li>• Press on the control to validate.</li></ul>		



To go faster, enter the postcode instead of the name of the town.



# NAVIGATION/GUIDANCE

## ENTER AN ADDRESS (2/2)

- In the same way enter the name of the road without indicating the type of road (street, avenue, etc.).

- Rotate the control to select the field H.
- Press on the control to validate.
- Rotate the control or use the alphanumeric keypad to select the figures that make up the street number.
- Press on the control to validate each figure.



The first is the last street no. figure displayed.



When the street nos. are not recorded in the database, your NaviDrive automatically offers you a list of the streets intersecting with that named.  
You also have access to the list of intersections by selecting the field I

When the complete address has been entered:

- Rotate the control to select the field OK.
- Press on the control to validate.



- Rotate the control to define the calculation criterion you prefer:
  - Quickest route
  - shortest route
  - route offering the optimum distance/time relationship.

**Note:** If you modify one of the criteria during a guidance, the itinerary can be altered.

- You can also select routes favouring:
  - toll roads (motorways, bridges)
  - traffic information with the possibility of diverting the route according to the messages (See "Traffic information") (advised).
- Press on the control to validate.
- Start the guidance by selecting OK and press on the control to validate.

**Note:** After starting a guidance, a display informs you on the precautions in force concerning the use of navigation.

- If you accept its content, press on the control

**Respect the road regulations that are in force.**








If you only indicate a town name, you will be automatically guided towards the town centre.


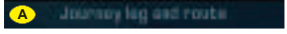



# NAVIGATION/GUIDANCE

## ADDING A STAGE

### HOW TO ADD A STAGE TO AN ITINERARY ?

	<p>During guidance, in the menu Navigation/Guidance:</p> <ul style="list-style-type: none"><li>• Rotate the control to select the menu <b>A</b>.</li><li>• Press on the control to validate.</li></ul>	
	<ul style="list-style-type: none"><li>• Rotate the control to select the menu <b>B</b>.</li><li>• Press on the control to validate.</li></ul>	
	<ul style="list-style-type: none"><li>• Enter the address of the additional stage. See "How to enter an address?".</li><li>• Press on the control to validate.</li></ul> <div data-bbox="215 502 1157 556"><p> <b>The stage has to be either reached or deleted in order for you to be able to continue beyond this stage.</b></p></div>	








### HOW TO CHANGE THE SEQUENCE OF STAGES ?

	<p>During guidance, in the menu Navigation/Guidance:</p> <ul style="list-style-type: none"><li>• Rotate the control to select the menu <b>A</b>.</li><li>• Press on the control to validate.</li></ul>	
	<ul style="list-style-type: none"><li>• Rotate the control to select the menu <b>C</b>.</li><li>• Press on the control to validate.</li></ul>	
	<ul style="list-style-type: none"><li>• Rotate the control to select the stage to be moved.</li><li>• Press on the control to validate.</li> <li>• Rotate the control to select:<ul style="list-style-type: none"><li>- <b>D</b> to move the selected stage higher in the list.</li><li>- <b>E</b> to move the selected stage lower in the list</li></ul></li></ul> <div data-bbox="215 982 1157 1037"><p> <b>The itinerary is recalculated automatically according to the sequence of stages.</b></p></div>	

# NAVIGATION/GUIDANCE

## USING THE DIRECTORY

### HOW TO START A GUIDANCE FROM AN ARCHIVED ADDRESS ?

	<p>In the Navigation/Guidance menu:</p> <ul style="list-style-type: none"> <li>• Rotate the control to select the menu <b>A</b>.</li> <li>• Press on the control to validate.</li> </ul>	
	<ul style="list-style-type: none"> <li>• Rotate the control to select the menu <b>B</b>.</li> <li>• Press on the control to validate.</li> </ul>	
	<p>When the address stored in the file is displayed:</p> <ul style="list-style-type: none"> <li>• Rotate the control to select a file.</li> <li>• Press on the control to validate.</li> </ul>	
	<ul style="list-style-type: none"> <li>• Rotate the control to select OK.</li> <li>• Press on the control to validate.</li> </ul> <ul style="list-style-type: none"> <li>• Rotate the control to define the calculation criterion you prefer: <ul style="list-style-type: none"> <li>- Quickest route</li> <li>- shortest route</li> <li>- route offering the optimum distance/time relationship.</li> </ul> </li> </ul> <p><b>Note:</b> If you modify one of the criteria during a guidance, the itinerery can be altered. You can also select routes favouring:</p> <ul style="list-style-type: none"> <li>- toll roads (motorways, bridges)</li> <li>- traffic information so that you have the possibility to divert the route according to the messages (See "Traffic information") (advised).</li> </ul> <ul style="list-style-type: none"> <li>• Press on the control to validate.</li> <li>• Start the guidance by selecting OK and press on the control to validate.</li> </ul> <p><b>Note:</b> After starting a guidance, a display informs you on the precautions in force concerning the use of navigation.</p> <ul style="list-style-type: none"> <li>• If you accept its content, press on the control.</li> </ul> <p><b>Respect the road regulations that are in force.</b></p>	 














**Remember to archive your address in a file.**

# NAVIGATION/GUIDANCE

## START GUIDANCE TO A CENTRE OF INTEREST (POI)

### HOW TO START A GUIDANCE TO A CENTRE OF INTEREST ? (LIST PAGE 21)

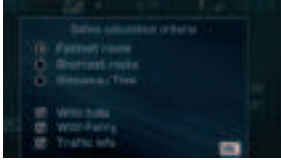	<p>In the Navigation/Guidance menu:</p> <ul style="list-style-type: none"> <li>• Rotate the control to select the menu <b>A</b>.</li> <li>• Press on the control to validate.</li> </ul>	
	<ul style="list-style-type: none"> <li>• Rotate the control to select the menu <b>B</b>.</li> <li>• Press on the control to validate.</li> </ul> <div style="border: 1px solid black; background-color: #ffffcc; padding: 5px; margin-top: 10px;">  <b>The last guidance address is displayed.</b> </div>	
	<ul style="list-style-type: none"> <li>• Rotate the control to select <b>C</b>.</li> <li>• Press on the control to validate.</li> </ul>	
	<ul style="list-style-type: none"> <li>• Rotate the control to select the location of the Centre of interest: <ul style="list-style-type: none"> <li>- around the final destination of the itinerary,</li> <li>- anywhere on the route,</li> <li>- around the current location of the vehicle,</li> <li>- you can also do a name search.</li> </ul> </li> <li>• Press on the control to validate.</li> </ul> <ul style="list-style-type: none"> <li>• Rotate the control to select the category of Centre of interest that you require.</li> <li>• Press on the control to validate.</li> </ul> <div style="border: 1px solid black; background-color: #ffffcc; padding: 5px; margin-top: 10px;">  When you have finished defining the category of centre of interest required, a list of corresponding locations comes up. </div>	
	<ul style="list-style-type: none"> <li>• Rotate the control to select the location of the Centre of interest.</li> <li>• Press on the control to validate.</li> </ul> <p>The address of the Centre of interest displays automatically.</p>	
	<ul style="list-style-type: none"> <li>• Rotate the control to define the calculation criterion you prefer (see "How to enter an address ?").</li> <li>• Press on the control to validate.</li> <li>• Start the guidance by selecting OK</li> </ul> <p><b>Note:</b> After starting a guidance, a display informs you on the precautions in force concerning the use of navigation.</p> <ul style="list-style-type: none"> <li>• If you accept its contents, press on the control.</li> </ul> <p><b>Respect the road regulations that are in force.</b></p>	

# MAP GENERAL

## WHAT IS THE MAP MENU ?

The map menu lets you set parameters for the display and to access the information available on the map.

The mapping data is stored directly on the hard disc of your NaviDrive.

## MODIFY THE ORIENTATION OF THE MAP

You can define 3 orientations for the map of your NaviDrive.



### • Viewing in 3D

Your NaviDrive gives you a view of the map in 3D.

### • Vehicle orientation

The time turns with the vehicle. The arrow showing the orientation of your vehicle remains fixed.

### • North orientation

The map is fixed and oriented to North. The arrow showing the orientation of your vehicle moves on the map.

 
## DISPLAY OF THE MAP

Your NaviDrive allows you to select 2 types of displays for the map.



### • Full screen mode

The map appears full screen on the display.




### • Window mode

The map is shown on the right of the screen.

## HOW TO MOVE THE POINTER ON THE MAP ?

 You can move on a map in order to view the centres of interest, observe an area, etc



1. Move to the North.
2. Move to the West.
3. Move to the South.
4. Move to the East.

**Note:** Keep the button pressed to accelerate the movement on the map.



## HOW TO MODIFY THE SCALE OF THE MAP ?

**When the map is displayed, rotate the control to modify the scale.**

The scale of the map can be varied between 50 m/cm and 200 km/cm.

When the scale is less than or equal to 10 km, the map goes automatically to North orientation.






Regular updates of the Map database are available. Contact a CITROËN dealer.


# MAP

## ACCESSING THE MENU - STRUCTURE

### HOW TO ACCESS THE MAP MENU ?

	<ul style="list-style-type: none"><li>• Press button MENU.</li></ul>	
	<ul style="list-style-type: none"><li>• Rotate the control to select the Map icon A.</li><li>• Press on the control to validate.</li></ul>	

### WHAT ARE THE FUNCTIONS OF THE MAP MENU ?

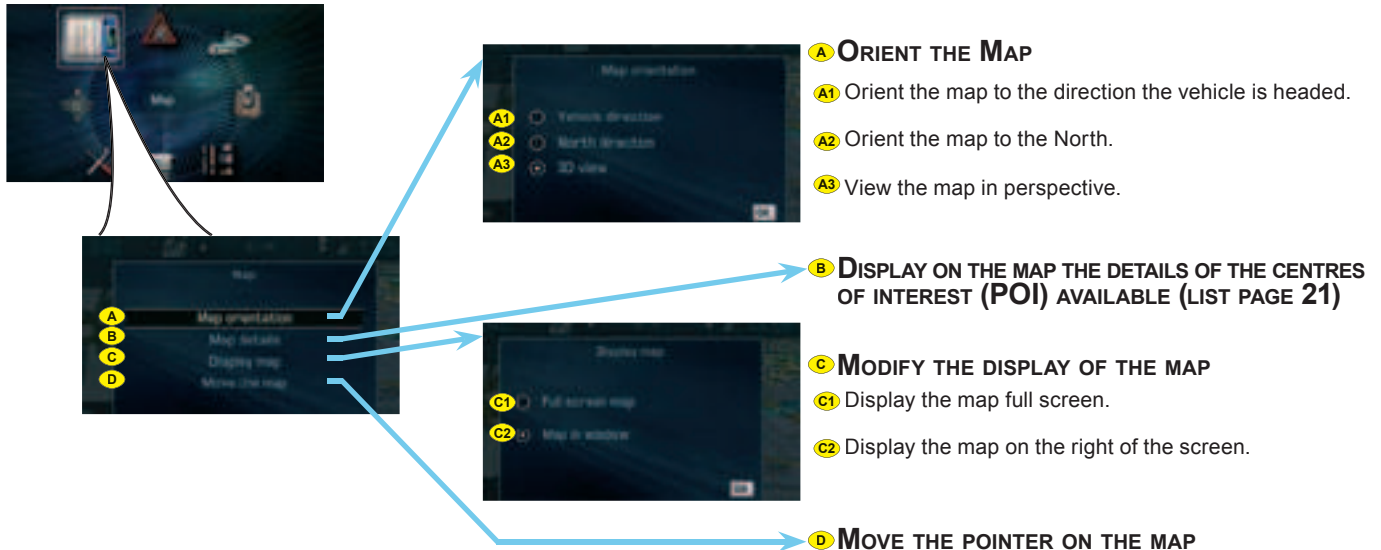

**A ORIENT THE MAP**

- A1** Orient the map to the direction the vehicle is headed.
- A2** Orient the map to the North.
- A3** View the map in perspective.

**B DISPLAY ON THE MAP THE DETAILS OF THE CENTRES OF INTEREST (POI) AVAILABLE (LIST PAGE 21)**

**C MODIFY THE DISPLAY OF THE MAP**

- C1** Display the map full screen.
- C2** Display the map on the right of the screen.

**D MOVE THE POINTER ON THE MAP**

# MAP

## SELECTING A CENTRE OF INTEREST (POI)

### HOW TO SELECT AND ADD A CENTRE OF INTEREST ON THE MAP?

II

In the Map menu:

- Rotate the control to select the menu **B**.
- Press on the control to validate.



A pointer appears on the map.

- Move it to a centre of interest symbol. See “How to move the pointer on the Map ?”
- Press on the control to access the contextual menu for the centre of interest.
- Rotate the control to select the function desired.
- Press on the control to validate.

You can select the following functions:



- **C: obtain information on the category of centre of interest.**
- **D: define the Centre of interest as a new destination of an itinerary.**
- **E: define the centre of interest as a stage of an itinerary.**
- **F: record the address of the centre of interest in a directory file.**
- **G: return to guidance mode.**

**B**

Move the map

**C**

Info on location

**D**

Select as destination

**E**

Select as stage

**F**

Save the place








**G**

Back map mode




 







# MAP
 
## LIST OF CENTRES OF INTEREST (POI)









### PUBLIC AUTHORITIES AND SECURITY

-   City hall, City centre
-   School, university, college
-  Hospital
-  Police
-  Law Courts

### HOTELS, RESTAURANTS, BUSINESS AND RETAIL PARKS

-   Selected hotels
-   Selected restaurants
-   Michelin guides
-  Vineyards
-   Supermakets, Shopping malls
-   Retail parks, trading estates













 




### CULTURE, TOURISM, ENTERTAINMENT

-  Culture, museums and theatres
-    Historic monuments, tourist attractions
-   Casinos and night life
-  Cinemas
-  Exhibitions

### SPORTS AND OPEN AIR CENTRES

-   Sports centres and complexes
-  Golf courses
-   Skating, Bowling
-  Winter sports
-  Parks, gardens
-  Public attractions

### TRANSPORT AND MOTORING

-  Activity centre
-  Customs
-   Airports, flying clubs
-   Rail stations, bus stations
-  Car hire
-     Car parks, rest areas
-   Ferry terminals, port areas
-   Service stations, garages
-  Radar zones/High-accident zones (depending on the country of marketing and availability of the service)
-  CITROËN Dealer or Repairer



# TRAFFIC INFORMATION

## GENERAL

### WHAT IS THE “TMC” TRAFFIC INFORMATION FUNCTION ?

TMC traffic information consists of messages transmitted by FM radio stations.

As opposed to the road information flashes broadcast by radio (TA), TMC (Traffic Message Channel) messages are coded and silent. You can filter the types of information that interest you.

Your NaviDrive issues messages written in the selected language (including in a foreign country where your language is not that of the local radio stations).

The messages contain:

- The date and the time of the broadcast
- the nature of the incident
- the location
- the name
- the direction of traffic on the artery concerned.

A message is sent when an event occurs. You are again informed of the event when you are coming into proximity. The messages are classed according to the distance of the event from your vehicle.

The list of messages is updated every 15 minutes approximately.

### LIST OF TMC SYMBOLS

Traffic information is shown on the map by means of the symbols opposite.

**Note:** These symbols may be accompanied by an arrow indicating in which traffic direction they are situated.




















#### Quality of the TMC information

Depending on the station selected, the traffic information may be more or less complete and precise, or cover a larger or smaller area. Each radio station is individually responsible for the quality of the information that it broadcasts.

### AVAILABILITY OF THE TMC INFORMATION

When the FM station selected is able to broadcast TMC information, the multifunction screen displays the symbol “TMC”.

When the FM station selected is unable to broadcast TMC information, the “TMC” symbol appears shaded.

	Road conditions and dangers
	Accident
	Vehicle overturned
	Vehicle broken down
	Slippery road
	Road works
	Loose chippings on the road
	Temporary traffic lights
	Road closed
	Two-way traffic
	Exit closed
	Access closed
	Bottleneck
	Carriageway narrows
	Vehicle size restrictions
	Parking
	Information
	Weather
	Rainstorm
	Snowstorm
	Strong winds






The availability of traffic information depends on the country and on the region where you are driving.  
The TMC traffic information can be read by the voice synthesiser.


# TRAFFIC INFORMATION

## ACCESSING THE MENU - STRUCTURE

### HOW TO ACCESS THE TRAFFIC INFORMATION MENU ?

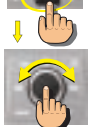	<ul style="list-style-type: none"> <li>• Press button MENU.</li> </ul>	
	<ul style="list-style-type: none"> <li>• Rotate the control to select the Traffic Information icon A.</li> <li>• Press on the control to validate.</li> </ul>	

### WHAT ARE THE FUNCTIONS OF THE TRAFFIC INFORMATION MENU ?



**A ACCESSING THE LIST OF MESSAGES**

**B FILTERING TMC INFORMATION**

- B1** Select the information relating to a geographical area.
- B2** Select the information relating to traffic.
- B3** Select the information relating to built-up areas.

**C SETTING PARAMETERS FOR MESSAGE ANNOUNCEMENTS**

- C1** Activate or deactivate the reading of new messages by the NaviDrive voice.
- C2** Activate or deactivate the display of new TMC messages (do not select the tab for the regions with dense traffic).


**D CHOOSING A TMC STATION**

- D1** Access the list of TMC stations.
- D2** Select an automatic TMC search.
- D3** Select a manual TMC search.

# TRAFFIC INFORMATION

## FUNCTIONS IN DETAIL

### CONSULTING OF MESSAGES

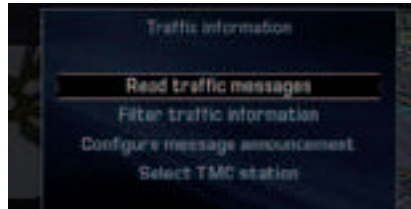

This menu gives you access to the **list of messages**:

- Certain of these messages may offer you a diversion from your route, depending on the TMC information received (it is necessary for you to have selected the “**traffic info**” guidance option). If you accept one of these messages, then the NaviDrive offers you a diversion and recalculates your itinerary. You can then choose whether or not to accept the offer.
- A message is sent to you when the decision is imminent. You are informed again as you approach the junction.

### FILTERING TMC INFORMATION



The filters enable you to select the types of information which you wish to receive.


This menu gives you access:

- To the **geographical filter**: information concerning incidents situated around your vehicle, around a given location and/or on an itinerary (radius of 3 to 200 km),
- To **road information**: information concerning road incidents such as traffic, road closures, height/width limitations, state of the roadway or weather conditions (depending on the information available).
- To **urban traffic information**: information concerning the town where you are, such as parking, public transport and demonstrations (depending on the information available).

The filters can be cumulative.

If no filter is selected, all the TMC information will be displayed.

### HOW TO DIVERT A ROUTE AS A RESULT OF TRAFFIC INFORMATION ?

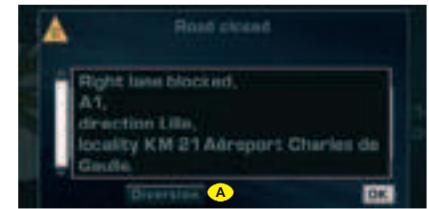

Depending on the filters that you choose for Traffic Information, your NaviDrive is able to allow you to divert your journey.

If a significant incident arises on your route, a window opens and informs you of the problem.

To account for this incident in your journey and to modify your itinerary:

- Rotate the control to select **A**.
- Press on the control to validate.

Your NaviDrive offers you a new itinerary.



**To make the best use of the filters in your NaviDrive, we advise you to select a filter around your vehicle of:**

- **5 km or 10** for a region with dense traffic,
- **20 km** for a region with normal traffic,
- **100 km** for long, motorway-type journeys.



**You can consult a message by selecting on the map (see “Move the pointer on the map”).**

# AUDIO

## GENERAL

### WHAT DOES THE AUDIO SYSTEM COM- PRISE ?

Your audio system uses 5 sources:

- Radio source,
- CD source,
- Jukebox source,
- Audio/video auxiliary input,
- CD changer (according to equipment)

### 1- RADIO SOURCE

The radio of your NaviDrive system allows you:

- to listen to radio stations on waveband AM or FM,
- to search for the strongest reception possible thanks to the RDS system,
- to obtain traffic information (TA) over a current programme
- to select radio stations according to your choice of programme type (PTY).

### 2- THE CD/CD MP3 SOURCE

The CD player of your NaviDrive allows you:

- to playback CDs/CD MP3,
- to play back the start of each album, thanks to IntroscaN,
- to display information about the CD (artist, name of the album, etc.) provided the CD is compatible with CD Textformat.

### 3- JUKEBOX SOURCE

Jukebox source lets you copy and store around 140 CDs or 14 CD MP3 (depending on the compression rate).

10 Goes on the hard disc of your NaviDrive are reserved for Jukebox source.

When you copy a CD MP3, Jukebox source deletes all the levels of covers, retaining only the 2 latest.

Copying from Jukebox source to a CD is not possible.


#### • Playlist

Playlist is a function available in Jukebox source. It lets you read a selection of titles recorded in different albums or directories of Jukebox source.

Jukebox source can contain a maximum of 4 Playlists.

### 4- THE AUDIO/VIDEO AUXILIARY INPUT

The auxiliary input allows you to connect a nomad audio/video device directly to your NaviDrive. You connect your nomad audio device using the red connector **A** and the white connector **B**. You connect your nomad video device using the red connector **A**, the white connector **B** and the yellow connector **C** (See video chapter for functioning)

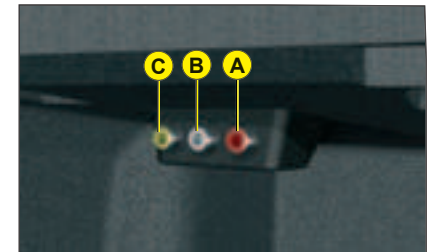

### 5- THE CD CHANGER SOURCE (ACCORDING TO EQUIPMENT)

See "CD changer source".

IV



It is necessary to activate the audio/video auxiliary input before using this. See "Configuration".

# AUDIO GENERAL

## HOW TO SELECT AN AUDIO SOURCE ?




Press button SOURCE.

## HOW TO ADJUST THE SOUND VOLUME ?



or

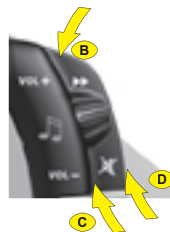

Rotate the control or use the buttons at the steering **B** and **C** to increase or decrease the volume.

### How to stop the sound momentarily ?

Press on the Mute button **D**.

The sound of the Audio source currently being listened to is cut. The guidance instructions remain activated. To restore sound, press on one of the buttons on your NaviDrive, or on one of the controls on the steering wheel.

## HOW TO ADJUST THE SOUND ?



Press on button **D** to select:

- the pre-defined musical ambiances,
- bass,
- treble,
- loudness,
- front/rear and left/right balance
- automatic correction of the volume as a function of vehicle speed.

Rotate the control to modify the value of the parameter displayed.

The value is automatically taken into account without the need for validation.



Selection of a pre-defined musical ambiance automatically adjusts bass and treble. Select the musical ambiance “None” to personalise your adjustment of bass and treble.




Adjustments of loudness, bass and treble (when they are available) are specific to each source.

The sound volume is automatically corrected as a function of vehicle speed, provided the facility has been activated.

# AUDIO

## ACCESSING THE MENU



### HOW TO ACCESS THE AUDIO MENU ?

	<ul style="list-style-type: none"><li>• Press button MENU.</li></ul>	
	<ul style="list-style-type: none"><li>• Rotate the control to select the Audio icon <b>A</b>.</li><li>• Press on the control to validate.</li></ul>	

IV

### HOW TO ACCESS THE AUDIO MENU SHORTCUTS ?

When one of the Audio functions is displayed (successive presses on the MODE button), the shortcuts for the current source give you access to the principal functions (e.g. the Radio functions).

	<ul style="list-style-type: none"><li>• Press on the control. A window opens.</li></ul>	
	<ul style="list-style-type: none"><li>• Rotate the control to select your chosen option.</li><li>• Press on the control to validate.</li></ul>	

The shortcut options available allow you:

- **B** Manually enter the frequency of a station.
- **C** To activate or deactivate RDS search.
- **D** To activate or deactivate regional search mode.
- **E** To activate or deactivate display of the text information broadcast by the station being listened to.



Each Audio source has a shortcut.

# AUDIO

## STRUCTURE OF THE MENU (1/2)

### WHAT ARE THE FUNCTIONS OF THE AUDIO MENU ?

IV



#### A SETTING PARAMETERS FOR RADIO SOURCE

- A1 Manually enter the frequency of a station.
- A2 Activate or deactivate RDS search.
- A3 Activate or deactivate regional search mode.
- A4 To activate or deactivate display of the text information broadcast by the station being listened to (name of singer, title of song, etc.).

#### B SETTING PARAMETERS FOR CD AND JUKEBOX SOURCES


- B1 Activate or deactivate playback of the start of each track of the CD/CD MP3.
- B2 Activate or deactivate playback of all the tracks of the CD or of all the directory of the Jukebox.
- B3 Activate or deactivate repetition of the current album or CD-cover.
- B4 Activate or deactivate display of the information on the CD (Name of the album, artist, etc.).

#### C COPY OR STOP COPYING A CD OR A CD MP3

# AUDIO

## STRUCTURE OF THE MENU (2/2)

### WHAT ARE THE FUNCTIONS OF THE AUDIO MENU ? (CONTINUED)

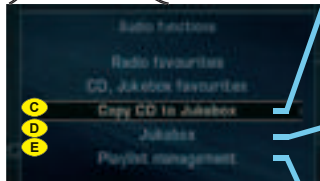


#### **C** COPYING A CD ONTO JUKEBOX SOURCE

- C1** Copy the whole of a CD.
- C2** Select several tracks and/or several albums to be copied.
- C3** Copy the current album (CD MP3 only).
- C4** Copy the current track.



#### **D** MANAGING AND SETTING PARAMETERS FOR JUKEBOX SOURCE

- D1** Move, delete or rename data stored on the hard disc or from Jukebox source (Albums, titles).
- D2** Define a compression rate in MP3.
- D3** Re-initialise Jukebox source.

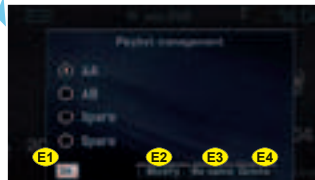

#### **E** MANAGING THE PLAYLIST

- E1** Listen to the Playlist selected.
- E2** Select titles or albums in order to modify or create a Playlist.
- E3** Rename a Playlist.
- E4** Delete a Playlist.



## HOW TO SELECT A WAVE BAND ?


IV



Press on button **BAND** to change successively through the memory banks:


- **FM1, FM2 and AM**: 2 FM wavebands and 1 AM wavebands for pre-setting the radio stations.
- **FMast** : the FM waveband dedicated to the stations memorised automatically (see Autostore function).

## HOW TO SEARCH FOR A STATION AUTOMATICALLY ?

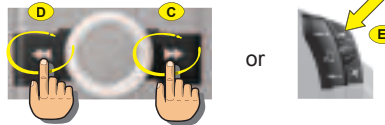

- Press on button **C** or on the control on the steering wheel **E** to increase the frequency.
- Press on button **D** to decrease the displayed frequency.

## HOW TO RECALL PRE-SET STATIONS ?

 


Press on one of the buttons **1** to **6** on the keypad and rotate the control **G** at the steering wheel.

For RDS stations, recall of a station launches a search for the frequency corresponding to the region you are in.

The frequency of the RDS station appears a few seconds before the station name.

## HOW TO SEARCH FOR A STATION MANUALLY ?

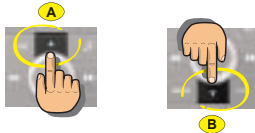

- Press on button **A** to increase the displayed frequency.
- Press on button **B** to decrease the displayed frequency.

## HOW TO PRE-SET A STATION ?



Maintain pressure on one of the buttons **1** to **6** on the keypad for more than 2 seconds.

**Note:** A window opens on the screen. The station is memorised as it appears on the attributed memory number.

## HOW TO BRING UP “RADIO TEXT” ?




Press on the control to view briefly the text information relating to the programme being listened to (name of artist, title, etc.).



Keep the buttons **A**, **B**, **C**, **D**, or **E** pressed to obtain a continuous scrolling of the frequency. During an automatic search, if your NaviDrive does not manage to capture a station whose frequency you know, do a manual search.


## HOW TO SEARCH FOR STATION IN A SORTED LIST ?

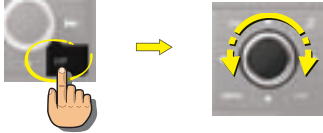

A list of the stations available locally is updated automatically every 10 minutes. The stations are graded alphabetically and then by frequency in ascending order.

- Press on button LIST to access the list of stations available.
- Rotate the control to choose a station.
- Press on the control to validate.

## HOW TO MEMORISE TRANSMITTERS AUTOMATICALLY ?

 

In FM, keep button BAND pressed for more than 2 seconds to start the automatic memorisation function (Autostore).

The 6 strongest transmitters are memorised in the FMast memory bank. They replace the 6 previously memorised.

### Note:

If you have activated the “TA” function (traffic information), the transmitters offering this service are memorised first.



Your NaviDrive may be subject to phenomena which you do not encounter with the installation you have at home.

Reception in AM as in FM is affected by various kinds of interference that have nothing to do with the quality of your equipment but are due to the nature of the signals and the way they are sent out.

In AM, you may notice disturbance when passing under high tension cables or bridges, or in tunnels.

In FM, distance from the transmitter, deflecting of the signal by obstacles (mountains, hills, high buildings, etc.), or blind spots (no coverage by transmitters) may cause interference with reception.



Keep button LIST pressed to update the list of stations available.

# RADIO SOURCE

## THE RDS SYSTEM

### THE RDS FUNCTION ON FM WAVEBAND

IV

The RDS (Radio Data System) function allows you:

- to listen to the same station even though you are travelling through different regions (on condition that the transmitters for this station cover the area being travelled through),
- to listen to traffic announcement flashes on a temporary basis
- to have the station name displayed, etc.



**The majority of FM stations use the RDS system.**

**These stations process non-audio data in addition to their programmes.**

**The data broadcast in this way gives you access to a variety of functions that are described in this chapter, notably the display of the station name, temporary traffic information flashes and automatic station search.**

**It allows to listen to the same station thanks to the frequency search. But RDS frequency search is not guaranteed over the whole country. The radio stations cannot cover the entire territory, which explains the loss of reception of the station during a journey.**

### REGIONAL SEARCH MODE

Certain stations are organised in a network.

In the various regions, they transmit programmes that are sometimes different, sometimes common.

You can do a search:

- On a regional station only
- On the entire network, with the possibility of hearing a different programme.



- **When the function is activated: your NaviDrive does not change from one regional station to another.**
- **When the function is deactivated: your NaviDrive selects the best frequency from among the regional stations.**

### RDS STATION SEARCH

Your NaviDrive automatically checks and selects the best frequency for the radio station captured (provided the station transmits on more than one frequency).

The frequency of a radio station extends to around 50 km. Loss of reception during a journey is explained by the change from one frequency to another.

If the station you have selected does not broadcast on different frequencies in the areas in which you are travelling, it is possible to deactivate the automatic RDS transmission scanning function.



**The display will indicate:**

- **RDS while the function is activated and available.**
- **RDS shaded while the function is activated but not available for the station being listened to.**

# RADIO SOURCE

## TRAFFIC ANNOUNCEMENTS (TA)

### THE TRAFFIC ANNOUNCEMENTS (TA) FUNCTION

The "TA" function lets you switch automatically on a temporary basis to an FM station broadcasting road information.

The radio station, or the audio source being listened to at that moment, is paused. Once the traffic information is finished, the system switches back to the radio station or audio source initially being listened to.



#### The display will indicate:

- TA provided the station is compatible.
- TA shaded if the station is not compatible.

### CONDITIONS FOR RECEIVING TRAFFIC ANNOUNCEMENTS

- You have to be in FM.
- The station you are tuned to must confirm through the RDS system that it broadcasts road information.
- Stations organised in a network (EON) have regional transmitters sending their own programmes. While listening to one of these stations you can switch to any station on the network that is broadcasting traffic information messages.

### HOW TO ACTIVATE THE "TA" FUNCTION ?



Press on the TA/PTY button to activate automatic broadcasting of traffic announcements.



If you activate the "TA" function, the transmitters compatible with broadcasting of these messages will be captured as priority during an automatic search or pre-setting of stations.

### HOW TO STOP LISTENING TO A "TA" MESSAGE ?



Press on the TA/PTY button to stop listening to a message being broadcast.




In this case, the "TA" function remains activated.

### HOW TO ADJUST THE VOLUME FOR TRAFFIC ANNOUNCEMENTS ?



or

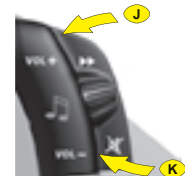

During broadcasting of traffic announcements, the sound volume can be adjusted independently of the general radio volume.

Rotate the control wheel J or press on the controls at the steering wheel J and K to increase or decrease the volume.



The adjustment is automatically memorised.

# RADIO SOURCE


## PROGRAMME TYPES (PTY)

### THE PROGRAMME TYPE MODE “PTY”

Certain stations allow you to choose to listen to a particular type of programme selected from the available list, for example as below:

- Information.
- Current affairs.
- Info-Services.
- Sport.
- Education.
- Fiction.
- Culture.
- Sciences.
- Entertainment.
- Pop music.
- Rock music.
- Folk music.
- Light classical.
- Classical music.
- Other music.
- Weather.
- Economy.
- Children.
- Social affairs.
- Religion.
- Line open.
- Travel.
- Leisure.
- Jazz.
- Country.
- Folk singing.
- Golden oldies.
- Traditional.
- Documentary.

### HOW TO SELECT A PROGRAMME TYPE ?

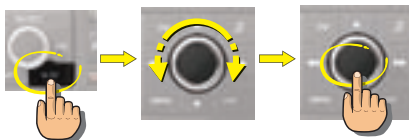

- Press on the **TA/PTY** button for more than 2 seconds to display the list of programme types.
- Rotate the control to choose a programme type.
- Press on the control to validate the programme type chosen.

### HOW TO QUIT PTY MODE ?



Press on the **TA/PTY** button for more than 2 seconds.



**Your NaviDrive launches a station search. It will tune to the first transmitter broadcasting this type of programme. If it does not find one, it will return to the original station and quit PTY mode.**

## SAFETY PRECAUTIONS

Do not operate the CD player if the temperature in the cabin is higher than +60°C or lower than -10 °C.

Some CDs are badly affected by very strong heat and may damage your CD player.

In excessive temperature, an automatic safety mechanism prevents the CD from operating until the temperature becomes more acceptable.

## HANDLING OF CDs

- Do not drop them.
- Store the CDs so that they are kept of dust. Avoid touching the disc surface as any scratches may adversely affect the sound quality.
- Do not attach any stickers to the discs.
- Do not write on them.
- Do not use damaged or deformed discs.
- Do not expose them to heat or direct sunlight.



If the surface of the compact disc is dirty, it can be wiped with a soft, clean cloth. Always wipe from the centre of the disc outwards.

## CD MP3

Format MP3 (MPEG 1,2 & 2,5 Audio Layer 3) is a compression norm for audio, allowing you to record 10 times as many musical files on one CD.

Your NaviDrive only reads files with the extension ".mp3". The other types of files (.wav, .mpg4, .ogg, midi, etc.) cannot be read.

When you insert a CD MP3, the radio searches all the musical tracks. Playback may require some tens of seconds before starting.

Playback of the CD MP3 is optimised if the cover level is limited to 2.

## Burning format

Some cut CDs cannot be read by your equipment (quality, speed of recording, etc.).

When you burn a CD-R or CD-RW, select the burning standard ISO 9660 level 1,2 or Joliet. Playback of other formats may not occur correctly. Use the Joliet standard to burn multi-session CDs.

On a given CD, always use the same burning standard.

To obtain the best possible acoustic quality, select the lowest burning speed.

Transmission speeds of 8 to 320 kbits/s and bands of 22,05 to 44,1 kHz are accommodated.



After several months of use, it may be necessary to clean the lens of the CD player (with a cleaning CD) if the playback starts to become intermittent.



Your Audio equipment may enable you to listen to musical works. Musical work is protected by law. Non-respect of the law can lead to prosecutions.

## HOW TO EJECT A CD/DVD MP3 ?



Press button **A**.  
Your NaviDrive goes automatically to radio source.  
If the CD is not removed within 10 to 15 seconds, it is automatically taken back into the slot but without being played back.

## HOW TO SELECT A TRACK ?



- press button **B** to return to the start of the current track. A second press takes you back to the previous track.
- Press on button **C** or on the control at the steering wheel **D** to play the next track.

## HOW TO PLAYBACK IN ACCELERATED SOUND



When you are listening to an audio CD:

- Keep button **B** pressed for rapid reverse with accelerated sound.
- Keep pressing button **C**, or the control on the steering wheel **D**, to listen in fast forward.

Release to resume normal playback of the disc.









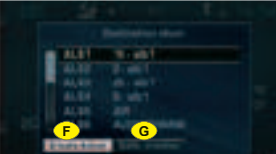


**Fast forward and rewind are not possible with a CD MP3.**

# JUKEBOX SOURCE

## COPYING A CD/CD MP3 ONTO THE HARD DISC (1/2)

### HOW TO COPY A CD ONTO JUKEBOX SOURCE ?

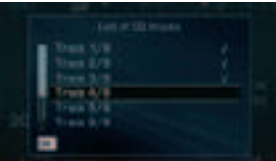	<ul style="list-style-type: none"><li>• Insert a CD/CD MP3 into the reader of your NaviDrive.</li></ul>	
	<p>In the Audio menu:</p> <ul style="list-style-type: none"><li>• Rotate the control to select the menu <b>A</b>.</li><li>• Press on the control to validate.</li></ul> <div data-bbox="217 333 1169 405" style="border: 1px solid black; background-color: #ffffcc; padding: 5px;"> <b>Once the CD is inserted, you can press directly on the control to access the contextual menu to copy the CD.</b></div> <p>If you wish to copy:</p> <ul style="list-style-type: none"><li>• the whole of the CD Rotate the control to select <b>B</b></li><li>• several tracks, rotate the control to select <b>C</b></li><li>• the current album (CD MP3 only), rotate the control to select <b>D</b>.</li><li>• the track being listened to, rotate the control to select <b>E</b></li></ul> <ul style="list-style-type: none"><li>• Press on the control to validate.</li></ul>	
 	<p>If you select option <b>C</b>:</p> <ul style="list-style-type: none"><li>• Rotate the control to select the context containing the list of tracks on the CD.</li><li>• Press on the control to validate.</li></ul> <ul style="list-style-type: none"><li>• Rotate the control to select a track.</li><li>• Press on the control to select the track.</li></ul> <p>Once all the desired tracks have been selected, press on button ESC to exit from the context.</p> <ul style="list-style-type: none"><li>• Rotate the control to select OK.</li><li>• Press on the control to validate.</li></ul>	 
	<p>Jukebox source gives you the chance to:</p> <ul style="list-style-type: none"><li>• create a personalised album <b>F</b>,</li><li>• to create an album by default <b>G</b>.</li></ul>	



# JUKEBOX SOURCE

## COPYING A CD/CD MP3 ONTO THE HARD DISC (2/2)

IV

If you select option **E**, you have to name the album.

- Rotate the control to select the letters that make up the name of the album.
- Press on the control to validate each letter.


**i** You can select upper case, lower case or special characters by selecting the **G** option.

- Select the **H** option to correct the entry.

**i** If you copy a CD MP3 or \*2 CDs containing CD text information, the names of the albums and tracks will be retained. The names of the ID3 Tags is retained and used if a CD MP3 is copied.

Once the entry is completed, rotate the control to select OK.

- Press on the control to validate. A warning about illegal copying of music is displayed.
- Press on the control to accept.

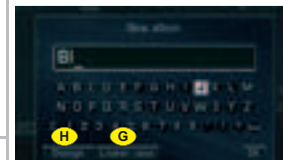


Copying is started.

**i** Jukebox source copies the CDs in 4x.

For example: a CD of 1 hour will be copied in 15 minutes.

During copying, the CD cannot be played back. Playback is again possible during compression. The other Audio sources remain available at any time.

If you copy a CD that is not in MP3 format, Jukebox source will itself compress the CD once the copying is completed. The compression rate in MP3 can be parametered (see Audio menu - Jukebox configuration). The compression time is added to the time taken by your system to copy the CD. (the copying time will be multiplied by 2).

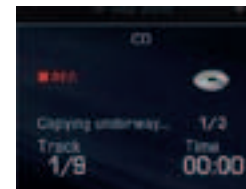

An alert tells you that the copying of the CD is finished.

If it is not a CD MP3, Jukebox source compresses the CD automatically.









An alert tells you that the compressing of the CD is finished.


**i** At any time, you can stop the copying of the CD/CD MP3 by accessing the Audio main menu. The compression cannot be stopped. Stopping copying of CDs/CD MP3 does not delete the files already transferred onto the hard disc of Jukebox source.

# JUKEBOX SOURCE
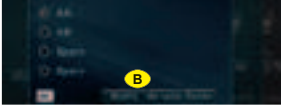
## CREATING A PLAYLIST

### HOW TO CREATE A PLAYLIST ?

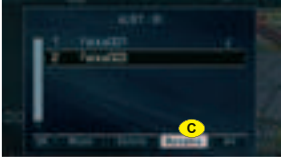	<p>In the Audio menu:</p> <ul style="list-style-type: none"><li>• Rotate the control to select the menu <b>A</b>.</li><li>• Press on the control to validate.</li></ul>	
	<ul style="list-style-type: none"><li>• Rotate the control to select an empty Playlist.</li><li>• Press on the control to validate.</li></ul> <ul style="list-style-type: none"><li>• Rotate the control to select <b>B</b>.</li><li>• Press on the control to validate.</li></ul>	
	<ul style="list-style-type: none"><li>• Rotate the control to select an album.</li><li>• Press on the control to validate.</li></ul>	
	<ul style="list-style-type: none"><li>• Rotate the control to select tracks.</li></ul> <div data-bbox="209 585 1152 645" style="border: 1px solid black; background-color: #ffffcc; padding: 5px;"><p> <b>The order of selection of the albums and tracks determines their order in the Playlist.</b></p></div> <ul style="list-style-type: none"><li>• Press on the control to enter.</li></ul> <p>Once the selection is completed:</p> <ul style="list-style-type: none"><li>• Rotate the control to select OK.</li><li>• Press on the control to validate.</li></ul> <div data-bbox="209 820 1152 880" style="border: 1px solid black; background-color: #ffffcc; padding: 5px;"><p> <b>Select the option C to rename the tracks of the album.</b></p></div> <ul style="list-style-type: none"><li>• Repeat the operation until your Playlist is completed.</li></ul>	






 **You cannot copy Playlists (files Winamp or .M3U) onto the Jukebox source. You have to create Playlists directly on the Jukebox source.**

# JUKEBOX SOURCE





## PLAYING BACK AN ALBUM / A PLAYLIST

### HOW TO PLAY BACK AN ALBUM IN JUKEBOX SOURCE ?

IV

	<ul style="list-style-type: none"><li>• Press several times on button SOURCE until you obtain Jukebox source.</li></ul> <p><b>i</b> Playback starts automatically on the last album played.</p>	
 	<p>To select another album, press on the buttons on the panel. You can also use the control on the steering wheel.</p> <p><b>i</b> To select an album in Jukebox source from a list, press on button LIST. A window opens on a list of all the albums in Jukebox source.</p>	
	<ul style="list-style-type: none"><li>• Rotate the control to select an initial track.</li><li>• Press on the control to validate.</li></ul> <p><b>i</b> Playback of the album commences automatically.</p>	


### HOW TO PLAY BACK A PLAYLIST ?

	<p>In the Audio menu:</p> <ul style="list-style-type: none"><li>• Rotate the control to select the menu A.</li><li>• Press on the control to validate.</li></ul>	
	<ul style="list-style-type: none"><li>• Rotate the control to select a Playlist.</li><li>• Press on the control to validate.</li><li>• Rotate the control to select OK.</li><li>• Press on the control to validate.</li></ul> <p><b>i</b> Playback of the Playlist commences automatically.</p>	

**i** To stop playback of a Playlist, press on the control to access the contextual menu.

# CD CHANGER SOURCE (ACCORDING TO EQUIPMENT)

## WHAT IS THE CD CHANGER ?

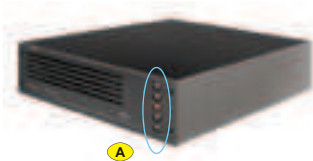

## CD CHANGER SOURCE

This device can accommodate 5 discs.

## INSERTING CDs INTO THE MAGAZINE

Insert the CDs printed surface to the left.

### Note:

- Each compartment takes one disc only.
- The CD changer will not operate if discs are inserted the wrong way up.

## REMOVING DISCS

To remove a CD, give a long press on the corresponding button **A**.

## SELECTING CD CHANGER SOURCE

Press successively on button **24**, until the desired source is obtained.

## SELECTING A CD



Hold down one of the buttons **1** to **5** on the alphanumeric keypad to choose the CD that you wish to play back.

## PLAY BACK THE NEXT/PREVIOUS CD



1. Press on button **C** or rotate the control on the steering wheel **D** upwards to listen to the next CD.
2. Press on button **B** or rotate the control on the steering wheel **D** downwards to listen to the previous CD.

**Note:** Playback of the start of the CD is automatic.

After each change of source, on return to CD changer source, playback will resume at the same point where it had been interrupted.

# TELEPHONE

## GENERAL

### WHAT IS THE TELEPHONE FUNCTION ?

V

The telephone function consists of a GSM telephone incorporated in NaviDrive.

It has a "Hands-free" function, provided by a microphone located in the front interior lamp and controls at the steering wheel for accessing the majority of operations.



**Do not allow yourself to be distracted while you are driving.**

**It is essential to comply with the national legislation in force.**

**Stop the vehicle if you wish to pursue a telephone conversation or proceed with certain actions (composing a number for example).**



**As with any mobile telephone, this telephone operates thanks to both cellular and terrestrial networks. For this reason, it cannot guarantee a connection in all cases.**

### THE MULTIFUNCTION SCREEN



Apart from during a communication, it indicates to you:

- the presence of voice messages or text messages (SMS) that have not been read,
- the communication time since the last update,
- the level of reception of the networks.

During a communication, it indicates to you:

- the time elapsed since the start of the communication,
- the number (provided the option and the service are available),
- the name of your correspondent (if this is recorded in the directory),
- the level of reception of the network.

### THE ALPHANUMERIC KEYPAD

Each press on one of the keypad buttons lets you scroll through the characters which are allocated on it.

Button	Selection
[1]	<b>1</b> or <b>space</b> with a short press in text entry (SMS)
[2]	<b>2</b> or <b>ABC</b> or <b>abc</b>
[3]	<b>3</b> or <b>DEF</b> or <b>def</b>
[4]	<b>4</b> or <b>GHI</b> or <b>ghi</b>
[5]	<b>5</b> or <b>JKL</b> or <b>jkl</b>
[6]	<b>6</b> or <b>MNO</b> or <b>mno</b>
[7]	<b>7</b> or <b>PQRS</b> or <b>pqrs</b>
[8]	<b>8</b> or <b>TUV</b> or <b>tuv</b>
[9]	<b>9</b> or <b>WXYZ</b> or <b>wxyz</b>
[0]	In text entry (SMS): <ul style="list-style-type: none"><li>• Short press: <b>Space</b> or <b>0</b></li><li>• Long press: <b>Space</b></li></ul> In dialling: <ul style="list-style-type: none"><li>• Short press: <b>0</b></li><li>• Long press: <b>+</b></li></ul>
[#]	In dialling: <ul style="list-style-type: none"><li>• Short press: <b>#</b></li></ul>
[*]	In text entry (SMS): <ul style="list-style-type: none"><li>• Short press: Deletion of <b>last character</b></li><li>• Long press: Progressive deletion of the <b>entire line</b></li></ul> In dialling: <ul style="list-style-type: none"><li>• Short press: <b>*</b></li><li>• Long press: Deletion of <b>last character</b></li></ul>

 


**You can use the keypad to do a rapid search for a name in the directory and in the SIM card.**

# TELEPHONE

## GENERAL

### HOW TO INSTALL AND REMOVE THE SIM CARD ?




Press on control **A** with a ballpoint to eject the support **B**.

Place the SIM card on the support **B**.  
Insert the support **B**.

#### Note:

 - Switch off the NaviDrive before removing the SIM card (key in position **S** (Steering lock) and display off).
- The card has to be present in order for certain functions to work properly.

### RECOMMENDATION FOR INSTALLING A TWIN SIM CARD




Depending on countries and operators, you may be able to benefit from having 2 SIM cards at a discounted rate. These 2 cards have the same call number and the same messaging. Calls arrive as priority on your principal line. If the telephone containing the principal SIM card is switched off, the calls are transferred automatically to the equipment with the second SIM card.

On first installation or for updating your directory:

- Insert the SIM card from your mobile telephone.
- Transfer the information to the directory of your NaviDrive.
- Insert the twin SIM card.

### HOW TO ENTER THE PIN CODE ?

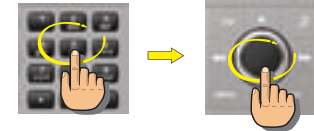

- Enter the **PIN** code on the keypad.
- Rotate the control to select OK.
- Press on the control to validate.



**Your NaviDrive can definitively memorise the PIN code of a SIM card. Once the memorisation is accepted, your PIN code will only be requested the first time you do an entry.**



**Your SIM card has to be valid.**  
**Before starting a call, make sure that you are in an area covered by your telephone operator.**



**This transfer necessitates a callback (consult your telephone service operator).**

**For the services to operate at their best, it is recommended to have the principal SIM card inserted in your NaviDrive.**

### HOW TO DEBLOCK THE TELEPHONE ?

After three entry errors, the telephone will be blocked.

Enter your PUK code to deblock the telephone.

**Note:** The PUK code is supplied by the vendor of your SIM card. The entering of the PUK code tolerates 10 errors in succession. After that, the SIM card will be definitively unusable.


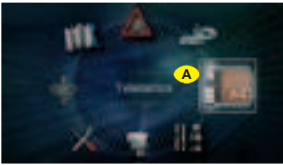

Contact your telephone operator.

# TELEPHONE

## ACCESSING THE MENU




### HOW TO ACCESS THE TELEPHONE MENU ?

V

	<ul style="list-style-type: none"><li>• Press button MENU.</li></ul>	
	<ul style="list-style-type: none"><li>• Rotate the control to select the Telematics icon <b>A</b>.</li><li>• Press on the control to validate.</li></ul>	

### HOW TO ACCESS THE TELEPHONE MENU SHORTCUTS ?

When the telephone function is displayed (in the Telephone menu giving access to the main functions for the telephone and telematic services).

	<ul style="list-style-type: none"><li>• Press on the control. A window opens.</li></ul>	
	<ul style="list-style-type: none"><li>• Rotate the control to select the option of your choice.</li><li>• Press on the control to validate.</li></ul>	

The shortcut options available allow you:

- A** to access the Calls list
- B** to compose a number
- C** to access the directory
- D** to access your voice mail (GSM operator messaging).




**In the directory, there are 2 groupings of memorised numbers accessible:**

- the numbers in the current directory of your NaviDrive,
- the numbers in the SIM card.

The numbers contained in the SIM card are preceded by a “SIM card” symbol.


# TELEPHONE MENU STRUCTURE

## WHAT ARE THE FUNCTIONS OF THE TELEMATICS MENU ?

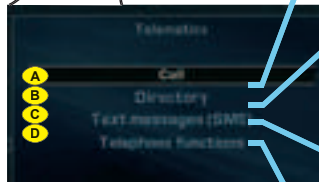

### A MAKING A TELEPHONE CALL

- A1 Consult the list of incoming, outgoing and missed calls.
- A2 Compose a telephone number on the numeric keypad.
- A3 Select a file in the directory.
- A4 Consult your voice mail.
- A5 Select one of the CITROËN network services (depending on subscription).

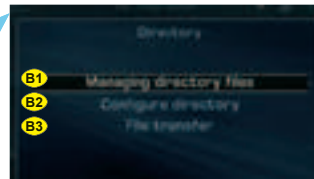


### B OPERATING THE TELEPHONE DIRECTORY

- B1 Consult, modify, create or delete a directory file.
- B2 Select or name a directory. Choose the start directory.
- B3 Send or receive one or more files by infrared or from the SIM card.



### C READING, SENDING, EDITING OR DELETING AN SMS MESSAGE

- C1 Read SMS messages received or stored.
- C2 Send a stored SMS.
- C3 Drafting an SMS.
- C4 Delete all stored SMS messages.

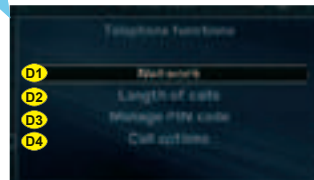

### D SETTING PARAMETERS FOR THE TELEPHONE FUNCTIONS

- D1 Configure the network search mode or consult the networks available.
- D2 Consult the length of one or all of the incoming or outgoing calls. Reset the counter to zero.
- D3 Activate, deactivate, memorise or modify the PIN code.
- D4 Configure the displaying of the number, the automatic pick up, the ring tone and the call return. Delete the log of calls.










# TELEPHONE


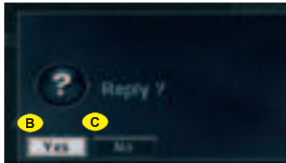




## MAKING A CALL

### HOW TO MAKE A CALL ?

V

	<ul style="list-style-type: none"><li>• Press the “Pick-up” button or press the control on the steering wheel.</li></ul>	 
	in the Telephone menu: <ul style="list-style-type: none"><li>• Rotate the control to select the menu <b>A</b>.</li><li>• Press on the control to validate.</li></ul>	
	<ul style="list-style-type: none"><li>• Compose the number of the person you wish to call on the alphanumeric keypad.</li></ul>	
	<ul style="list-style-type: none"><li>• Press the “Pick-up” button or press the control on the steering wheel.</li></ul>	
	<ul style="list-style-type: none"><li>• To end the call, press the “Hang-up” button or press the control on the steering wheel.</li></ul>	




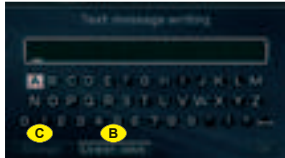



### HOW TO ACCEPT/REFUSE A CALL ?

	When you receive a call: <ul style="list-style-type: none"><li>• Press the “Pick-up” button to accept the call or press the control on the steering wheel.</li></ul>	
	or in the Telephone menu: <ul style="list-style-type: none"><li>• Rotate the control to select <b>B</b>.</li><li>• Press on the control to validate.</li></ul>	
	To refuse the call: <ul style="list-style-type: none"><li>• Press the “Hang-up” button or give a long press on the control on the steering wheel.</li></ul>	
	or <ul style="list-style-type: none"><li>• Rotate the control to select <b>C</b>.</li><li>• Press on the control to validate.</li></ul>	
		

# TELEPHONE

## DRAFTING AN SMS

### HOW TO DRAFT AN SMS ?

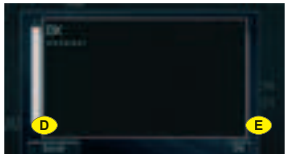	<ul style="list-style-type: none"> <li>• Rotate the control to select the menu <b>A</b>.</li> <li>• Press on the control to validate.</li> </ul> <ul style="list-style-type: none"> <li>• Rotate the control to select the letters to make up the message.</li> <li>• Press on the control to validate each letter.</li> </ul> <div data-bbox="220 350 1169 412" style="border: 1px solid black; background-color: #ffffcc; padding: 5px;"> <p> <b>You can select upper case, lower case or special characters by selecting the B option.</b></p> </div> <ul style="list-style-type: none"> <li>• Select the <b>C</b> option to correct the entry.</li> </ul> <p>Once the message is complete:</p> <ul style="list-style-type: none"> <li>• Rotate the control to select OK.</li> <li>• Press on the control to validate.</li> </ul>	 	<b>V</b>
	<p>A window opens. You can view the content of your SMS.</p> <ul style="list-style-type: none"> <li>• Rotate the control to select OK.</li> <li>• Press on the control to validate.</li> </ul> <ul style="list-style-type: none"> <li>• Compose the number of your correspondent on the alphanumeric keypad, select a file in your directory or access the log of calls.</li> <li>• Rotate the control to select the <b>D</b> option.</li> <li>• Press on the control to validate. The message is sent.</li> </ul> <div data-bbox="220 779 1169 838" style="border: 1px solid black; background-color: #ffffcc; padding: 5px;"> <p> <b>You can defer sending the SMS by storing it E.</b></p> </div>		

#### On receiving an SMS

A sound signal and a superimposed window announce the arrival of a new SMS:

- Select YES to read the SMS.
- Select NO to store the SMS without reading it.

You can reply directly to an SMS or record the number of the sender.

# TELEPHONE TELEMATIC SERVICES

V



## CITROËN EMERGENCY

To benefit from the localised emergency service with vehicle location, you have:

- to have signed the general conditions of the service stated on your vehicle order form, or have signed the specific CITROËN Emergency Contract,
- to have made an initial call to the CITROËN Emergency service.

To initialise this service:

- press on the SOS button, with the vehicle stationary and parked in the open air in an area covered by your mobile telephone operator,
- be prepared to refer to your registration document,
- specify to the operator that you are making a "CITROËN Emergency service initialisation" call.

### When should you use this service ?

In an emergency situation (accident with injuries, assault, etc.).

### How to access this service ?

Press on the SOS button of your NaviDrive. You are put in contact with our specialised assistance platform. An operator will rapidly assess the situation and if necessary send help to the spot.

Your vehicle is automatically located thanks to the GPS function of your NaviDrive.



**Any call to this service must be motivated by an actual situation of serious emergency.**

### Automatic triggering of the emergency call

If there is a deployment of the pyrotechnic components on your vehicle, the NaviDrive will automatically transmit an emergency call to our specialised assistance platform (given no atmospheric, topographical or technical restrictions in the country you are in, as stipulated in the general conditions of the CITROËN Emergency service).

Should there be no response from the persons present in the vehicle, assistance will systematically be sent to the location of the incident. To gain time, your vehicle is located automatically thanks to the GPS function of the NaviDrive system.

**Note:** In the absence of a subscription to the CITROËN Emergency service or if there is no service in the country concerned, the SOS button is set to trigger a call to 112, a unique number reserved for emergency calls by the European GSM network. However, you will not then be geographically located. Depending on country, the call to 112 can be made without the need for a SIM card to be present in the system.



**If you have made an error, to cancel the call being made, press on the SOS button for 8 seconds. You have 6 seconds to cancel.**



**To be able to activate this service and in order to be aware of the detailed conditions for its use and operation, refer to the general conditions of the CITROËN Emergency service.**

**This service is only accessible if there is a subscription to the CITROËN Emergency service and is dependent on availability.**

**At the end of 2006, the service is available in France, Germany, Italy, Benelux, Spain and Portugal. The service is due to be extended to other countries, details of which can be obtained from a member of the CITROËN network.**



### HOW DOES THE CITROËN EMERGENCY SERVICE OPERATE ABROAD ?

**If the service is available in the country you are travelling to, the emergency call will be connected and an operator will respond in the language of your country (provided the operator of the SIM card inserted in the NaviDrive is indeed that of your country).**

# TELEPHONE

## TELEMATIC SERVICES



### CITROËN ASSISTANCE

#### When should you use this service ?

If your vehicle malfunctions (mechanical breakdown), this service puts you in contact with our CITROËN Assistance platform to request a recovery vehicle.

**Note:** While making an assistance call, it is impossible to make other calls apart from an emergency call.

#### How to access this service ?

- Keep the CITROËN button pressed.

Or

- Press button CITROËN.
- Select the CITROËN Assistance menu.
- Validate.



Provided you have subscribed to the CITROËN Emergency service and the service is available in your country, our assistance vehicles will easily be able to locate your vehicle and check your position with you.

This service can only be accessed if there is a subscription to the CITROËN Assistance service, subject to availability in the country concerned.

### CITROËN ON LINE

#### When should you use this service ?

CITROËN On Line puts you in contact with specialised operators who can answer questions about use of your NaviDrive and the associated services offered by the manufacturer and its dealer networks.

#### How to access this service ?

- Press button CITROËN.
- Select the CITROËN On Line menu.
- Validate.



This service operates only in France from end 2006.



The reserve battery enables you to make an emergency call even if the vehicle battery is disconnected.

The battery has a life of 4 years. It must be disposed of by a specialist operator, never thrown into the public refuse.

It is essential to be familiar with, and comply with, the legislation in force.

### NAVIDRIVE SERVICES

#### When should you use this service ?

This menu gives you access to the basket of telematic services offered by CITROËN (construction of an optimised itinerary, sending of a destination, search for a point of interest, a restaurant, search for an individual or professional in directory enquiries, etc.) depending on availability in the country concerned and on there being a subscription to the services.

#### How to access this service ?

- Press button CITROËN.
- Select the menu for NaviDrive Services.
- Validate.



The NaviDrive Services symbol will only appear if there is a subscription to the services and provided they are available.

### MESSAGES RECEIVED

To read the messages relating to the benefits offered by your specific Service Contract.



Subject to a subscription to the services and to availability in the country concerned.

V

# CONFIGURATION

## ACCESSING THE MENU - STRUCTURE

### WHAT IS THE CONFIGURATION MENU ?


VI The Configuration menu enables you to programme your NaviDrive as well as certain functions of your vehicle.

### HOW TO ACCESS THE CONFIGURATION MENU ?



- Press button MENU.
- Rotate the control to select the Configuration icon.
- Press on the control to validate.

### WHAT ARE THE FUNCTIONS OF THE CONFIGURATION MENU ?

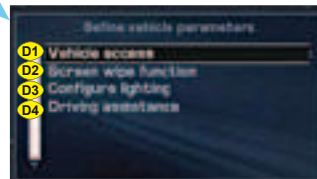

#### A CONFIGURING THE DISPLAY OF YOUR NAVIDRIVE

- A1** Choose the colour of the display.
- A2** Adjust the brightness of the display.
- A3** Adjust the date and the time and define the format 12H or 24H.
- A4** Choose system of measurement: metric or imperial.

#### B CONFIGURE THE VOICE OF YOUR NAVIDRIVE

- B1** Activate or deactivate the voice commands.
- B2** Choose a feminine voice or a masculine voice and adjust the voice synthesiser volume.
- B3** Activate or deactivate the audio/video auxiliary input.

#### C CHOOSE THE LANGUAGE OF THE VOICE SYNTHESISER AND OF THE DISPLAY







#### D DEFINE THE VEHICLE PARAMETERS (ACCORDING TO EQUIPMENT)

- D1** To select unlocking of all the doors or only that of the driver's door.
- D2** Activate or deactivate the automatic triggering of the rear wiper when you engage reverse gear.
- D3** Choose the duration for guide-me-home lighting and activate or deactivate the directional headlamps.
- D4** Activate or deactivate the automatic engagement of the electric parking brake and access the configuration button.

# CONFIGURATION

## ADJUSTING THE DATE AND THE TIME

### HOW TO ADJUST THE DATE AND THE TIME ?

	<p>In the configuration menu:</p> <ul style="list-style-type: none"> <li>• Rotate the control to select the menu <b>A</b>.</li> <li>• Press on the control to validate.</li> </ul>	
	<ul style="list-style-type: none"> <li>• Rotate the control to select the menu <b>B</b>.</li> <li>• Press on the control to validate.</li> </ul>	
	<p>Rotate the control to select a field:</p> <ul style="list-style-type: none"> <li>- <b>C</b> for the day</li> <li>- <b>D</b> for the month</li> <li>- <b>E</b> for the year</li> <li>- <b>F</b> for the time.</li> </ul> <ul style="list-style-type: none"> <li>• Press on the control to validate.</li> <li>• Rotate the control or use the alphanumeric keypad to select the digits that make up the date and the time.</li> <li>• Press on the control to validate each field.</li> </ul>	
	<p>Rotate the control to select:</p> <ul style="list-style-type: none"> <li>- <b>G</b> for 12 hour mode.</li> <li>- <b>H</b> for 24 hour mode.</li> <li>- <b>I</b> for an automatic adjustment of minutes thanks to GPS.</li> </ul> <ul style="list-style-type: none"> <li>• Press on the control to validate.</li> </ul>	




# VEHICLE DIAGNOSIS MENU STRUCTURE

## WHAT IS THE VEHICLE DIAGNOSIS MENU ?


VII

The vehicle diagnosis menu accesses the latest alerts that have been signalled as well as the status of the various functions on the vehicle.

## HOW TO ACCESS THE VEHICLE DIAGNOSIS MENU ?

	<ul style="list-style-type: none"><li>• Press button MENU.</li></ul>	
	<ul style="list-style-type: none"><li>• Rotate the control to select the Vehicle Diagnosis icon A.</li><li>• Press on the control to validate.</li></ul>	

## WHAT ARE THE FUNCTIONS OF THE VEHICLE DIAGNOSIS MENU ?

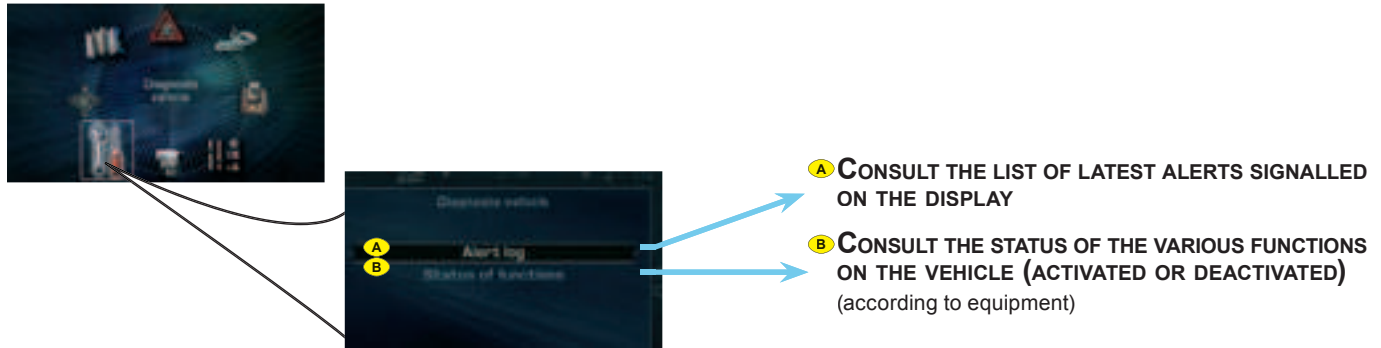

**A** CONSULT THE LIST OF LATEST ALERTS SIGNALLED ON THE DISPLAY

**B** CONSULT THE STATUS OF THE VARIOUS FUNCTIONS ON THE VEHICLE (ACTIVATED OR DEACTIVATED) (according to equipment)




# VIDEO

## ACCESSING THE MENU - STRUCTURE


### WHAT IS THE VIDEO MENU ?

The Video menu comprises the functions for adjusting the video on your NaviDrive.

### HOW TO ACCESS THE VIDEO MENU ?

	<ul style="list-style-type: none"><li>• Press button MENU.</li></ul>	
	<ul style="list-style-type: none"><li>• Rotate the control to select the Video icon <b>A</b>.</li><li>• Press on the control to validate.</li></ul>	

### WHAT ARE THE FUNCTIONS OF THE VIDEO MENU ?

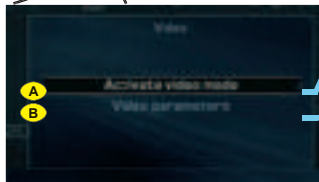

#### **A** ACTIVATING OR DEACTIVATING VIDEO MODE



If you have equipment connected on the audio/video sockets, activation of video mode cuts the audio source currently being listened to. Press on button SOURCE to reactivate any other audio source.

To view the images, the equipment has to emit a signal and the vehicle must be stationary. While the vehicle is in motion, only the sound is available.

#### **B** SETTING THE VIDEO PARAMETERS

- B1** Select a display format (16/9 or 4/3).
- B2** Adjust the brightness of the display.
- B3** Adjust the colour on the display.
- B4** Adjust the contrast on the display.



To use this source, activate the video mode. The video can be used if the vehicle speed is less than 5 km/h.



# FREQUENTLY-ASKED QUESTIONS

The table below brings together the answers to the questions that are the most frequently asked.

QUESTIONS	ANSWERS	SOLUTIONS
There is a discrepancy in sound quality between the different audio sources (radio, CD, CD changer etc.).	To achieve an optimum listening quality, the audio adjustments (Volume, Bass, Treble, Ambiance, Loudness) can be adapted to each of the different sound sources, which can produce audible shifts when you change the source (radio, CD, CD changer etc.).	Check that the AUDIO adjustments (Volume, Bass, Treble, Ambiance and Loudness) are adapted to your wishes for each of the audio sources.
The CD immediately ejects.	The CD is the wrong way up, is unplayable, does not contain audio data or contains an audio format that the radio cannot play back.	Check that you have inserted the CD the right way up in the CD player.
		Check the condition of the CD: the CD cannot be played back if it is too damaged.
		Check the contents if it is a burnt CD: refer to the advice given in the chapter on Audio System.
		For reasons of poor quality, some burnt CDs will not be played back by the audio system.
		The CD changer does not play back DVDs.
The CD changer does not play back MP3 CDs.		
The CD player sound is downgraded.	The CD is scratched or of poor quality.	Insert only CDs of good quality and keep them in good condition.
The pre-set stations do not work (no sound, 87,5 Mhz is displayed, etc.).	The waveband selected is not the correct one.	Press on the BAND button to retrieve the waveband (AM, FM1, FM2, FMAST) where the stations are memorised.
Traffic Announcements (TA) is displayed. I do not receive any traffic information or public announcements.	The particular radio station is not in the regional traffic information network.	Change to a radio station that does broadcast traffic information.

# FREQUENTLY-ASKED QUESTIONS

QUESTIONS	ANSWERS	SOLUTIONS
<p>The reception quality of the radio station being listened to gradually deteriorates.</p>	<p>The vehicle is too distant from the transmitter, or no transmitter is present in the geographical area you are passing through.</p>	<p>Activate the RDS function to allow the system to check whether a more powerful transmitter is to be found in the geographical area.</p>
	<p>The environment (hills, high buildings, tunnels, underground car parks, etc.) is blocking reception, even in RDS mode.</p>	<p>This phenomenon is normal and does not imply anything wrong with the radio.</p>
	<p>The aerial is absent or has been damaged (for example after going through a car wash or in an underground car park).</p>	<p>Have the aerial checked by a CITROËN dealer.</p>
<p>When the engine is not running, the radio stops after a few minutes.</p>	<p>When the engine is switched off, the working time for the radio depends on the battery charge. The interruption is normal: the radio goes into economy mode, cutting off in order to save the vehicle's battery.</p>	<p>You have to start the engine so as to increase the battery charge.</p>
<p>The message "the audio system is overheating" appears on the screen.</p>	<p>In order to protect the audio equipment in excessive ambient temperatures, the radio goes into an automatic thermic protection mode which results in a reduction in sound volume or stopping of the CD player.</p>	<p>Switch off the audio system for a few minutes in order to allow the system to cool down.</p>
<p>Why is one not informed in real time of a hold-up on the route even though the option for guidance by "traffic info" is activated ?</p>	<p>When you start up, the system takes a few minutes to capture the traffic information via RDS-TMC.</p>	<p>Wait for the traffic information to be safely received (pictogrammes displayed on the map) and make sure that you use the major arterial roads to have "informed" navigation.</p>
	<p>Only the major arterial roads (motorways and some dual carriageways) are featured in RDS-TMC traffic information).</p>	
	<p>It may happen that a hold-up is not reported by the traffic info provider.</p>	
<p>Why is a diversion not suggested when I have selected traffic info ?</p>	<p>Do not confuse the "traffic info" guidance option which can suggest a diversion (the "divert" button appears in the window) with the menu "Display of traffic messages" or "Reading of traffic messages" which affect only the display without recalculating the itinerary (no "divert" button in the window).</p>	<p>To have "informed" navigation with the detour proposition, it is essential to activate the guidance option with "traffic info".</p>